 


# **morphy richards®**

**Smart Ideas for Your Life**

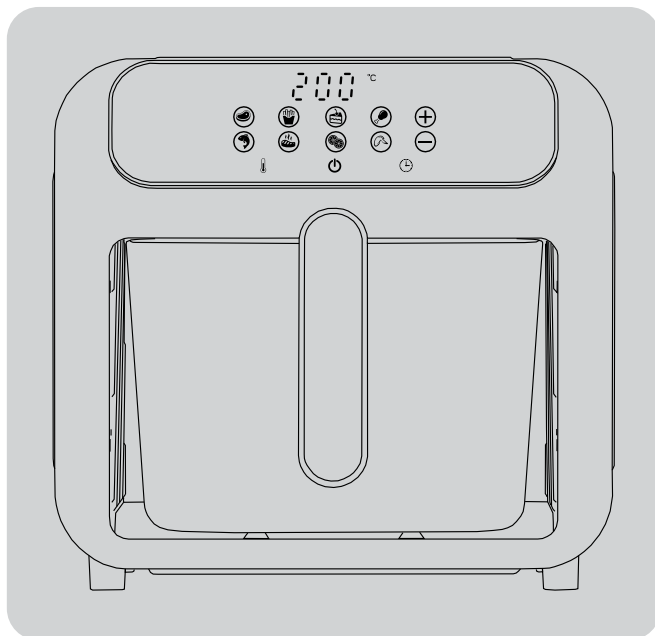

## **Digital 5.5L Glass Bowl Air Fryer**



**Model: MRAFG55BK**

**Read these instructions carefully before  
using this appliance for the first time**

For product hints and tips plus more join us at

[www.morphyrichards.com.au](http://www.morphyrichards.com.au)



facebook.com/MorphyRichardsAUS



instagram.com/morphyrichardsau

## IMPORTANT SAFETY INSTRUCTIONS

**Please read these instructions carefully before using the product.**

The following safety instructions are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance before use to make sure everything is intact to ensure safe operation. If you find any damage, please contact the place of purchase. Please note modifications or alterations to the appliance are not allowed for your safety concern.

- **WARNING:** Do not touch hot surfaces. Use the bowl handles.
- **WARNING:** Misuse of appliance could cause potential injury.
- **WARNING:** The device is not suitable to be installed in an area where it can come in contact with water.
- **WARNING:** Do not clean the device by spraying water on it. Refer to the Care & Cleaning section on page 17.
- **WARNING:** In the event of any malfunction or damage in one of the parts. Do not repair the device by yourself, please contact the Customer Care Centre or return to the place of purchase.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be operating this appliance under supervision to avoid injuries.
- This appliance is intended to be used in household and similar applications such as: farm houses, by clients in hotels, motels and other residential type environments, and bed and breakfast type environments. It is suitable for use in staff kitchen areas in shops, offices and other working environments.

## IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Do not plug in or operate the appliance with wet hands.
- The door or the outer surface may get hot when the appliance is operating.
- If the appliance falls into water, remove the plug from the wall socket immediately before touching the appliance. Do not use the appliance any more.
- Switch off the appliance and remove the plug from the wall socket in the event of a malfunction during use, and before cleaning the appliance, fitting or removing an accessory, or storing the appliance after use.
- Never leave the appliance unattended when in use.
- Never immerse the housing, the power cord or the plug in water or other liquids.
- Make sure that the appliance has sufficient ventilation whilst in use.
- Never move the appliance when it is switched on or is still hot. Switch off the appliance and wait until it has cooled down before moving it.
- Do not put too much food in the frying basket at one time.
- Do not fill the appliance with food during pre-heating.

## IMPORTANT SAFETY INSTRUCTIONS

### Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Do not place the appliance near a gas stove, kerosene stove, gas cooker or in any space with an open fire or in an environment with high temperature.
- Do not put the appliance on any metal platforms (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate while the cooktop is in use.
- The appliance needs space to allow heat to escape, thereby preventing the risk of fire. Make sure that the appliance has sufficient space around it, and does not come in contact with flammable material. The appliance must not be covered. Make sure the air vents are not covered or blocked.
- Never use the appliance outdoors.
- This appliance is only intended for domestic use.

## IMPORTANT SAFETY INSTRUCTIONS

### Power cord

- **WARNING:** This appliance is NOT recommended for use with extension leads and/or power boards.
- Do not use the appliance if the plug or cord is damaged. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The power cord should reach from the socket to the appliance without straining the connections.
- Do not let the power cord hang over the edge of the worktop or open space where a child could reach it.
- Do not let the cord run across a cook top or hot area which might damage the cord.
- Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components caused by prolonged electrical connection.
- Make sure that the appliance, the power cord and plug do not make contact with water.

### Electrical requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply.



**CAUTION: HOT SURFACE**

 
**PLEASE BE AWARE OF HOT SURFACES**

**HANDLE WITH CARE**


# SPECIFICATIONS

|                            |                   |
|----------------------------|-------------------|
| Model:                     | MRAFG55BK         |
| Colour:                    | Black             |
| Rated Power:               | 1200W             |
| Rated Voltage & Frequency: | 220-240V~ 50/60Hz |
| Bowl Capacity:             | 5.5L              |
| Bowl Working Capacity:     | 4.8L              |
| Dimensions (L x W x H):    | 294 x 283 x 275mm |
| Net Weight:                | 5.1kg             |

# PRODUCT OVERVIEW

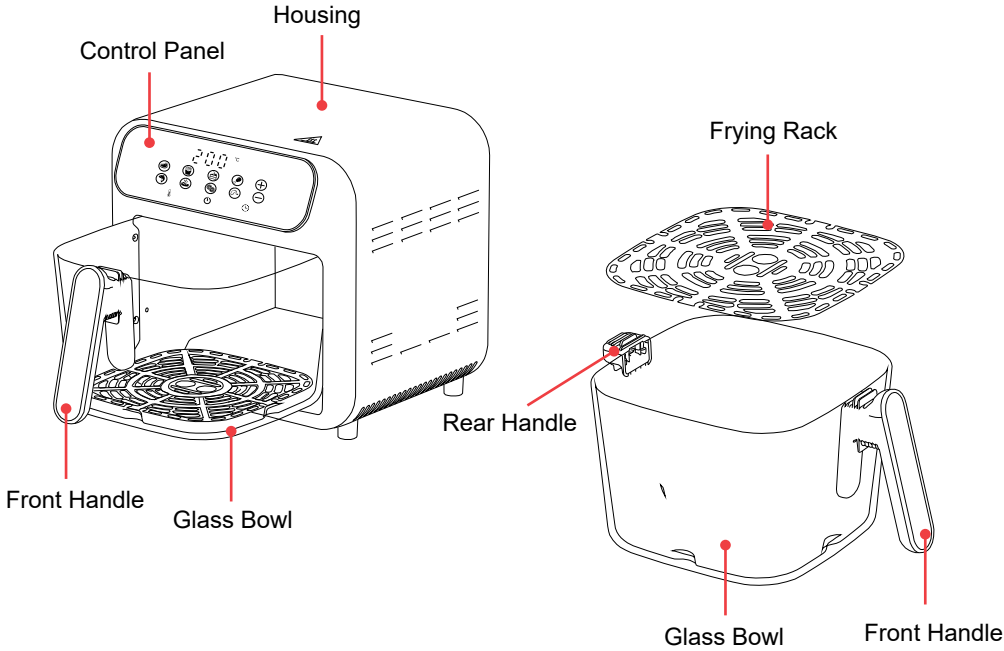

## CONTROL PANEL OVERVIEW

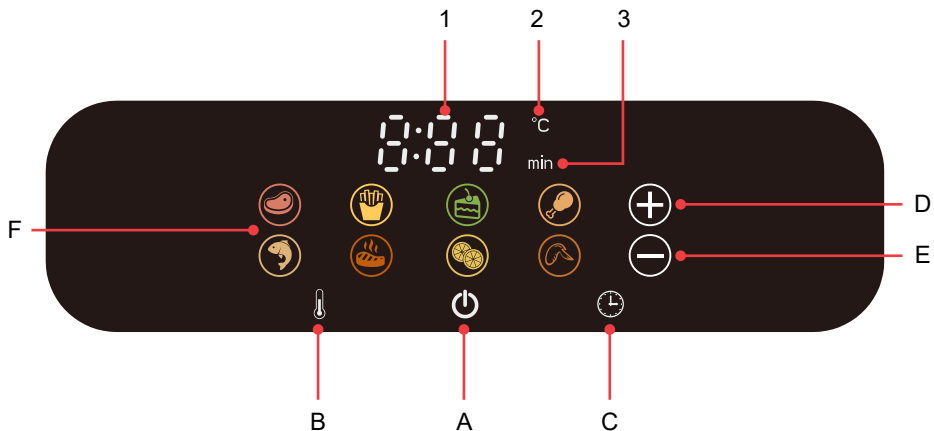 

### Touch Control Panel

- A - Power / Start / Pause Button
- B - Temperature Button
- C - Time Button
- D - Increase Temperature/Time Button
- E - Decrease Temperature/Time Button
- F - Preset Cooking Function Buttons

### LED Display Indicators

- 1 - Temperature / Time Display
- 2 - Temperature Symbol Icon (°C)
- 3 - Time Symbol Icon (minutes)

## BEFORE FIRST USE

- Remove all packaging materials.
- Remove any stickers or labels from the appliance. Do not remove the rating label on the bottom of the appliance.
- Clean the appliance thoroughly to remove any manufacturing residue. See Care & Cleaning section on page 17.

 
## OVERHEATING SAFEGUARD

- The air fryer comes with an overheating safeguard installed. The safeguard is activated once the temperature reaches its threshold. If this happens, you need to cool down the appliance through the following steps.
- Shut down the appliance and take the plug out of the socket.
- Allow ample time for the appliance to cool down.

## USING YOUR AIR FRYER

### Standby Mode


- Put the Plug into the power outlet. A beep will sound and the display display will illuminate and then show the Power Button (A).

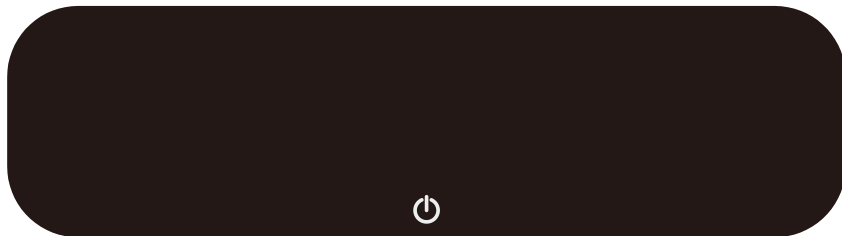

- Press the Power / Start / Pause Button (A) and the appliance will enter standby mode and is ready for the next operation.

## USING YOUR AIR FRYER

 - Press the Power / Start / Pause Button (A) and the appliance will enter standby mode and is ready for the next operation. The display will show the below screen.

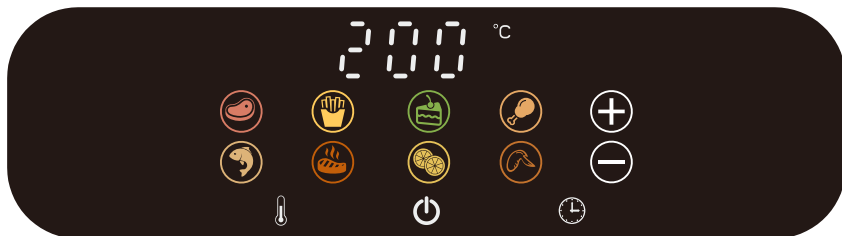


NOTE: If a button is not pressed for 60 seconds during the standby mode, the display will automatically revert to just show the Power Button again. See page 8.

### Quick Start

 - The air fryer is equipped with a default setting of 200°C and 10 min cooking time, under the standby mode.
- To use the quick start function, press the Power / Start / Pause Button (A). If the default settings are desired, you can also use the quick start to preheat the air fryer.
- Do not have any food in the glass bowl during preheating.

### Custom Operation

- During standby mode, press the Temperature Button (B) to enter the temperature setting.
- Press the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) to change the temperature.

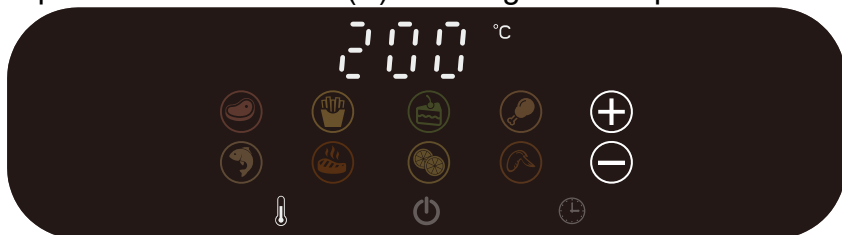

## USING YOUR AIR FRYER

### Custom Operation

 
- During standby mode, press the Time Button (C) to enter the time setting.
- Press the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) to change the time.



NOTE: For more detailed information on adjusting temperatures and times, see page 12.

### Preset Cooking Functions

- The air fryer is equipped with 8 preset cooking menus for specific food cooking selection. These menus correspond with colourful icons (F).
- Choose any of the desired 8 menus by pressing the icon on the display directly. After the menu is selected, the icon will flash.

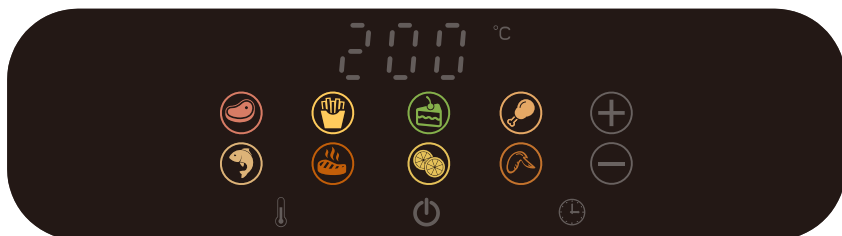

- After selecting the desired preset cooking menu, you can also use the Temperature Button (B) to enter the temperature setting and use Buttons (D) or (E) to increase or decrease the temperature.
- Use the Time Button (C) to enter the time setting, and use Buttons (D) or (E) to increase or decrease the time.

## USING YOUR AIR FRYER

### Preset Cooking Functions

NOTE: For more detailed information on adjusting temperatures and times, see page 12.

| Function Menu |                                                                                    | Default Settings | Temperature Range | Time Range | Comments          |
|---------------|------------------------------------------------------------------------------------|------------------|-------------------|------------|-------------------|
| Meat          |   | 200°C<br>15 min  | 40-200°C          | 1-60 min   |                   |
| French Fries  |   | 200°C<br>20 min  | 40-200°C          | 1-60 min   | Shake after 10min |
| Bake          |   | 160°C<br>30 min  | 40-200°C          | 1-60 min   |                   |
| Drumsticks    |   | 200°C<br>20 min  | 40-200°C          | 1-60 min   |                   |
| Fish          |   | 170°C<br>20 min  | 40-200°C          | 1-60 min   |                   |
| Steak         |   | 180°C<br>10 min  | 40-200°C          | 1-60 min   |                   |
| Dehydrate     |   | 70°C<br>4 hr     | 40-200°C          | 5 min-9 hr |                   |
| Wings         |  | 200°C<br>13 min  | 40-200°C          | 1-60 min   |                   |

### Shake Reminder

- The air fryer has a shake reminder function in the French Fries preset menu. When selecting the French Fries preset menu, after cooking for 10 minutes, 10 beeps will sound and the LED display will show “SHA” (SHAKE) to remind you to shake the fries inside of the bowl. This will ensure the chips are cooked evenly.



- Once the bowl is returned to the air fryer, the program will continue showing the remaining temperature and operating time alternately.

## USING YOUR AIR FRYER

### Temperature Adjustment

- During standby mode, or after selecting a preset cooking function menu, use the Temperature Button (B) to enter the temperature setting
- Press the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) to change the temperature.



- The temperature range for the air fryer ranges from 40°C to 200°C for customer operation and using the preset function menus.
- **CAUTION:** The temperature is adjustable in  $\pm 5^{\circ}\text{C}$  increments.
- Pressing & holding the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) changes the temperature faster.
- **CAUTION:** The temperature is adjustable during operation.

### Time Adjustment

- During standby mode, or after selecting a preset cooking function menu, use the Time Button (C) to enter the time setting.
- Press the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) to change the time.

 


- The time range for the air fryer ranges from 1 minute to 60 minutes for customer operation and the dehydrate menu has an adjustable time range from 5 minutes to 9 hours.
- **CAUTION:** The time is adjustable in  $\pm 1$  minute increments.
- Pressing & holding the Increase Temperature/Time Button (D) or Decrease Temperature/Time Button (E) changes the time faster.
- **CAUTION:** The time is adjustable during operation.

## USING YOUR AIR FRYER

### Starting & Pausing Operation

- After selecting a preset function and completing all required settings, press the Power / Start / Pause Button (A) to commence operation.
- During operation, if you need to pause cooking, press the Power / Start / Pause Button (A) to pause.
- The Power / Start / Pause icon will flash intermittently.
- Press the Power / Start / Pause Button (A) again to resume operation.
- During operation, the display will alternately show the temperature and time every 5 seconds.

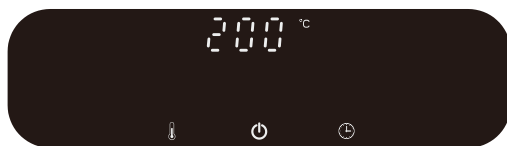

### Finishing Operation

- When the cooking time has finished, the appliance will beep 5 times.
- The display will show “End” and the Power Button will illuminate.



 
- If more cooking is required, press the Power / Start / Pause Button (A) to continue using the air fryer.
- The display will show the below screen and the process can begin again.



## USING YOUR AIR FRYER

### Finishing Operation (continued)

- If you need to cancel the cooking process at any time, you can press and hold the Power / Start / Pause Button (A) for 2 seconds
- The display will show Power / Start / Pause Button (A) only.

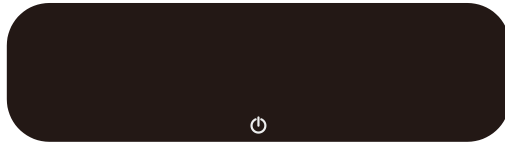

## QUARTZ HEATING ELEMENT

- The air fryer uses a quartz heating element, which produces rapid radiant heat. When heating, the heating element will illuminate the glass bowl and the air fryer will pause heating internally when the inside cooking temperature reaches a set value.
- The air fryer will continue heating when the temperature drops lower than the set value, so the light inside will alternate on and off.

NOTE: This is a normal function of the air fryer and is not a fault or an issue with the cooking process.

## MICRO SWITCH PROTECTION

- The air fryer comes with micro switch protection, which is a safeguard that activates once the basket is pulled out during the air fryer operation.
- At this point, the air fryer will stop heating, the fan will stop working, and the time pauses until the basket is pushed back securely into the housing.
- The air fryer will continue working and the time will resume countdown.

## COOL DOWN PROTECTION

- The air fryer comes with cool down protection. When the setting time finishes, the appliance will beep 5 times, the air fryer will stop heating, but the fan will continue to run for 30 seconds to cool down the interior and protect the electronic parts inside.
- **CAUTION:** The cool down protection will automatically start when the cooking process finishes. It may also happen when you switch off the appliance, as you may still hear the fan working after switching off. This is normal and is not a fault with the product.
- **CAUTION:** Do not unplug the air fryer when the cooling fan is still working. Let the appliance cool down until the fan stops automatically.

## FREQUENTLY ASKED QUESTIONS

| QUESTION                                                                                              | ANSWER                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Can I prepare foods other than fried dishes with my Air fryer?                                        | You can prepare a variety of dishes including steaks, chops, burgers and baked goods.                                                                                                                                                                                                                       |
| Is the air fryer good for making or reheating soups and sauces?                                       | Never cook or reheat liquids in the Air fryer.                                                                                                                                                                                                                                                              |
| Is it possible to shut off the unit at any time?                                                      | Press the power button once or pull out the glass basket.                                                                                                                                                                                                                                                   |
| What do I do if the unit shuts down while cooking?                                                    | As a safety feature, the air fryer has an auto shut off device that prevents damage from overheating. Remove the basket and set it on a heat resistant surface.<br>Allow the Unit to cool down. Remove the power cord from the socket. Restart with the Power On Button after the air fryer is cooled down. |
| Does the unit need time to heat up?                                                                   | If you are cooking from a "cold start", add 3 minutes to the cooking time to compensate. Or you can select a preset function and set the air fryer to work at 190°C, 5mins before you start cooking.                                                                                                        |
| Is the air fryer dishwasher safe?                                                                     | Only the accessories are dishwasher safe. The unit itself containing the heating coil and electronics should never be submersed in liquid of any kind or cleaned with anything more than a moist cloth or non-abrasive sponge with a small amount of mild detergent.                                        |
| Why does the light in the air fryer go on and off?                                                    | When heating, the quartz heating element will pause heating internally when the inside cooking temperature reaches a set value. It will resume heating when the temperature drops below the set value. This is not a fault.                                                                                 |
| What happens if the unit still does not work after I have tried all the trouble-shooting suggestions? | Never attempt a home repair. Contact the Customer Care Center and follow the procedures set by the warranty. Failure to do so could render your warranty null and void. Return to your place of purchase, if within the warranty period.                                                                    |

## CARE & CLEANING

- Clean the appliance and its loose parts thoroughly after each use.
- Switch off the air fryer and take the plug out of the wall outlet.
- Let the appliance cool down.
- Take all the accessories out of the appliance.
- Remove remaining food parts by wiping them off with absorbent paper towels.
- Clean the accessories thoroughly with hot water, dishwashing soap and a non-scourer sponge.
- The accessories can also be cleaned in a dishwasher. Dry them thoroughly after cleaning.
- Clean the housing and interior cavity with a moist towel, and if needed, use dishwashing soap.
- Dry thoroughly after cleaning.
- Reassemble the parts.
- Store the appliance in a dry place.
- **CAUTION:** Verify that the appliance is not connected to the power supply before cleaning.
- **CAUTION:** Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- **CAUTION:** Never immerse the heating element unit in water or another liquid and never place it under flowing water.

## TROUBLESHOOTING

| PROBLEM                                                   | SUGGESTED SOLUTIONS                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The air fryer does not work                               | <ul style="list-style-type: none"> <li>Check the appliance is plugged in.</li> <li>Press the Power button, select a Preset menu or select Time and Temperature. Press the Start/Pause button and cooking should begin.</li> </ul>                                                                                                         |
| Food not cooked                                           | <ul style="list-style-type: none"> <li>Is there too much food in the glass bowl?</li> <li>If so, use smaller batches of food.</li> <li>Has the temperature been set too low?</li> <li>If so, increase the temperature - see page 12.</li> </ul>                                                                                           |
| Food is not crispy                                        | <ul style="list-style-type: none"> <li>Are ingredients being used meant for a deep fryer?</li> <li>Use only oven ingredients or lightly brush some oil onto the food for a crispy result.</li> </ul>                                                                                                                                      |
| White smoke coming from the unit                          | <ul style="list-style-type: none"> <li>Are greasy ingredients being used?</li> <li>Oil will release from greasy ingredients and produce smoke.</li> <li>Accessories may not be clean enough to use.</li> </ul>                                                                                                                            |
| French Fries are not cooked evenly                        | <ul style="list-style-type: none"> <li>Rinse fresh, firm potatoes of any starch.</li> <li>Add a little oil to dry potatoes.</li> <li>Make sure you have shaken the glass bowl during the French Fries preset cooking menu. See page 11.</li> </ul>                                                                                        |
| The light in the air fryer goes on and off intermittently | <ul style="list-style-type: none"> <li>When heating, the quartz heating element will pause heating internally when the inside cooking temperature reaches a set value.</li> <li>It will resume heating when the temperature drops below the set value.</li> <li>This is not a fault and the unit is meant to perform this way.</li> </ul> |
| Error Code - E1                                           | <ul style="list-style-type: none"> <li>Indicates a broken circuit of the thermal sensor. Contact Customer Care Centre.</li> </ul>                                                                                                                                                                                                         |
| Error Code - E2                                           | <ul style="list-style-type: none"> <li>Indicates a short circuit of the thermal sensor or PCB. Contact Customer Care Centre.</li> </ul>                                                                                                                                                                                                   |

## MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate.

Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

## REGISTER YOUR PRODUCT

By having your product registered on the Morphy Richards customer portal, your details can be accessed quickly in the event that there is an issue with your product. Make it quick and easy to get the help you need, if you ever need it.



## WARRANTY

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd  
8 Lakeview Drive,  
Scoresby 3179, Victoria  
Australia  
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd  
1 Ron Driver Place, East Tamaki,  
Auckland 2013  
New Zealand  
Ph: 0800 666 2824



Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and wellbeing.

Expanded Polystyrene Disposal: The websites listed below can assist in the responsible disposal of EPS (Expanded Polystyrene) packaging products.

Australia: <https://recyclingnearyou.com.au/polystyrene> and/or <http://epsa.org.au>

New Zealand: <https://greenbusinesshq.com/epsrecycling> and/or

<https://www.plastics.org.nz/environment/recycling-disposal/eps-recycling>

**morphy richards**

Glen Dimplex Australia Pty Ltd

8 Lakeview Drive

Scoresby VIC 3179

Phone: 1300 556 816

Email: [seasonal.support@glendimplex.com.au](mailto:seasonal.support@glendimplex.com.au)

Web: [www.morphyrichards.com.au](http://www.morphyrichards.com.au)

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.

MRAFG55BK\_IM\_v2