

metrofires

540 | 720 FIRE PIT

Metro Fire Pit installation and operation manual

Important installation information.....	2	Metro Fire Pit operation.....	3
Metro Fire Pit.....	2	Optional cooking kit and accessories	4
Construction and maintenance.....	3	Warranty	4

WARNING! Important Information

WE HIGHLY RECOMMEND YOU READ THIS ENTIRE MANUAL AS INCORRECT OPERATION, MISUSE AND/OR LACK OF MAINTENANCE WILL VOID THE WARRANTY

- The Metro Fire Pit is designed for **OUTDOOR USE ONLY**. **DO NOT** use indoors, in a garage or enclosed area
- **DO NOT** install on a combustible deck or surface without a non-combustible floor protector or the Metro Deck Protector
- **DO NOT** use flammable liquids or aerosols in the vicinity of this appliance when it is operating
- **DO NOT** use flammable liquids or aerosols to start or rekindle the fire OR store fuel within the specified clearances
- Not for use by children or impaired persons. Keep children away from the Metro Fire Pit at all times during operation
- Any modification of the appliance that has not been approved in writing by the manufacturer is considered to be in breach of the warranty conditions

CAUTION! Important Information

- The Metro Fire Pit must be installed and operated in accordance with the detail contained within this manual
- **DO NOT** burn driftwood, treated or unseasoned fuel (wet). The use of most types of preservative treated wood as fuel can be hazardous and will damage your appliance
- **DO NOT** install or use a Metro Fire Pit if there is any sign of visible damage to the product
- **DO NOT** overload your Metro Fire Pit with fuel. If the fuel load covers all the air holes in the Metro Fire Pit you will lose the air flow that assists with the smokeless experience
- **DO NOT** attempt to move the Metro Fire Pit until it has cooled completely. Surfaces will remain hot for some time
- **DO NOT** leave the Metro Fire Pit unattended during operation
- **DO NOT** empty ash into a combustible container
- This appliance must be regularly maintained
- Use authorised Metro replacement parts only. The use of unauthorised parts may void the warranty

METRO FIRE PIT

Congratulations on your Metro Fire Pit purchase. You are about to experience the feeling of clean burning outdoor warmth with less smoke and more versatility than traditional outdoor fire pits.

The Metro Fire Pit adds a stunning feature to your outdoor environment. When purchasing the optional Cooking Kit, it becomes a multi-functional entertainer, providing you with the excitement of live fire cooking through BBQ, grill, casserole, and rotisserie methods.

The Metro Fire Pit is supplied virtually fully assembled. Packed separately are the burn tray plates and poker tool handle, and inside the Metro Fire Pit you'll find the poker tool head and bolt bag for assembly.

Remove the two tek screws located at the base of the Metro Fire Pit which secure it to the wooden pallet.

 
Please take particular note of the following prior to use:

- Ensure you fully understand the contents of this manual. Correct installation is critical to the safe operation and performance of your Metro Fire Pit.
- Always exercise caution and common sense as you would with any live fire, always follow the local council fire use regulations for your region. Maintain awareness of children and pets around hot surfaces.
- The Metro Fire Pits weigh 38kgs (540) and 62kgs (720). **DO NOT** lift the Metro Fire Pit by yourself. We recommend a two person lift.
- Ensure you remove all traces of the PVC protective wrap from the stainless steel components and Metro Fire Pit prior to first use.
- The Corten steel black paint finish is not fully cured until your first fire. Please take care handling your Metro Fire Pit so as not to damage the coating. Use a suitably rated high temperature paint aerosol for touch ups and any surface renovations required.
- Only burn wood or charcoal in your Metro Fire Pit.
- Ensure all 4 burn tray plates are in place before lighting and the Metro Fire Pit is placed on a non-combustible surface or fitted with the Metro Deck Protector. The Metro Fire Pit must be located a minimum of 2.5 metres away from any combustible wall or surface with no trees, roofing, soffits, awnings or other overhanging the Fire Pit.

Note: The Metro Fire Pit must sit on a level non-combustible surface such as tiles, concrete, brick or the Metro Deck Protector before lighting.

Metro Fire Pit components

- 1x Metro Fire Pit
- 1x Metro Fire Pit stainless steel lid
- 4x Burn tray plates
- 1x Fire rake (assembly required)

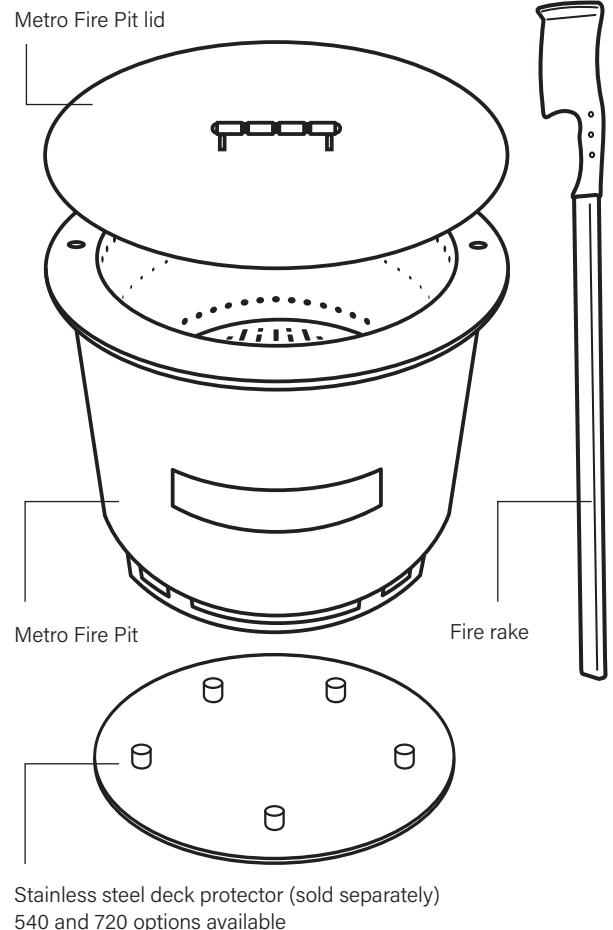

CONSTRUCTION AND MAINTENANCE

The Metro Fire Pit is constructed from stainless steel or Corten steel (painted black) and designed to withstand the intense heat during operation and the year-round outdoor elements of New Zealand.

Stainless steel finish

 
You will find that after your first burn the outer surface will gain a patina which is a slight copper colouring of the stainless steel due to the heat. This is a natural result of the products reaction to heat.

We recommend the use of a stainless steel cleaning product and a soft cloth for maintenance of the stainless steel finish.


Corten steel (painted black) finish

Corten is a weathering steel designed to patina. The Corten steel is painted with metallic black high temperature paint and will require periodic maintenance/repainting to keep this finish looking its best. The paint finish is not fully cured until after your first fire.

Use a suitably rated high temperature paint aerosol for touch ups and any surface renovations required. Clean with a dry soft cloth only.

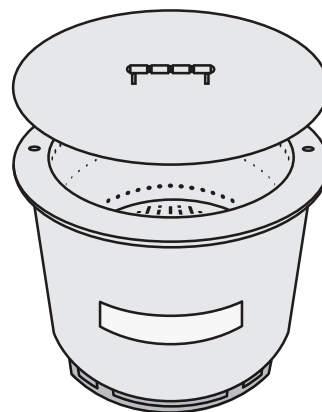

Stainless steel Metro Fire Pit

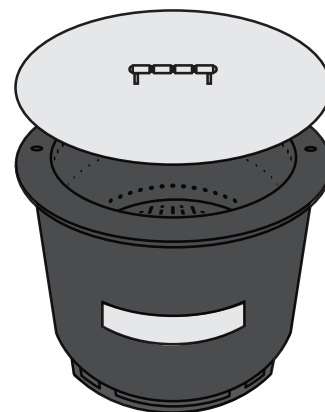 

Corten steel Metro Fire Pit

METRO FIRE PIT OPERATION

Ensure all 4 burn tray plates are in place before lighting and the Metro Fire Pit is placed on a non-combustible surface or fitted with the Metro Deck Protector. The Metro Fire Pit must be located a minimum of 2.5 metres away from any combustible wall or surface with no trees, roofing, soffits, awnings or other overhanging the Fire Pit.

1. Place two medium logs of wood placed parallel to each other. **Fig 1.**
2. Build up a stack of kindling in a hash shape on top of the logs. **Fig 2.**
3. Use a form of fire starter and drop this down the middle of the kindling stack. Use a long match or gas lighter to ignite the fire starter, starting the burn from the bottom up. You will experience some smoke at this stage before the fire reaches a higher burn temperature. **Fig 3.**
4. Once a good fire has established, add more larger logs on top of the fire placing them around the perimeter of the Metro Fire Pit to get an even distribution of heat. **Fig 4.**

Allow this to burn and as the heat increases the smoke level will decrease providing you with a warm radiant fire with minimal smoke. Continue to do this until your fire is at the desired heat output.

After several uses you will find ash build up in your Metro Fire Pit. As a matter of care, once cold, it is best to remove this from time to time to maintain correct air flow efficiency within the Metro Fire Pit.

You can extinguish your Metro Fire Pit with water however this will cause the ash to run off onto nearby surfaces. Placing the lid over the Metro Fire Pit whilst it is still burning will cause your fire to smoke and may damage the lid. It is therefore recommended to let the fire burn out completely and cool down before placing the lid and/or canvas cover back on.

If you wish to store your Metro Fire Pit indoors after use, please ensure you fully remove all ashes and all surfaces are completely cool before storage.

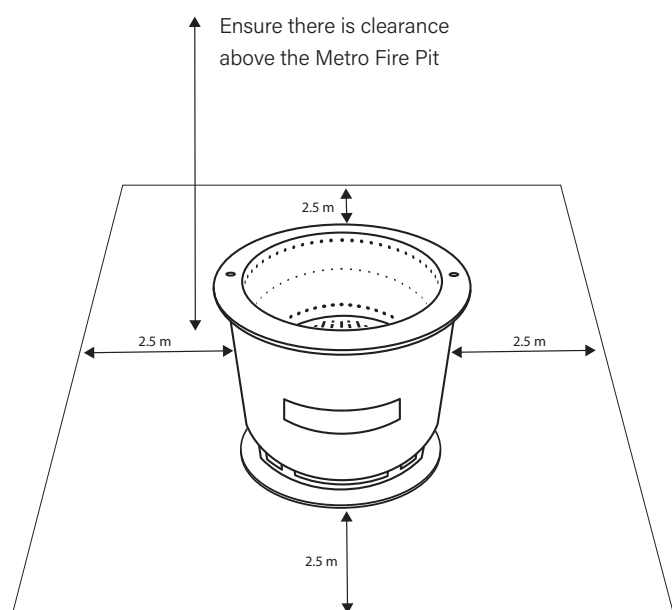 


Fig 1.

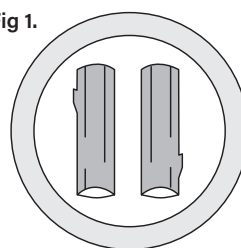 


Fig 2.

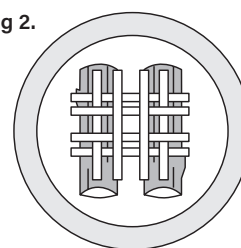 


Fig 3.


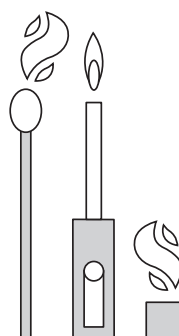 


Fig 4.

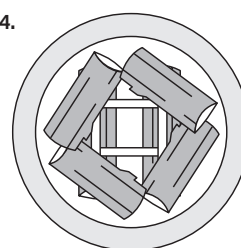 

OPTIONAL COOKING KIT / ACCESSORIES

The Metro Fire Pit is purpose built for outdoor entertaining. With the addition of the optional Cooking Kit and other accessories, you will gain an exciting range of live fire cooking methods such as BBQ, grill, smoke, casserole and rotisserie.

Metro Cooking Kits are available for both size Metro Fire Pits and can be purchased from your local Metro Fires retailer.

Cooking kit components: (540 and 720 options available)

- 1 x Cooking grill
- 1 x Cast iron smash plate
- 2 x Hangers
- 2 x Knurled locking handles
- Leather fire mitts (pair)
- 4 x Meat hooks
- 2 x Posts

Optional accessories

- Battery powered rotisserie (SKU 290-0007)
- 540 Cast iron smash plate (SKU 290-0008)
- 720 Cast iron smash plate (SKU 290-0009)
- Knurled locking handle (SKU 290-0005)
- Stainless steel BBQ basket (560-0210)
- 7.8 L Cast iron potjie (SKU 290-0006)
- 540 Deck protector (SKU 350-3510)
- 720 Deck protector (SKU 350-3515)
- 540 Fire Pit cover (SKU 290-0010)
- 720 Fire Pit cover (SKU 290-0011)



WARRANTY

Metro Warranty

(NZ Consumer laws apply to this warranty)

Pioneer Manufacturing Limited (Pioneer) warrants the Metro Fire Pit against defective materials and workmanship which would render it unfit for normal domestic use, from the date of purchase by the original consumer, for a period of 3 years.

All accessories are warranted for a period of 12 months from the date of original purchase for normal domestic use against defective materials and workmanship. Please ensure you retain your proof of purchase/receipt for the appliance and any accessories you purchase.

Warranty Conditions

- The Metro Fire Pit must be installed and used in a domestic outdoor setting only and operated strictly in accordance with this manual
- This warranty covers Metro Fire Pit like for like replacement or repair at the manufacturer's discretion but excludes freight, travel, installation, labour and/or any other associated costs
- Pioneer or their agents are not liable for any loss or expense direct or indirect arising from the failure of any part or operation of the Metro Fire Pit
- Operation of this Metro Fire Pit in violation of the warnings in this operation and installation manual will void this warranty
- It is critical the Metro Fire Pit not be operated with worn, faulty or missing burn tray plates
- A claim under this warranty should be directed to the retailer who supplied the Metro Fire Pit. If this is not possible, write directly to the manufacturer stating details of fault, model, dated proof of purchase and name of retailer purchased from.

Warranty Exclusions

(This manufacturer's warranty does not cover)

- Service calls which are not related to any defect in the product (for example: operational, installation or fuel issues)
- Defects caused by factors other than normal domestic use or use in accordance with the product's operation manual
- Defects caused through the product being operated in an 'over-fired' manner resulting in sections of the Metro Fire Pit operating excessively hot to the point that sections glow red.
- Defects and damage to the product caused by accident, neglect, misuse or act of God
- The cost of repairs carried out by non-authorised repairers or the cost of correcting such unauthorised repairs
- Required maintenance as set out in this manual
- Surface oxidation is not a warrantable issue for outdoor appliances. This includes any damage caused by abnormally corrosive environments (for example: coastal environments) and any rust damage, discoloration, or corrosion in any part of the Metro Fire Pit over the life of the appliance

Service under this manufacturer's warranty must be provided by a repairer authorised by Pioneer Manufacturing Ltd. Such service shall be provided during normal business hours.

metrofires.co.nz

Visit the Metro website to view the full product range, find your nearest Metro stockist or simply check out the latest specifications, installation requirements and technical data.