



metrofires

# 540 | 720 COOKING KIT

---

Cooking kit setup and operation

## COOKING KIT SETUP

### **WARNING! Important Information**

- The Metro Cooking Kit must be setup and operated in accordance with the detail below and instruction included within the Metro Fire Pit manual
- **DO NOT** attempt to fit or remove any cooking kit components without using the fire mitts provided. Cooking components and surfaces will remain hot for some time
- **DO NOT** leave the Metro Fire Pit unattended during operation

#### Cooking kit components:

- 1 x Cooking grill
- 1 x Cast iron smash plate
- 2 x Hangers
- 2 x Knurled locking handles
- Leather fire mitts (pair)
- 4 x Meat hooks
- 2 x Posts

The Metro Fire Pit is purpose built for outdoor entertaining. The addition of the cooking kit and other accessories, gives you an exciting range of live fire cooking methods such as BBQ, grill, smoke, casserole and rotisserie.

Once your Metro Fire Pit has reached the optimum temperature and burnt down to a low flame and/or good bed of embers, the two stainless steel posts can be inserted and locked into place by turning clockwise.

#### Cooking grill and hangers

The cooking grill and hangers can be fitted to the Metro Fire Pit posts at the desired height for cooking.

Lock the hangers into place on the posts by screwing the handle clockwise. Unscrew the handle slightly to adjust the hangers and cooking grill to cook food at different heights. Cook over hot coals or a low flame for even heat.

Both the cooking grill and hangers can be swung out from over the Metro Fire Pit during operation. Be mindful if doing so, that any food, fats and oils etc may fall onto the area around the Metro Fire Pit, and that all cooking components will be very hot during operation.

#### Cast iron smash plate


The cast iron smash plate locates over one half of the firepit and is correctly located when the base tabs on the smash plate sit against the outer ring of the firepit. You can also use two cast iron smash plates at the same time to double your cooking area.

Please ensure you take care when removing any hot cooking components from the Metro Fire Pit and place them carefully onto a non combustible surface well out of harms way and the reach of children.

Once you've finished cooking, all cooking components are easily removed from the Metro Fire Pit and can be cleaned with dish washing detergent and a scourer to remove food, fats and oils.


#### 7.8 L Cast iron potjie (optional accessory)

The cast iron potjie can be suspended from the hanging arms at a specific height or lowered into the firepit embers for cooking.

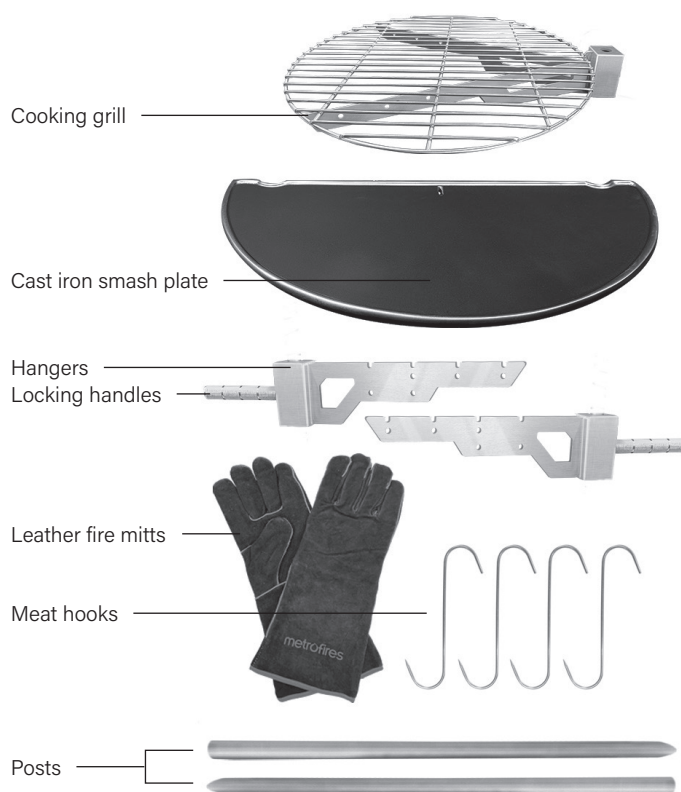

#### Battery powered rotisserie (optional accessory)

The portable rotisserie requires both hangers to be fitted for use. The long central rod of the rotisserie locates through the centre hole in the top row on one hanger with the handle end resting in the 3 notches on the other hanger as illustrated below. Can also be used on most other BBQ cookers.

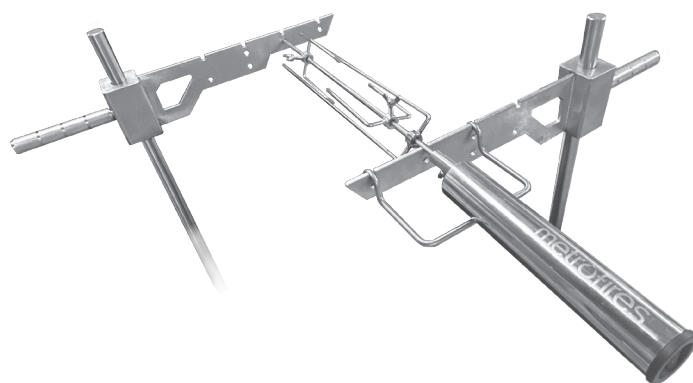

#### Optional cooking accessories

A wide range of optional cooking accessories are available for purchase from your local Metro Fires retailer.

- Battery powered rotisserie (SKU 290-0007)
- 540 Cast iron smash plate (SKU 290-0008)
- 720 Cast iron smash plate (SKU 290-0009)
- Knurled locking handle (SKU 290-0005)
- Stainless steel BBQ basket (560-0210)
- 7.8 L Cast iron potjie (SKU 290-0006)

**metrofires.co.nz**

Visit the Metro website to view the full product range, find your nearest Metro stockist or simply check out the latest specifications, installation requirements and technical data.

**PIONEER**  
MANUFACTURING LIMITED

**metrofires**