


Euromaid

USER MANUAL

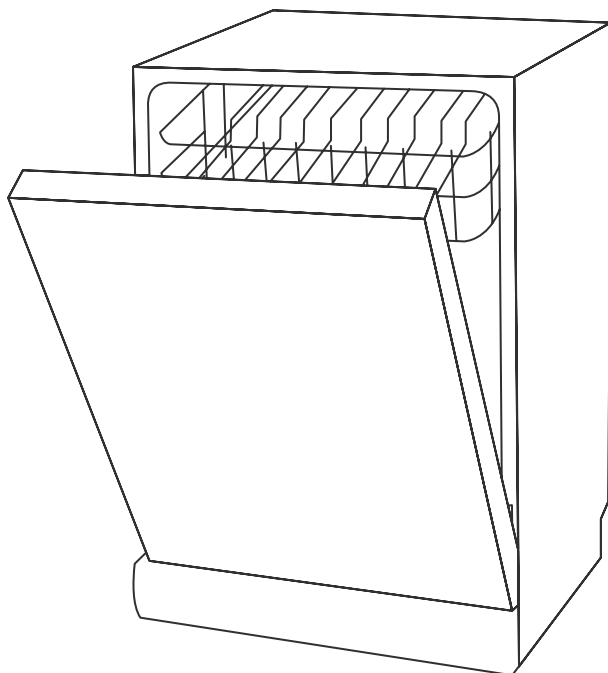

E14FID

60cm Fully Integrated Dishwasher

PLEASE READ THE USER MANUAL CAREFULLY BEFORE USING THE UNIT

Dear Customer,

Congratulations on the purchase of your new product from **Euromaid**.

We recommend you please take some time to read the instruction manual thoroughly to familiarise yourself with the functionality and operations to ensure optimum performance of your new appliance.

After reading the manual, please store it in a safe and accessible location for future reference.

Installation

The installation of your new appliance must be carried out by a qualified installer / technician in accordance to local regulations. Please ensure all packaging materials are disposed of correctly.

Customer Care

Our Customer Care centre is available should you wish to learn more about your appliance in relation to how to use it to its best potential, or tips on cleaning as well as available accessories.

For further details please contact our Customer Care Team

Australia

Ph: 1800 444 357

customer.care.ha@glendimplex.com.au

New Zealand

Ph: 09 274 8265

nztechserv@glendimplex.co.nz

Thank you.

Regards,






Euromaid Australia and New Zealand

CONTENTS

| | |
|---|----------------|
| Safety Information | 6 - 10 |
| General Safety | 6 |
| Electrical Safety | 7 |
| Product Safety | 8 |
| Intended Use | 9 |
| Child Safety | 9 |
| Disposal Regulations | 10 |
| Installation | 11 - 18 |
| Electrical Requirements | 11 |
| Electrical Connection | 11 |
| Positioning and Levelling the Appliance | 12 |
| Built-in Installation | 13 |
| Water Supply and Drain | 17 |
| Connection of Drain Hoses | 17 |
| Product Overview | 19 - 33 |
| Controls | 20 |
| How to Use the Control Panel | 21 |
| Understanding the Programs and Indicators | 22 |
| Function of Rinse Aid and Detergent | 23 |
| Filling the Rinse Aid Reservoir | 24 |
| Adjusting the Rinse Aid Reservoir | 24 |
| Filling the Detergent Dispenser | 25 |
| Basket Use and Tips | 26 |
| Upper Basket | 28 |
| Lower Basket | 28 |
| Cutlery Tray | 29 |
| Cutlery Rack Used Tips | 30 |
| Preparing and Loading Dishes | 31 |

CONTENTS

| | |
|--|----------------|
| Daily Use | 34 - 35 |
| Programming the Dishwasher: Wash Cycle Table | 34 |
| Starting a Wash Cycle | 35 |
| Changing the Program Mid-Cycle | 35 |
| Add a Dish During a Cycle | 35 |
| Cleaning & Maintenance | 36 - 39 |
| External Care | 36 |
| Internal Care | 37 |
| Caring for the Dishwasher | 38 |
| Trouble Shooting | 40 - 43 |
| Before Calling for Service | 40 |
| Errors | 43 |
| Product Information | 44 - 45 |
| Manufacturer Guarantee | 46 - 48 |


| Icon | Type | Meaning |
|---|-------------------------------|---|
|  | Warning / caution | Serious injury or death risk |
|  | Risk of electric shock | Dangerous voltage risk |
|  | Fire hazard | Warning! Risk of fire / flammable materials |
|  | Hot surface | Warning! Risk of injury from touching a hot surface |
|  | Important / note | Important information or useful hints about usage |

SAFETY INFORMATION

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.











General Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dishwasher and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dishwasher.
- Always have the installation and repairing procedures carried out by the Authorized Service. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.

 Never clean the dishwasher by spraying or pouring water onto it!
There is the risk of electric shock!

SAFETY INFORMATION

Electrical Safety

-  **Warning!** Electrical safety instructions should be followed while electrical connection is made during the installation.
 -  **Warning!** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.
 -  This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with an earthing conductor plug.
 -  Improper connection of the equipment-earthing conductor can result in the risk of an electric shock.
 -  Do not touch the plug with wet hands!
Never unplug by pulling on the cable, always pull out by grabbing the plug.
 -  Do not use extension cords, multi-plugs or adaptors to connect the dishwasher
 -  to power supply in order to decrease the risk of fire and electric shock.
 -  To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
 -  If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent or similarly qualified persons in order to avoid a hazard.
 -  If the dishwasher is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!
- The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
 - Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.
 - Do not modify the plug provided with the appliance; If it does not fit the outlet. Have a proper outlet installed by a qualified electrician.
 - Unplug the dishwasher from the mains during installation, maintenance, cleaning and repair works.
 - Power cable plug must be easily accessible after installation.

SAFETY INFORMATION

Product Safety

Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.

- ⚠ **Warning!** Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
 - ⚠ **Warning!** The door should not be left open, since this could increase the risk of tripping.
 - ⚠ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
 - ⚠ During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
 - Do not operate your dishwasher unless all enclosure panels are properly in place.
 - Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
 - When loading items to be washed:
 - Ⓐ Locate sharp items so that they are not likely to damage the door seal;
 - Ⓑ **Warning:** Knives and other utensils with sharp points must be loaded in the basket with their points facing down or placed in a horizontal position.
 - Check that the detergent powder is empty after completion of the wash cycle.
 - Do not wash plastic items unless they are marked **dishwasher safe** or the equivalent.
 - For unmarked plastic items not so marked, check the manufacturer's recommendations.
 - Use only detergent and rinse agents recommended for use in an automatic dishwasher.
 - Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
 - Do not tamper with controls.
 - The appliance needs to be connected to the main water valve using new hose sets. Old sets should not be reused.
 - To save energy, in stand by mode, the appliance will switch off automatically while there is no any operation in 30 minutes.
 - When cleaning use a soft cloth moistened with mild soap, and then use a dry cloth to wipe it again.
 - Any openings in the base must not be obstructed by carpet.

SAFETY INFORMATION

Intended Use

- Dishwasher has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dishwasher only for washing items that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- This appliance is intended to be used in household and similar applications such as:
 - Ⓐ staff kitchen areas in shops, offices and other working environments;
 - Ⓑ farm houses;
 - Ⓒ by clients in hotels, motels and other residential type environments;
 - Ⓓ bed and breakfast type environments.

Child Safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
 - Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dishwasher. Use the child-proof lock in order to prevent the children to tamper with the dishwasher.
- ① Child-proof lock is on the control panel. **See Child lock.**
- Keep loading door closed even when the dishwasher is not in use.

SAFETY INFORMATION

Disposal Regulations



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.

Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

- Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service.

INSTALLATION

Before calling the nearest authorized service agent for the installation of the dishwasher, ensure that electrical installation and water drain is appropriate referring to the user's manual. If they are not suitable, contact a qualified electrician and technician to make necessary arrangements.

- ❗ Installation of the water pipes and electrical connection must be carried out by a qualified professional.
- ⚠ **Warning!** Prior to installation, visually check if the dishwasher has any defects on it. If the dishwasher is damaged, do not have it installed. Damaged products cause risks for your safety.
- ⚠ Disconnect electrical power before installing the dishwasher. Failure to do so could result in death or electric shock.

Electrical Requirements

- ⚠ **Warning!** For personal safety: Do not use an extension cord or an adapter plug with this appliance. Do not, under any circumstances, cut or remove the earthing connection from the power cord.
- Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Electrical Connection


Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using a adaptors or the like as they could cause overheating and burns.

- ⚠ **Warning!** Ensure that proper earthing exists before use.

INSTALLATION

Positioning and Levelling the Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

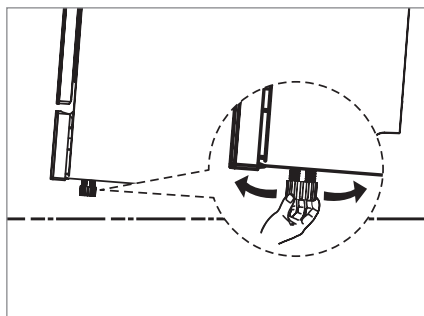

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2°.


INSTALLATION

Built-in Installation (Integrated Model)

1 Selecting the best location for the dishwasher


The installation position of dishwasher should be near the existing inlet and drain hoses and power cord. See below illustration of cabinet dimensions and installation position of the dishwasher.

- ① Less than 5 mm between the top of dishwasher and cabinet and align the outer door with the cabinet.

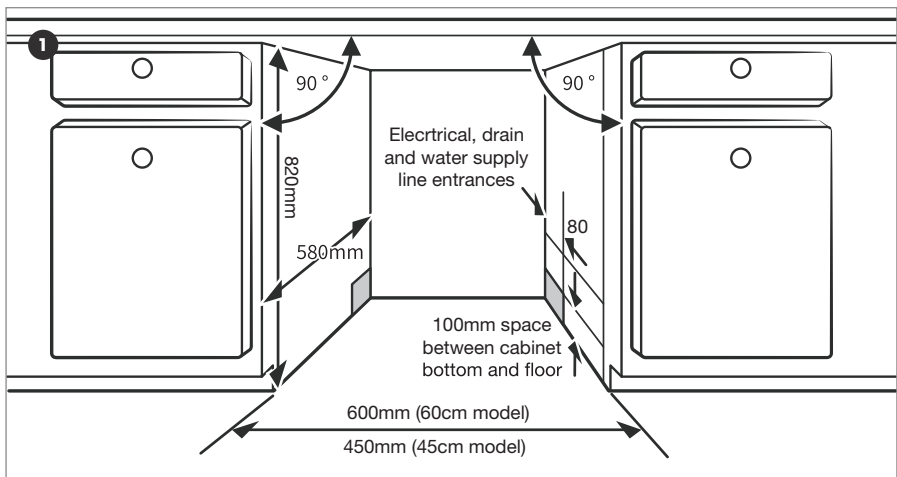

- ② If dishwasher is installed at the corner of the cabinet, there should be some space when the door is opened.



- ① Depending on where your electrical outlet is, you may need to cut a hole in the opposite cabinet side.

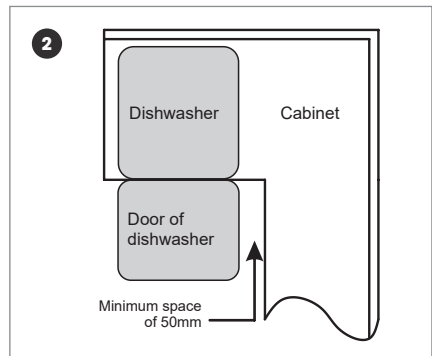

INSTALLATION

2 Door panel dimensions and installation

Install the hook on the door panel and put the hook into the slot on the outer door of dishwasher; **see figure A**. After positioning the panel, fix the panel onto the outer door with screws and bolts by removing the four short screws ① and replacing with the four long screws ②, **see figure B**.

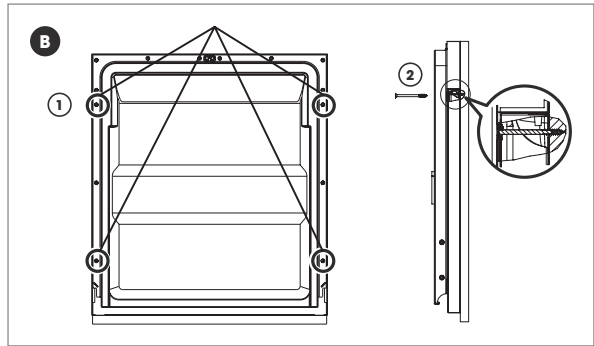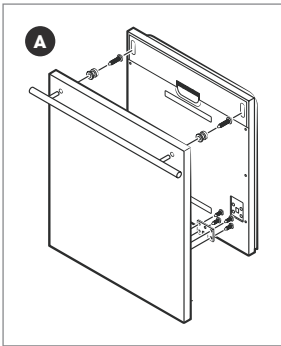

Door Panel Dimensions (mm)

| | |
|--------|------------|
| Height | 655* - 720 |
| Width | 589 |
| Depth | 18 - 20 |

Door Panel Weight (kg)


| | |
|-------|-------|
| Total | 5 - 7 |
|-------|-------|

- ① Please see installation card for detailed instructions.
- ① *Minimum height of door panel for full coverage of the inner door.

INSTALLATION

3 Tension adjustment of the door spring


- ① The door springs are set at the factory to the required tension for the outer door. After installing a door panel, you will have to adjust the door spring tension. Rotate the adjusting screw to drive the adjustor to tighten or loosen the steel cable.
- ② Door spring tension is correct when the door remains horizontal in the fully opened position, yet rises to a close with the slight lift of a finger.

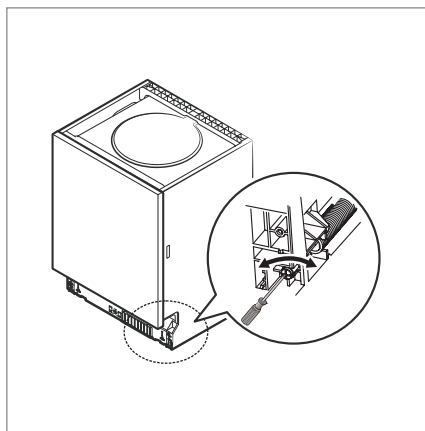

INSTALLATION

4 Dishwasher installation steps

- ① Please refer to the specified installation steps in the installation drawings.
- ① Affix the condensation strip under the benchtop.
Please ensure the condensation strip is flush with edge of the benchtop, **step 2**.
- ② Connect the inlet hose to the cold water supply.
- ③ Connect the drain hose.
- ④ Connect the power cord.
- ⑤ Place the dishwasher into position, **step 4**.
- ⑥ Level the dishwasher. The rear feet can be adjusted from the front of the dishwasher by turning the **pillips screw** in the middle of the base of dishwasher. To adjust the front feet, use a flat screw driver and turn the front feet until the dishwasher is level, **step 5 to step 6**.
- ⑦ Install the door panel to the outer door of the dishwasher, **step 7 to step 10**.
- ⑧ Adjust the tension of the door springs by using an allen key turning in a clockwise motion to tighten the left and right door springs.
Failure to do this could cause damage to your dishwasher, **step 11**.
- ⑨ The dishwasher must be secured in place. There are two ways to do this:

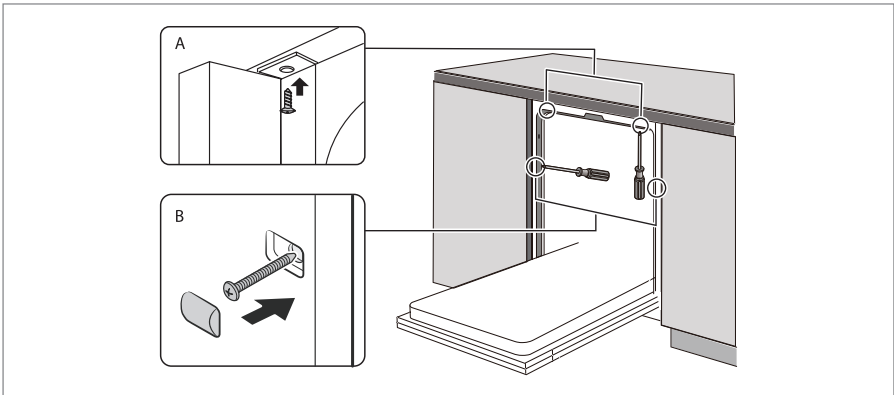


- a Normal benchtop: put the installation hook into the slot of the side plane and secure it to the work surface with the wood screws.
- b Marble or granite benchtop: fix the side with screw.

INSTALLATION

5 Levelling the dishwasher

Dishwasher must be level for proper dish rack operation and wash performance.

- ① Place a spirit level on door and rack track inside the tub as shown to check that the dishwasher is level.
 - ② Level the dishwasher by adjusting the three levelling legs individually.
 - ③ When levelling the dishwasher, please pay attention not to let the dishwasher tip over.
- ① The maximum adjustment height of the feet is 50mm.

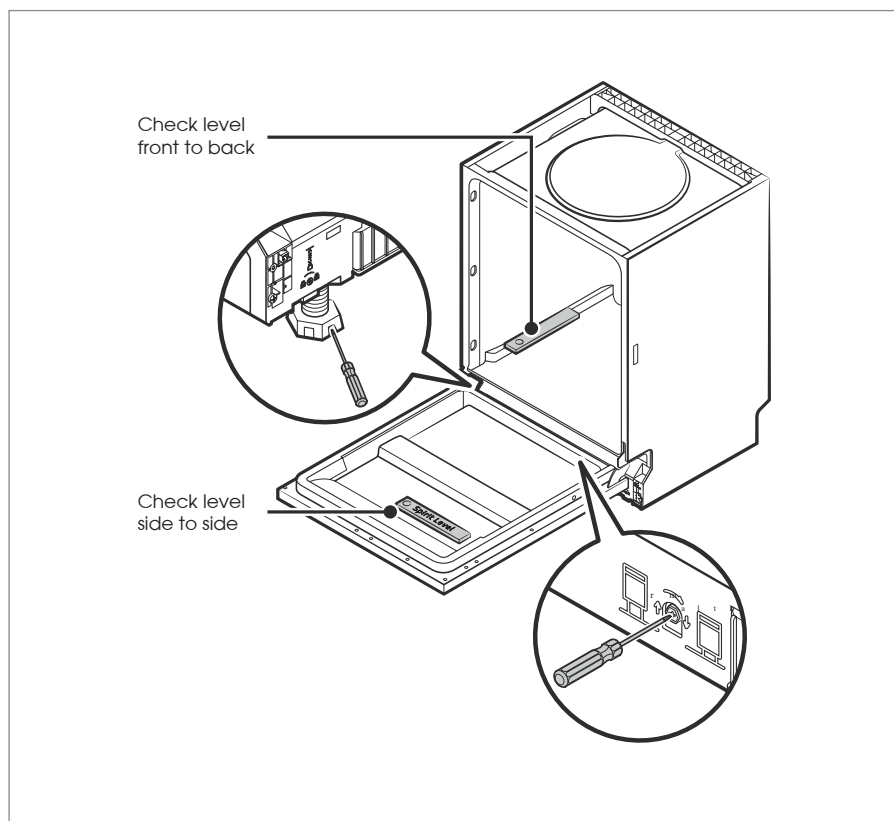


INSTALLATION

Water Supply and Drain

Cold water connection

- Connect the cold water supply hose to a threaded 3/4 **inch** connector and make sure that it is fastened tightly in place.
- If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.


① Close the hydrant after using.

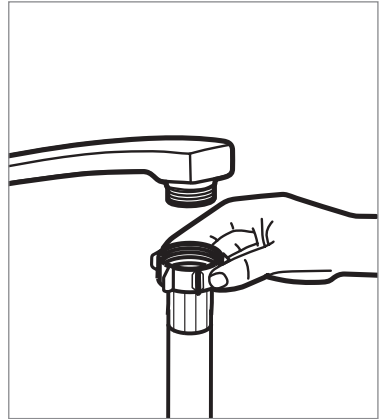

Connection of Drain Hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. The height of drain pipe must be less than 1000mm. The free end of the hose must not be immersed in water to avoid the back flow of it.

⚠ **Warning!** Securely fix the drain hose in either position **A** or position **B**.

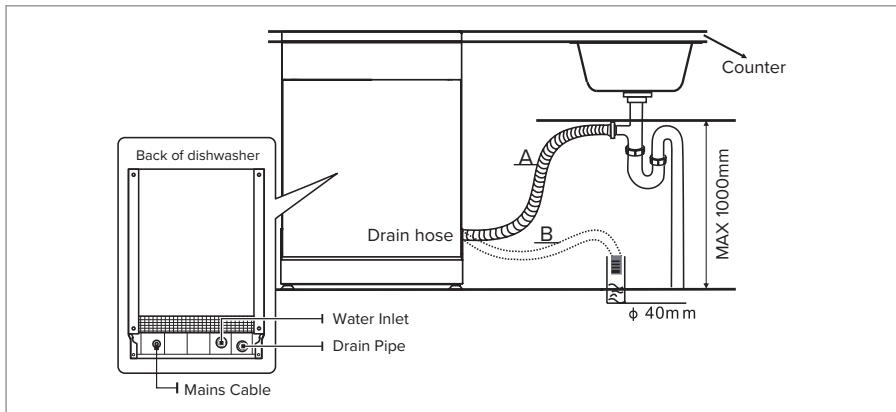

INSTALLATION

How to drain excess water from hoses

If the sink is 1000 higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.


Extension hose

If you need a drain hose extension, make sure to use a similar drain hose. It must be no longer than 4 meters; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon connection

The waste connection must be at a height less than 100cm **maximum** from the bottom of the dish. The water drain hose should be fixed.

PRODUCT OVERVIEW

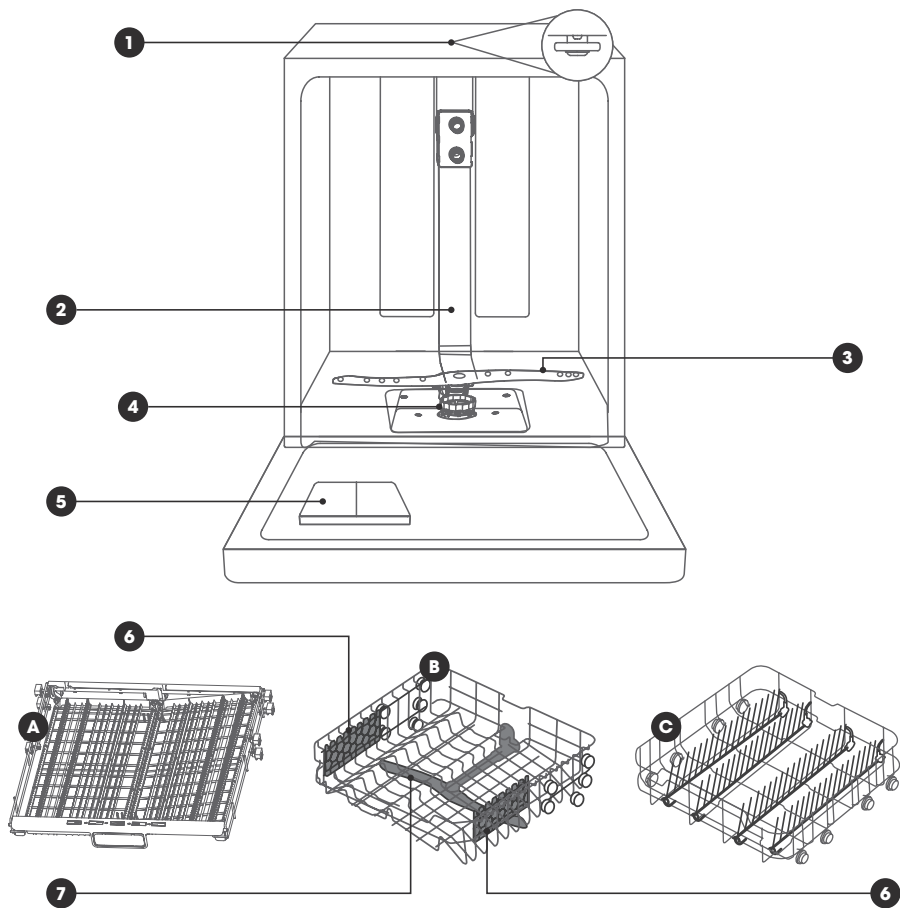


| | |
|-------------------|-------------------|
| ① Top spray arm | Ⓐ Cutlery rack |
| ② Inner pipe | Ⓑ Upper basket |
| ③ Lower spray arm | Ⓒ Cup rack |
| ④ Filter assembly | Ⓓ Upper spray arm |
| ⑤ Dispenser | Ⓔ Lower basket |

① **Note:** Above picture is for reference only. The actual appliance may be slightly different.

PRODUCT OVERVIEW

Controls

| | | | |
|-----------------------------|------------------------|-------------------------|-----------------|
| ① Power on/off button | ⑦ Delay start button | ⑫ Intensive program | ⑰ LED screen |
| ② Power wash indicator | ⑧ Dual zone button | ⑬ Heavy program | ⑱ Glass program |
| ③ Express wash indicator | ⑨ Upper zone indicator | ⑭ Eco program | ⑲ 90min program |
| ④ Extra dry indicator | ⑩ Lower zone indicator | ⑮ Program end indicator | ⑳ Rapid program |
| ⑤ Auxiliary function button | ⑪ Auto program | ⑯ Rinse aid indicator | ㉑ Soak function |
| ⑥ Program button | | | |

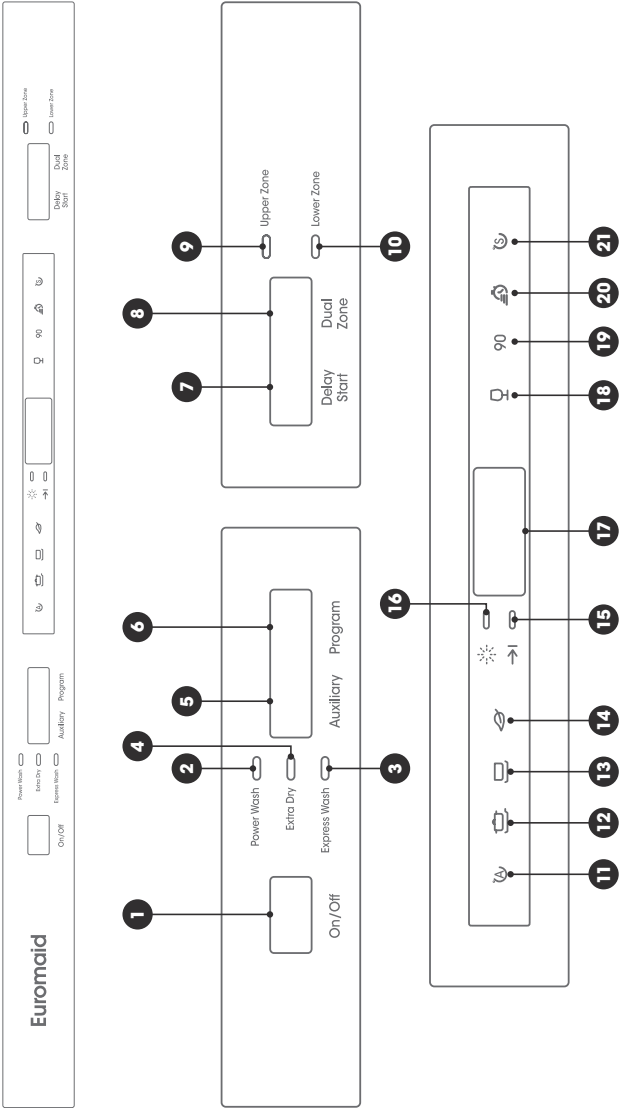










PRODUCT OVERVIEW

How to Use the Control Panel

| Controls | Description |
|--------------------|---|
| On/Off | Press this button to turn on your dishwasher. |
| Auxiliary function | Press the button to select a function, corresponding indicator will be lit. |
| Program | Select the appropriate washing program, the selected program indicator will be lit. |
| Delay start | Press the delay button to increase the delay start time. Delay a cycle up to 24 hours in one hour increments. |
| Dual zone | When you select the upper zone , only the top and upper spray arm will operate. Use to save water and energy when only the upper basket is loaded. When you select the lower zone , only the lower spray arm will operate. Use to save water and energy when only the lower basket is loaded. |

PRODUCT OVERVIEW

Understanding the Programs and Indicators

| Controls | Description |
|--|--|
| Power wash indicator | Select function if dishes are very dirty, hard to clean. It can be used with Intensive, Heavy, Eco, Glass, 90min. |
| Extra dry indicator | Select function for an improved drying result. It can be used with Intensive, Heavy, Eco, Glass, 90min. |
| Express wash indicator | Select function to reduce the program time. It can be used with Intensive, Heavy, Eco, Glass, 90min. |
|  Auto wash | For lightly, normal or heavily soiled crockery, wash temperature and duration is automatically adjusted to suit. |
|  Intensive | For heaviest soiled crockery, such as pots, pans and casserole dishes with dried on food. |
|  Heavy | For heavily soiled loads, such as plates, glasses and lightly soiled pots and pans. |
|  Eco | This is standard program, suitable for normally soiled loads, such as pots, plates, glasses and lightly soiled pans. |
|  Glass | For lightly soiled crockery and glass. |
| 90 90min | For normally soiled loads that need quick wash. |
|  Rapid | A shorter wash for lightly soiled loads that do not need drying. |
|  Soak | Use to rinse heavily soiled dishes or dishes that you plan to wash later that day. |
|  Rinse aid | If the indicator is lit, it means the dishwashers rinse aid is low. |
|  Program end | When the program is finished, the indicator will be lit. |
| Upper zone indicator | When indicator is lit, only the top and upper spray arm will be operating. Use when only the upper basket is loaded. |
| Lower zone indicator | When indicator is lit, only the lower spray arm will be operating. Use when only the lower basket is loaded. |


PRODUCT OVERVIEW

Function of Rinse Aid and Detergent

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids.

- ⚠ **Warning!** Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

When to refill the rinse aid dispenser

Unless the rinse aid indicator  on the control panel is on, you can always estimate the amount from the color of the optical level indicator located next to the cap. When the rinse-aid container is full, the indicator will be fully dark. The size of the dark dot decreases as the rinse aid diminishes. You should never let the rinse aid level be less than 1/4 full. As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

| | | | | |
|--------|------------|------------|-------------|---------|
| ● Full | ◐ 3/4 Full | ◑ 1/2 Full | ◒ 1/4 Empty | ○ Empty |
|--------|------------|------------|-------------|---------|

Function of detergent




The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

- ⚠ **Warning!** Only detergent specifically made for dishwashers use.
Keep your detergent fresh and dry. Don't put powdered detergent into the dispenser until you are ready to wash dishes.
- ⚠ **Warning!** Dishwasher detergent is corrosive!
Keep dishwasher detergent out of the reach of children.

PRODUCT OVERVIEW

Filling the Rinse Aid Reservoir


- ① Remove the rinse reservoir cap by rotating it counter clockwise
- ② Carefully pour in the rinse aid into its dispenser, whilst avoiding it to overflow.
- ③ Close the rinse aid reservoir cap by rotating it clockwise.

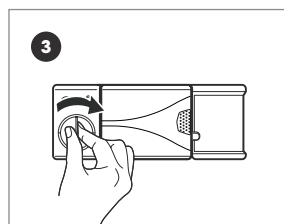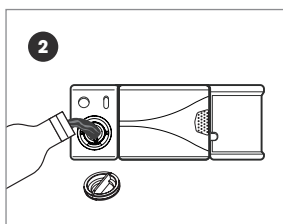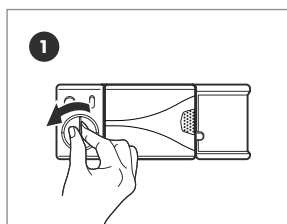

- ① Do not overfill the rinse aid dispenser.
- ① Clean up any spilled rinse aid with an absorbent cloth to avoid excessive foaming during the next wash.

Adjusting the Rinse Aid Reservoir




Turn the rinse aid indicator dial to a number between 1 and 6. The higher the number, the more rinse aid the dishwasher uses. If the dishes are not drying properly or are spotted, adjust the dial to the next higher number until your dishes are spot-free. Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades.

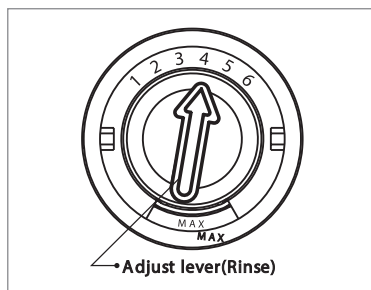

PRODUCT OVERVIEW

Filling the Detergent Dispenser

- ① Open the detergent dispenser flap by pushing the detergent dispenser release catch.
- ② Add detergent into the larger cavity **A** for the main wash cycle. For better cleaning results, especially if you have very dirty items, pour a small amount of detergent onto the door. The additional detergent will activate during the pre-wash phase
- ③ Close the flap by sliding it to the left and then pressing it down.

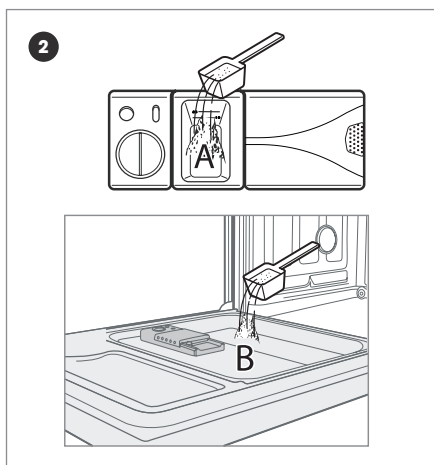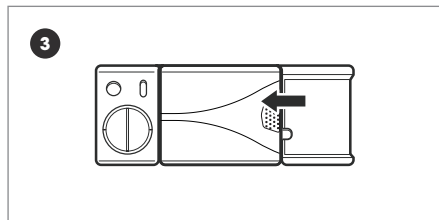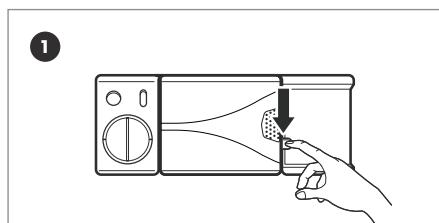

- ① Be aware that depending on the soiling of water, setting may be different.
- ① Please observe the manufacturer's recommendations on the detergent packaging.





PRODUCT OVERVIEW

Basket Use and Tips

Adjusting the upper basket

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket. To adjust the height of the upper rack, follow these steps:


- ① Pull out the upper basket, **lower position**.
- ② Remove the upper basket.
- ③ Re-attach the upper basket to upper or lower rollers.
- ④ Push in the upper basket, **upper position**.

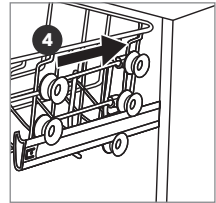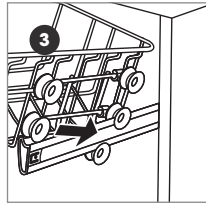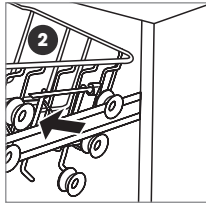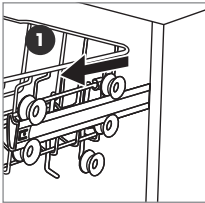

PRODUCT OVERVIEW


Folding back the cup shelf

To make room for taller items in the upper basket, raise the cup rack upwards. You can then lean the tall glasses against it. You can also remove it when it is not required for use.

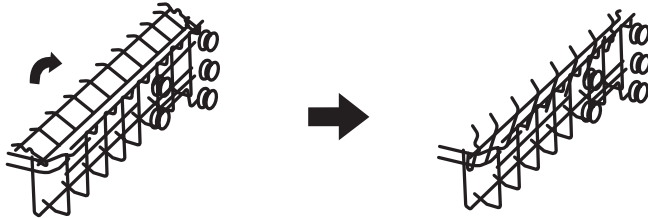


Folding down the rack shelves

The racks of the lower basket are used for holding plates. They can be folded down to make more room for large items.

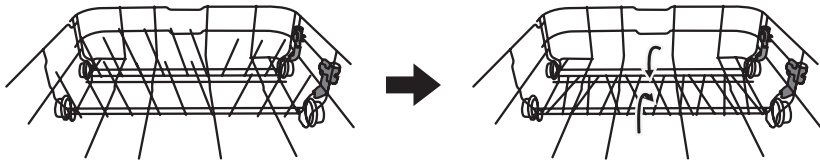


PRODUCT OVERVIEW

Upper Basket

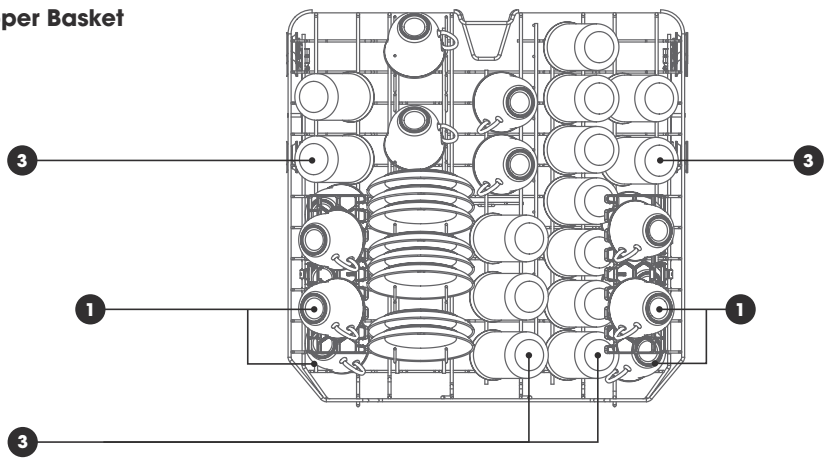

Lower Basket


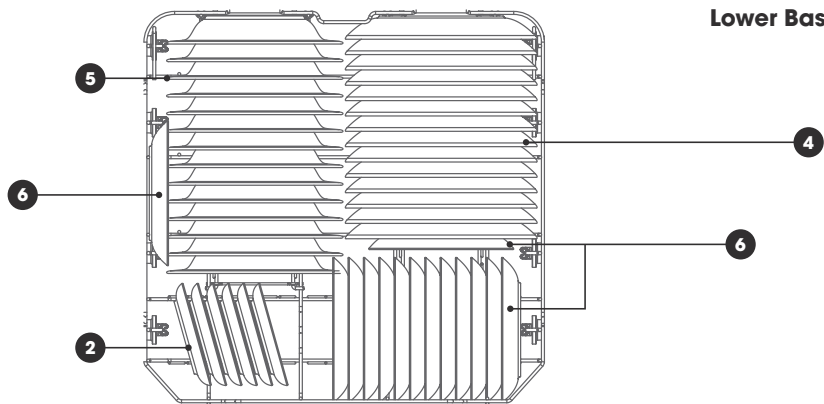


- | | |
|-----------|------------------|
| ① Cups | ④ Dinner plates |
| ② Saucers | ⑤ Soup plates |
| ③ Glasses | ⑥ Dessert dishes |

① Basket loading according to AS/NZS 2007.1.

PRODUCT OVERVIEW

Cutlery Tray

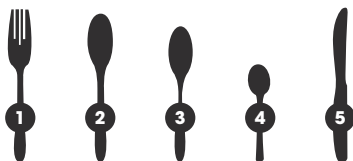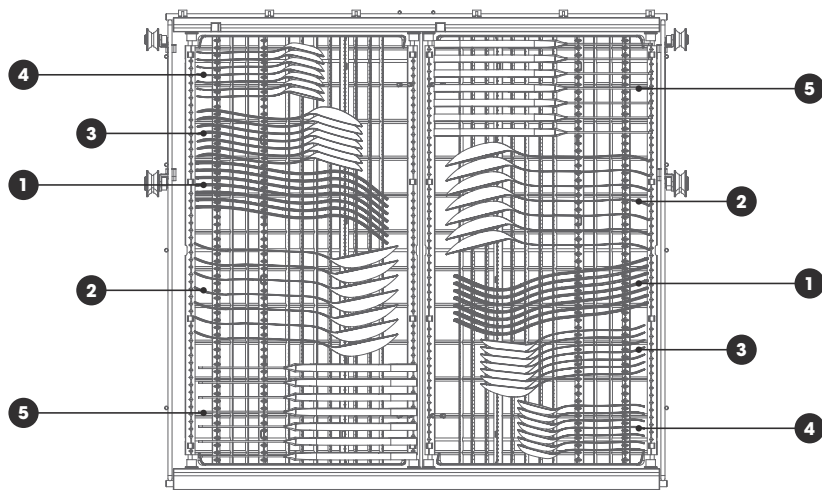

① Forks

② Soup spoons

③ Dessert spoons




④ Teaspoons

⑤ Knives

- Information for comparability tests in accordance with (*AS/NZS 2007.1)
- Capacity: 14 place settings
- Position of the upper basket: lower position
- Program: ECO
- Rinse aid setting: 6
- Detergent (Pre/main): 5g/27.5g
- Door is open at the end of the drying cycle for the drying performance test and last 40mins. (Door position: Open 50 mm)

PRODUCT OVERVIEW

Cutlery Rack Used Tips
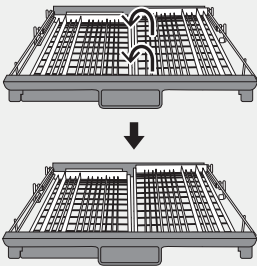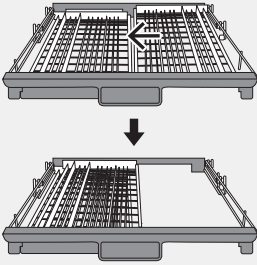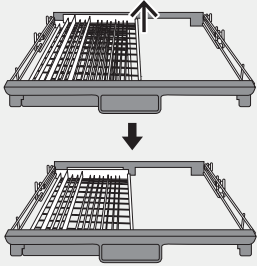
| Diagram | Description |
|---|--|
|  | Lift the right basket up, both left and right side will be flat for use of the full tray. |
|  | Move the right basket from right to left, allowing space for tall crockery and glasses on the right. |
|  | The right basket can also be removed from the tray, to create space if you choose to use the left side only. |

PRODUCT OVERVIEW

Preparing and Loading Dishes

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the program has ended.

For washing the following cutlery/dishes

| Are NOT Suitable | OF LIMITED Suitability |
|---|---|
| <ul style="list-style-type: none">• Cutlery with wooden, horn china or; mother-of-pearl handles• Plastic items that are not heat resistant• Older cutlery with glued parts that are not temperature resistant• Bonded cutlery items or dishes• Pewter or cooper items• Crystal glass• Steel items subject to rusting• Wooden platters• Items made from synthetic fibres | <ul style="list-style-type: none">• Some types of glasses can become dull after a large number of washes• Silver and aluminum parts have a tendency to discolor during washing• Glazed patterns may fade if machine washed frequently |

Recommendations for loading the dishwasher

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

- ① For best performance of the dishwasher, follow these loading guidelines.
- ① Features and appearance of baskets and cutlery baskets may vary from your model.

PRODUCT OVERVIEW


Place objects in the dishwasher in following way:

- Items such as cups, glasses, pots, pans, etc. are faced downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.
- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard.
- Long and sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.

- ① Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

Loading the upper basket


The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.

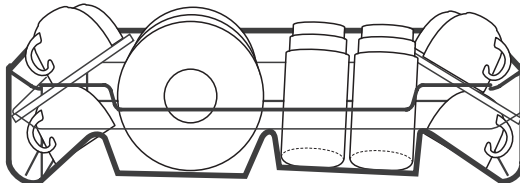

PRODUCT OVERVIEW

Loading the lower basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm. The maximum diameter advised for plates in front of the detergent dispenser is of 19cm, this not to hamper the opening of it.

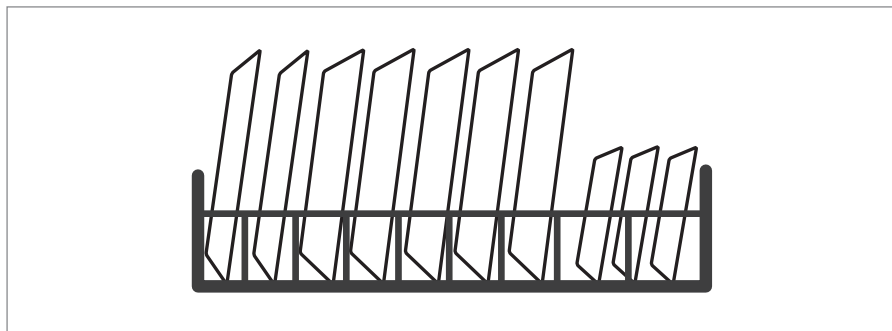

Loading the cutlery basket

Cutlery should be placed in the cutlery basket separately from each other in the appropriate positions, and do make sure the utensils do not nest together, this may cause bad performance.



⚠ Warning! Do not let any item extend through the bottom.
Always load sharp utensils with the sharp point down.

Removing the dishes

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.

⚠ Warning! Items will be hot! To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.

DAILY USE

Programming the Dishwasher: Wash Cycle Table

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs.



| Program | Description | Detergent / main | Run time (min) | Energy (kWh) | Water (L) | Rinse aid |
|------------------|--|--------------------------|----------------|--------------|-----------|-----------|
| Auto | Pre-wash: 45°C > Autowash: 45 - 55°C > Rinse > Rinse: 65°C > Drying | 5 / 27.5g or all in 1 | 150 | 0.9~0.3 | 11~15 | ● |
| Intensive | Pre-wash: 50°C > Wash: 60°C > Rinse > Rinse > Rinse: 65°C > Drying | 5 / 27.5g or all in 1 | 170 | 1.5 | 17.5 | ● |
| Heavy | Pre-wash: 45°C > Wash: 55°C > Rinse > Rinse: 65°C > Drying | 5 / 27.5g or all in 1 | 160 | 1.3 | 13.5 | ● |
| Eco* | Prewash > Wash: 45°C > Rinse: 50°C > Drying | 5 / 27.5g or all in 1 | 170 | 0.70 | 12 | ● |
| Glass | Pre-wash > Wash: 42°C > Rinse > Rinse: 60°C > Drying | 5 / 27.5g or all in 1 | 125 | 0.8 | 13 | ● |
| 90min | Wash: 65°C > Rinse > Rinse: 65°C > Drying | 25g or all in 1 | 90 | 1.2 | 11.5 | ○ |
| Rapid | Wash: 40°C > Rinse > Rinse: 45°C | 25g | 30 | 0.6 | 11.5 | ○ |
| Soak | Prewash | - | 8 | 0.02 | 4 | ○ |

① *AS / NZS 2007.1: This program is the test cycle.

The information for comparability test in accordance with AS/NZS 2007.1.

DAILY USE

Starting a Wash Cycle

- ① Draw out the lower and upper basket, load the dishes and push them back. It is recommended to load the lower basket first, then the upper one.
- ② Pour in the detergent.
- ③ Insert the plug into the socket. For the power supply refer to last page **technical specifications**. Make sure that the water supply is turned on to full pressure.
- ④ Open the door, press the power button .
- ⑤ Choose a program, the response light will turn on, . Then close the door, the dishwasher will start its cycle.

Changing the Program Mid-Cycle

A wash cycle can only be changed if it has been running for a short time otherwise, the detergent may have already been released and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, follow the instructions below:

- ① Open the door slightly to stop the dishwasher, once the spray arms stop, open the door completely.
- ② Press the **Program** button for more than 3 seconds, the program will cancel.
- ③ Select the desired program using the **Program** button, then close the door and the dishwasher will start.

Add a Dish During a Cycle

A forgotten dish can be added any time before the detergent dispenser opens. If this is the case, follow the instructions below:

- ① Open the door slightly to stop the dishwasher.
- ② Once the spray arm stops, open the door completely.
- ③ Add the dishes.
- ④ Close the door.
- ⑤ The dishwasher will start running again.

 **Warning!** It is dangerous to open the door mid-cycle, as hot steam may scald you.

CLEANING & MAINTENANCE

External Care

The door and the door seal

Clean the door seals regularly with a soft damp cloth to remove food deposits.

When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arms. Any deposits should be wiped off before the door is closed.

The control panel

If cleaning is required, the control panel should be wiped with a soft damp cloth only.

- ⚠ **Warning!** To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- ⚠ **Warning!** Never use abrasive cleaners or scouring pads on the outer surfaces because they may scratch the finish. Some paper towels may also scratch or leave marks on the surface.





CLEANING & MAINTENANCE

Internal Care

Filtering system

The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly and clean them if necessary under running water. Follow the steps below to clean the filters in the wash cabinet.

- ① Pictures are only for reference, different models of the filtering system and spray arms may be different.
- ① Hold the coarse filter and rotate it anticlockwise to unlock the filter. Lift the filter upwards and out of the dishwasher.
- ② The fine filter can be pulled off the bottom of the filter assembly. The coarse filter can be detached from the main filter by gently squeezing the tabs at the top and pulling it away.
- ③ Larger food remnants can be cleaned by rinsing the filter under running water. For a more thorough clean, use a soft cleaning brush.
- ④ Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.

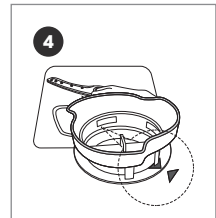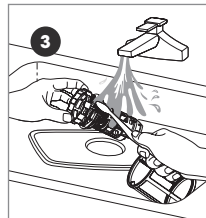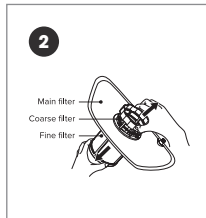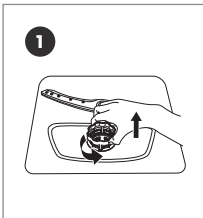




- ⚠ **Warning!** Do not over tighten the filters. Put the filters back in sequence securely, otherwise coarse debris could get into the system and cause a blockage.
- ⚠ **Warning!** Never use the dishwasher without filters in place. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

CLEANING & MAINTENANCE

Spray arms

It is necessary to clean the spray arms regularly as hard water chemicals will clog the spray arm jets and bearings. To clean the spray arms, follow the instructions below:

- ① To remove the upper spray arm, hold the nut, rotate the arm clockwise to remove it.
- ② To remove the lower spray arm, pull out the spray arm upward.
- ③ Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

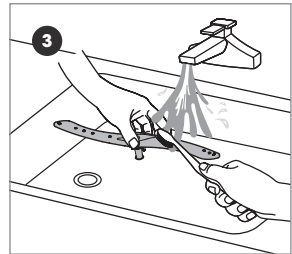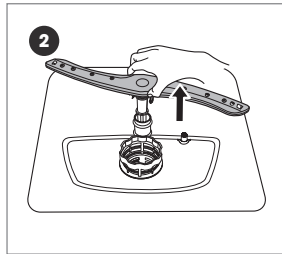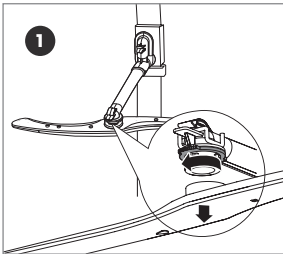

Caring for the Dishwasher

Frost precaution

Please take frost protection measures on the dishwasher in winter. Every time after running wash cycles, please operate as follows:

- ① Cut off the electrical power to the dishwasher at the supply source.
- ② Turn off the water supply and disconnect the water inlet pipe from the water valve.
- ③ Drain the water from the inlet pipe and water valve.
(Use a pan to gather the water)
- ④ Reconnect the water inlet pipe to the water valve.
- ⑤ Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.

CLEANING & MAINTENANCE

After every wash

After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odors are not trapped inside.

Remove the plug

Before cleaning or performing maintenance, always remove the plug from the socket.

No solvents or abrasive cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little vinegar, or a cleaning product made specifically for dishwashers.

When not in use for a longtime

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

Moving the appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

Seals

One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

TROUBLE SHOOTING

Before Calling for Service

Reviewing the charts on the following pages may save you from calling for service.

| Problem | Possible cause | Solution |
|---|---|--|
| Dishwasher doesn't start | Fuse blown, or the circuit break tripped | Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher |
| | Power supply is not turn on | Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket |
| | Water pressure is low | Check that the water supply is connected properly and the water is turned on |
| | Door of dishwasher is not properly closed | Make sure to close the door properly and latch it |
| Water not pumped from dishwasher | Twisted or trapped drain hose | Check the drain hose |
| | Filter clogged | Check coarse the filter |
| | Kitchen sink clogged | Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink that is not draining, you may need a plumber rather than a serviceman for dishwashers |
| Suds in the tub | Wrong detergent | Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the bottom of the dishwasher. Close the dishwasher door, then select any cycle. Initially, the dishwasher will drain out the water. Open the door after draining stage is complete and check if the suds have disappeared. Repeat if necessary. |
| | Spilled rinse-aid | Always wipe up rinse-aid spills immediately |

TROUBLE SHOOTING

| Problem | Possible cause | Solution |
|--|--|--|
| Stained tub interior | Detergent with colourant may have been used | Make sure that the detergent has no colourant |
| White film on inside surface | Hard water minerals | To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent otherwise, it may cause foaming or suds |
| There are rust stains on cutlery | The affected items are not corrosion resistant | The items should be corrosion resistant |
| Knocking noise in the dishwasher | A spray arm is knocking against an item in a basket | Interrupt the program and rearrange the items which are obstructing the spray arm |
| Rattling noise in the dishwasher | Items of crockery are loose in the dishwasher | Interrupt the program and rearrange the items of crockery |
| Knocking noise in the water pipes | This may be caused by on-site installation or the cross-section of the piping | This has no influence on the dishwasher function. If in doubt, contact a qualified plumber |
| The dishes are not clean | The dishes were not loaded correctly | See notes in "Loading & unloading your dishwasher" |
| | The program was not powerful enough | Select a more intensive program |
| | Not enough detergent was dispensed | Use more detergent, or change your detergent |
| | Items are blocking the movement of the spray arms | Rearrange the items so that the spray can rotate freely |
| | The filter combination is not clean or is not correctly fitted in the base of wash cabinet. This may cause the spray arm jets to get blocked | Clean and/or fit the filter correctly. Clean the spray arm jets |

TROUBLE SHOOTING

| Problem | Possible cause | Solution |
|--------------------------------------|--|---|
| Cloudiness on glassware | Combination of soft water and too much detergent | Use less detergent if you have soft water and select a shorter cycle to wash the glassware and to get them clean |
| Black or grey marks on dishes | Aluminium utensils have rubbed against dishes | Use a mild abrasive cleaner to eliminate those marks |
| Detergent left in dispenser | Dishes block detergent dispenser | Re-loading the dishes properly |
| The dishes aren't drying | Improper loading | Load the dishwasher as suggested in the directions |
| | Too little rinse-aid | Increase the amount of rinse-aid/ refill the rinse-aid dispenser |
| | Dishes are removed too soon | Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can come out. Take out the dishes until the inside temperature is safe to touch. Unload the lower basket first to prevent the dropping water from the upper basket |
| | Wrong program has been selected | With a short program, the washing temperature is lower, decreasing cleaning performance. Choose a program with a long washing time |
| | Use of cutlery with a low-quality coating | Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher |

TROUBLE SHOOTING

Errors


If there is a malfunction, the dishwasher will display error codes to identify these:

| Error | Meaning | Possible cause |
|-------|--|--|
| E1 | Longer inlet time | Faucets is not opened, or water intake is restricted, or water pressure is too low |
| E2 | Not reaching required temperature | Malfunction of heating element |
| E4 | Overflow | Some element of dishwasher leaks |
| E8 | Failure of orientation of distributary valve | Open circuit or break of distributary valve |

⚠ **Warning!** If overflow occurs, turn off the main water supply before calling a service.

⚠ **Warning!** If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.

PRODUCT INFORMATION

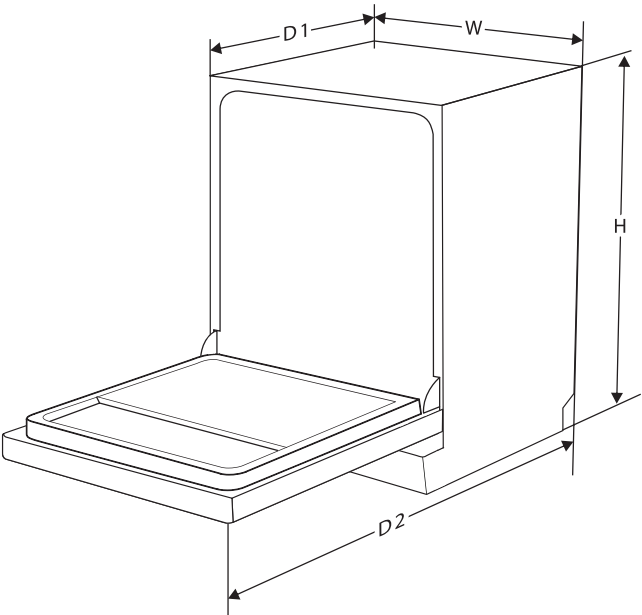

| Dimensions (mm) | |
|-----------------|---------------------------|
| Height (H) | 815 |
| Width (W) | 598 |
| Depth (D1) | 550 (with door closed) |
| Depth (D2) | 1150 (with door open 90°) |

PRODUCT INFORMATION

| | |
|---|-----------------------------|
| Model number(s): | E14FID |
| Standard place settings: | 14 |
| Energy efficiency class: | 3.5 stars |
| Water consumption class: | 4.5 stars |
| Standard cleaning cycle: | Eco |
| Energy consumption of the standard cleaning cycle: | 0.70kWh |
| Water consumption of the standard cleaning cycle: | 12.0L |
| Program duration of the standard cleaning cycle: | 170 mins |
| Noise level: | 49dB(A) re 1pW |
| Mounting: | Built-in |
| Built-in option: | Yes |
| Power consumption: | 1760 - 2100W |
| Voltage & frequency: | AC 220 - 240V ~ / 50Hz |
| Water pressure (flow pressure): | 0.04 - 1.0MPa = 0.4 - 10bar |

- ① Specification according to EU Directive 1016/2010 & 1059/2010.
- ① Technical specifications of this product are subject to specification without notice to improve the quality of the product.
- ① Figures in this manual are schematic and may not match the product exactly.
- ① Values stated on markers on this product or in the other published documentation accompanying with this product are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of this product, these values may vary.

MANUFACTURER GUARANTEE

This warranty is provided in Australia by Glen Dimplex Australia Pty Limited ABN 69 118 275 460 (**Phone number 1800 444 357**) and in New Zealand by Glen Dimplex New Zealand Limited NZBN 9429000069823 (**Phone number 09 274 8265**) in respect of the Euromaid product.

1. Euromaid Express Warranty

Subject to the exclusions below, we warrant that the product will not have any electrical or mechanical breakdowns within:

- Ⓐ In the case of **Euromaid** products used for personal, domestic or household purposes, a period of **2 years** from the date the product is purchased as a brand-new product from a retailer located in Australia / New Zealand.
 - Ⓑ In the case of **Euromaid** products used for purposes other than personal, domestic or household purposes (including business or commercial use), a period of 90 days from the date the product is purchased as a brand-new product from a retailer located in Australia / New Zealand. **Euromaid** products are designed and intended for domestic use only; and
 - Ⓒ All warranty repairs must be carried out by Glen Dimplex or their nominated service agent.
- ① **Note: warranty periods detailed above may vary in line with agreements with select retail and builder partners and may differ between Australia and New Zealand.**

The benefits conferred by this express warranty are in addition to the Consumer Guarantees referred to in section 3 and any other statutory rights you may have under the Australian / New Zealand Consumer Law and/or other applicable laws.

MANUFACTURER GUARANTEE

2. Warranty Exclusions

This express warranty does not apply where:

- Ⓐ The product has been installed, used or operated otherwise than in accordance with the product manual or other similar documentation provided to you with the product;
- Ⓑ The product requires repairs due to damage resulting from accident, misuse, incorrect installation, insect or vermin infestation, improper liquid spillage, cleaning or maintenance, unauthorised modification, use on an incorrect voltage, power surges and dips, voltage supply problems, tampering or unauthorised repairs by any persons, use of defective or incompatible accessories or exposure to abnormally corrosive conditions, events independent of human control which occurred after the goods left the control of Glen Dimplex;
- Ⓒ The repair relates to the replacement of consumable parts such as fuses and bulbs or any other parts of the product which require routine replacement;
- Ⓓ You are unable to provide us with reasonable proof of purchase for the product;
- Ⓔ The breakdown occurs after the expiry of the express warranty period set out in section 1 or;
- Ⓕ The product was not purchased in Australia / New Zealand as a brand-new product.

3. Consumer Guarantees

Our goods come with guarantees that cannot be excluded under the Australian / New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MANUFACTURER GUARANTEE

4. How to Make a Claim

You may make a claim under this warranty through our website, contacting our customer care line or via email. Contact details for Glen Dimplex Australia and New Zealand can be found at the end of this document.

To make a valid claim under this warranty, you must:

- a) Lodge the claim with us as soon as possible and no later than 14 days after you first become aware of the breakdown;
- b) Provide us with the product serial number;
- c) Provide us with reasonable proof of purchase for the product. This can take the form of a store receipt, new home handover form or other payment receipt documentation; and
- d) If required by us, provide us (or any person nominated by us) with access to the premises at which the product is located at times nominated by us (so that we can inspect the product).

5. Warranty Claims

If you make a valid claim under this warranty and none of the exclusions set out in section 2 apply, we will, at our election, either repair the product or replace the product with a product of identical specification (or where the product is superseded or no longer in stock, with a product of as close a specification as possible).

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. Products are designed and supplied for normal domestic use. We will not be liable to you under this warranty for business loss or damage of any kind whatsoever.

Contact our Customer Care Team

Glen Dimplex Australia Pty Ltd

Ph: 1800 444 357
customer.care.ha@glendimplex.com.au
www.glendimplex.com.au

Glen Dimplex New Zealand Ltd

Ph: 09 274 8265
nztechserv@glendimplex.co.nz
www.glendimplex.co.nz

NOTES

[illegible]

READ THE INSTRUCTION BOOKLET BEFORE INSTALLING & USING THE APPLIANCE.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance. The manufacturer is not responsible for any inaccuracies, due to printing or transcription errors, contained in this manual. In addition, the appearance of the figures reported is also purely indicative.

The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics. Glen Dimplex constantly seeks ways to improve the specifications and designs of their products. Whilst every effort is made to produce up to date literature, this document should not be regarded as an infallible guide. Actual product only should be used to derive cut out sizes.

All appliances must be installed by a qualified person/s with adherence to the relevant electrical, plumbing and building codes, with compliance being issued as required by state or national legislation.

Additionally, all upright cookers must have the anti-tilt device installed correctly in adherence to the relevant standards by a licenced installer.

For maximum effectiveness and efficiency all rangehoods should be installed with the use of ductwork, by a licenced installer with adherence to the relevant state and national building codes and regulations.

All Glen Dimplex appliances are for Domestic use only, and must be installed by a licenced installer into Domestic Applications only, without exception and to the required Authorities guidelines. Any installation outside of this will **VOID** warranty. Alfresco areas are not a Domestic application.

Euromaid

Distributed by

Glen Dimplex Australia Pty Ltd

Ph: 1800 444 357

customer.care.ha@glendimplex.com.au

www.glendimplex.com.au

Glen Dimplex New Zealand Ltd

Ph: 09 274 8265

nztechserv@glendimplex.co.nz

www.glendimplex.co.nz

For service advice, please contact the Customer Care Centre by phone or email above.

For full terms and conditions, or to register your product warranty, please visit our website.

Euromaid

euromaid.com.au | euromaid.co.nz