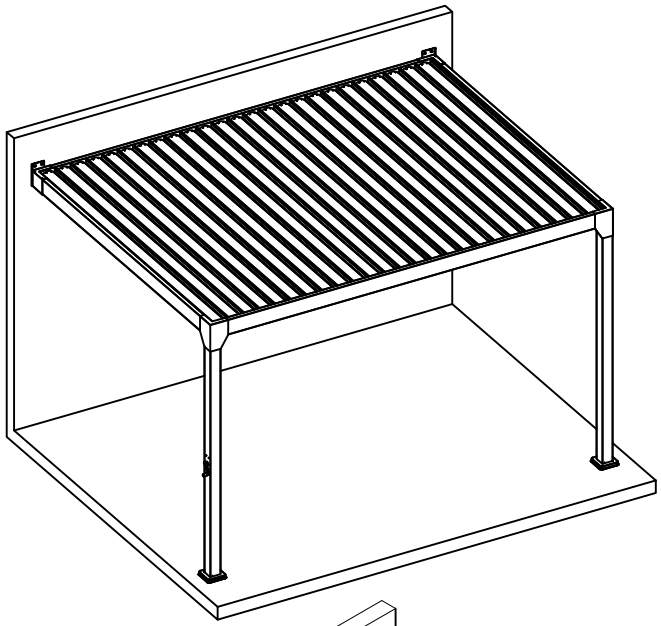
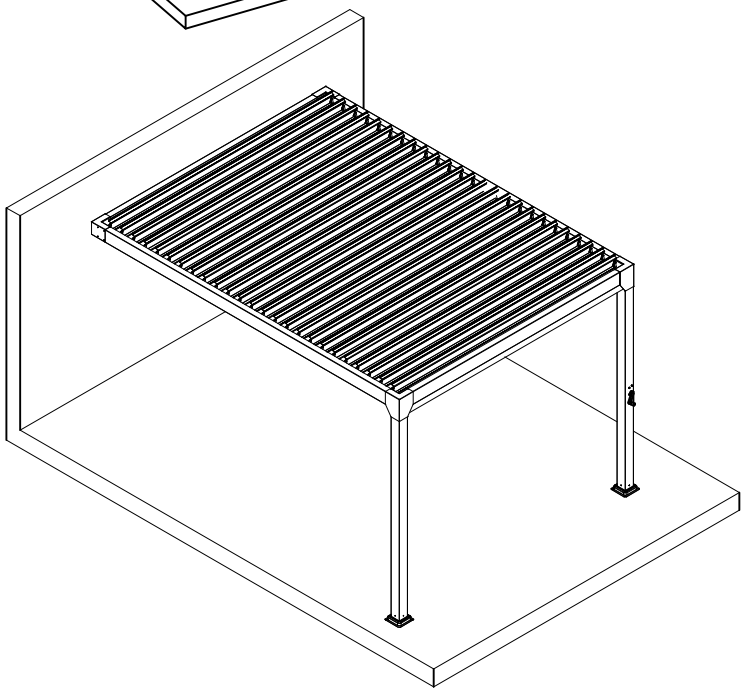

3×4 wall-mounted pergola

G30182/G30183/G30184/G30185
G30186/G30187/G30188/G30189



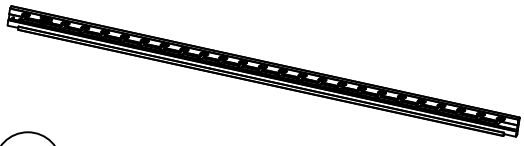




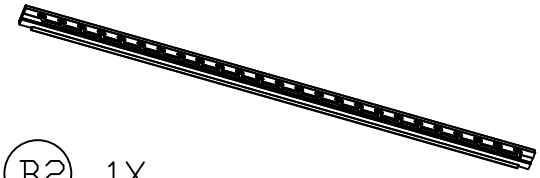
A1 1X



A2 1X



B1 1X




B2 1X



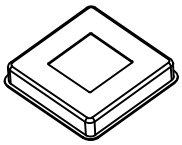
C1 2X



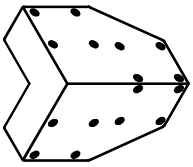
D 25X



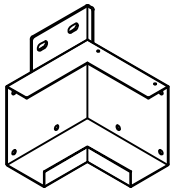
E 1X



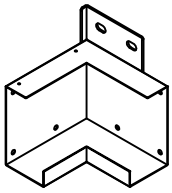
F 2X



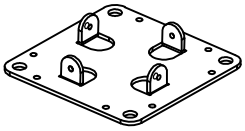
G 2X




G1 1X



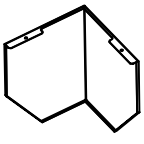
G2 1X



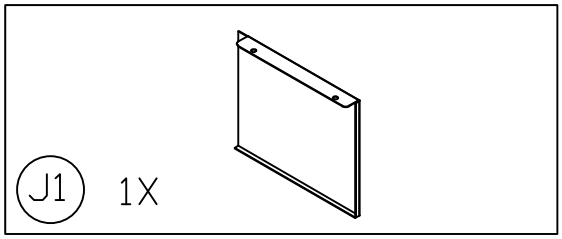
H 2X

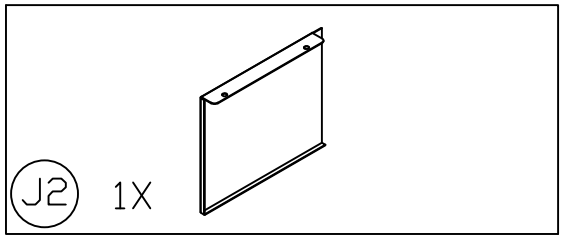


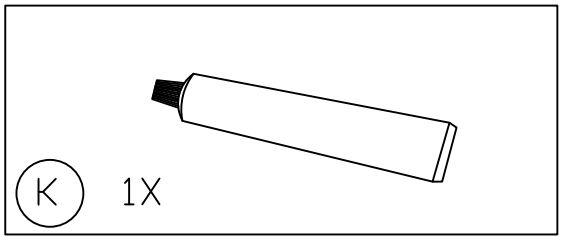
I 1X

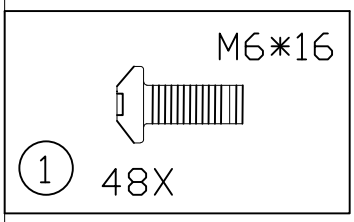


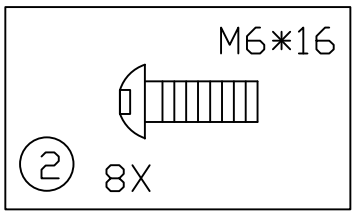
J 2X

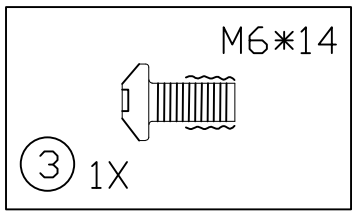

J1
1X

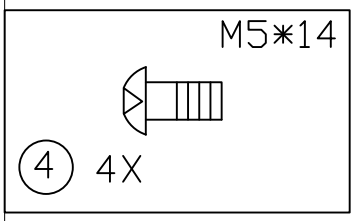

J2
1X

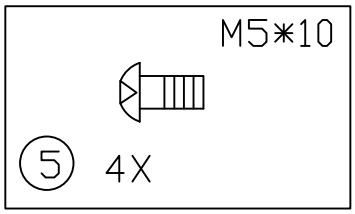

K
1X

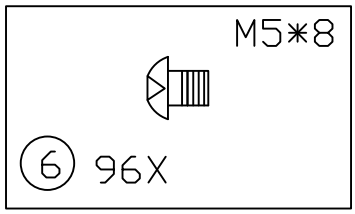

M6*16
1
48X

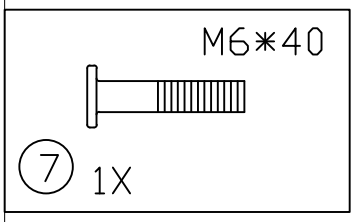

M6*16
2
8X

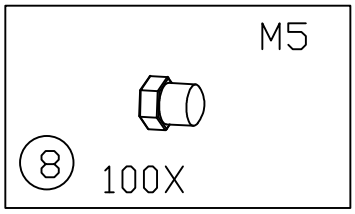

M6*14
3
1X

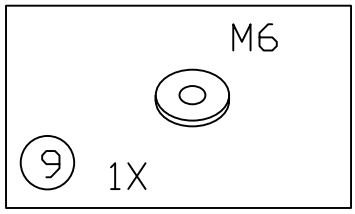

M5*14
4
4X

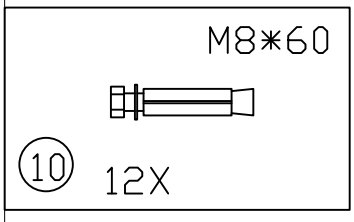

M5*10
5
4X

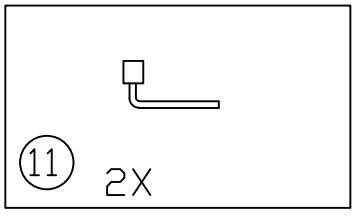

M5*8
6
96X

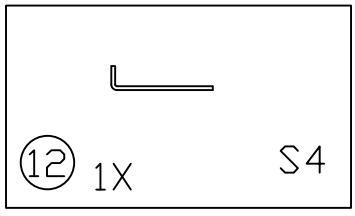

M6*40
7
1X

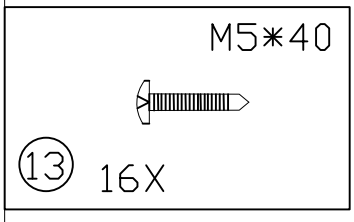

M5
8
100X

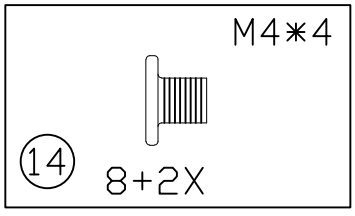

M6
9
1X


M8*60
10
12X


11
2X


12
1X
S4

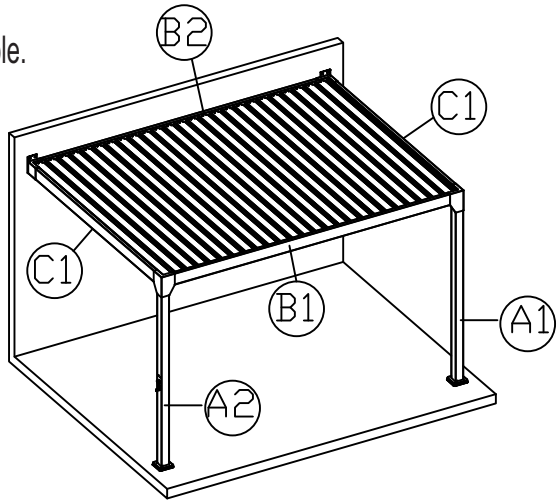

M5*40
13
16X


M4*4
14
8+2X

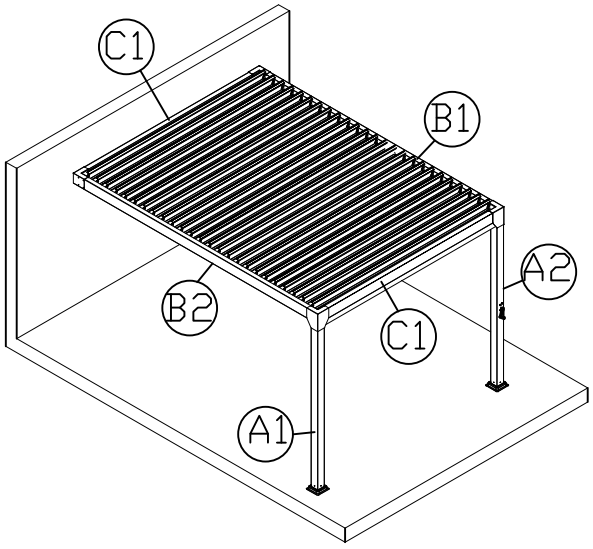
WARNING

1. Installation must be carried out on a flat ground of at least 5 x 5 meters. Soft protective pads should be placed under the parts that come into contact with the ground to prevent scratches on the product surface!
2. After opening the box, first check the quantity of parts against the parts list.
3. The load-bearing capacity is 40kg per square meter. In case of extreme weather conditions such as snowfall and icing, if the weight exceeds this limit, the louver must be opened in advance.
4. After the blinds are closed, do not turn the handle too hard any more, or the internal mechanism may be damaged!

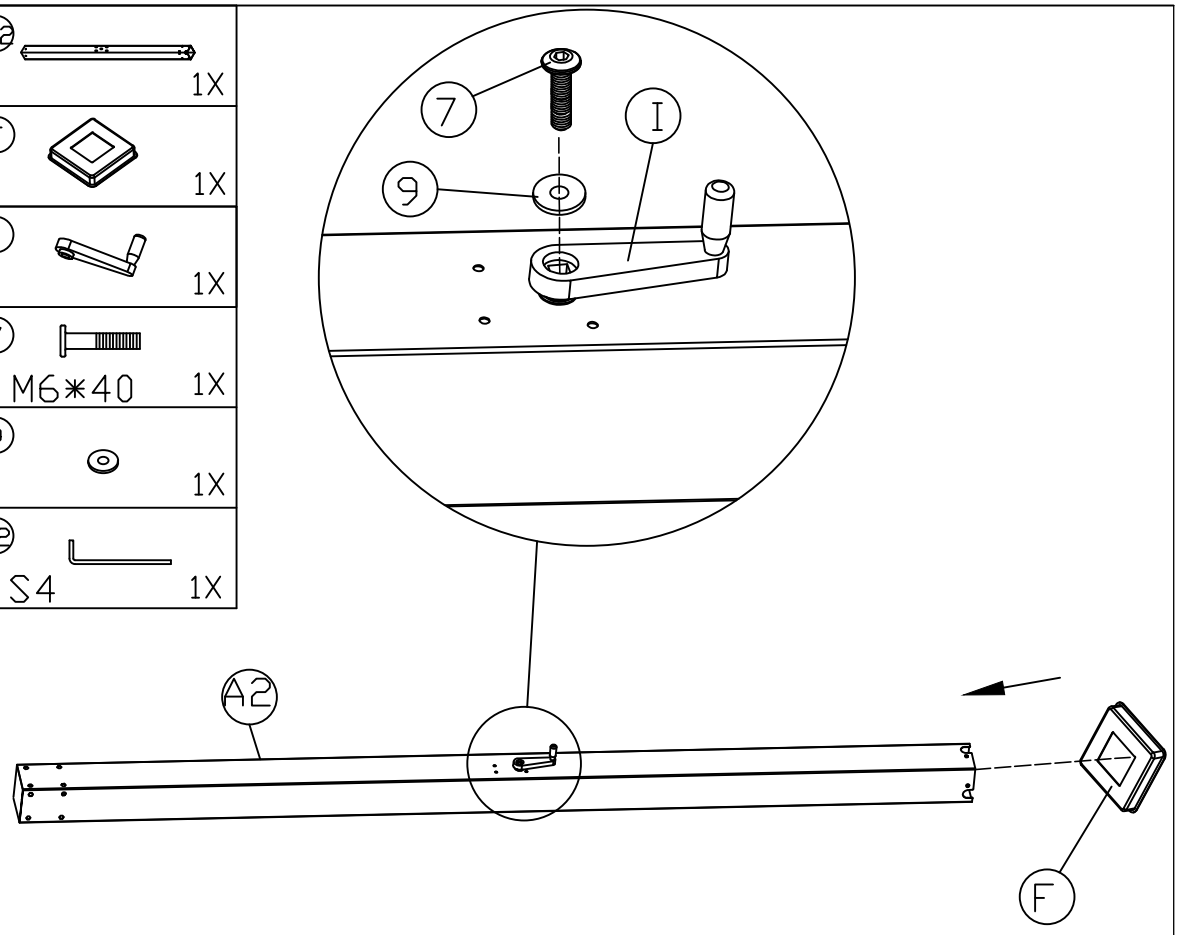
Installation Method 1:
The subsequent installation steps will follow this scheme as an example.



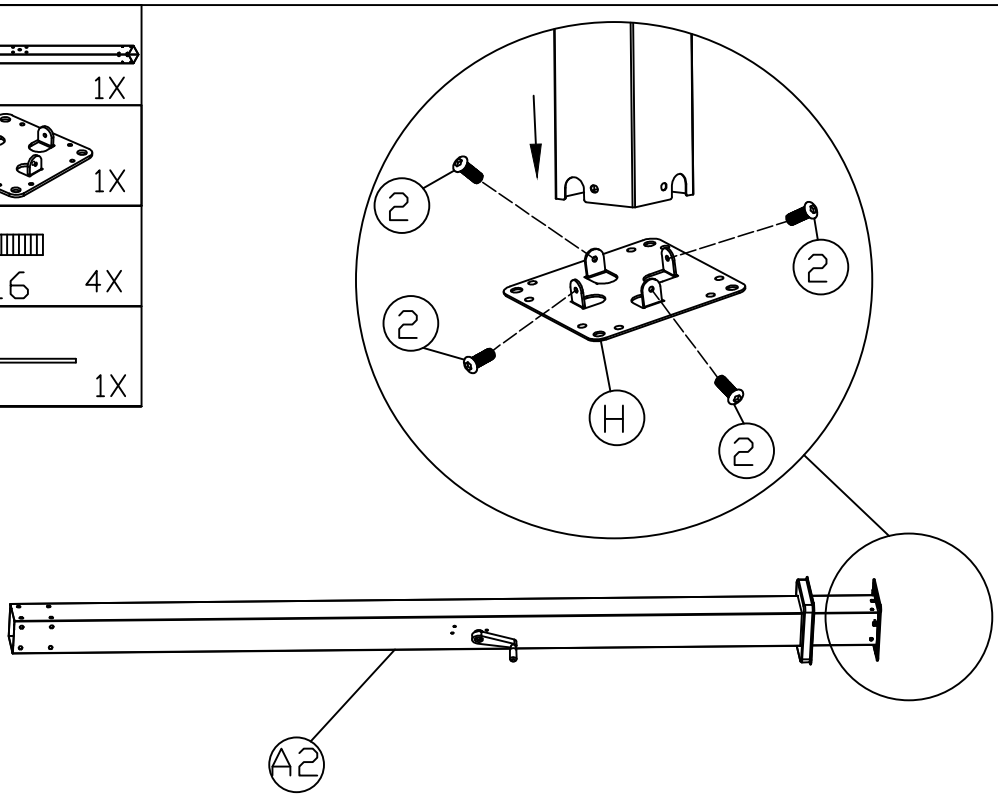
Installation Method 2:

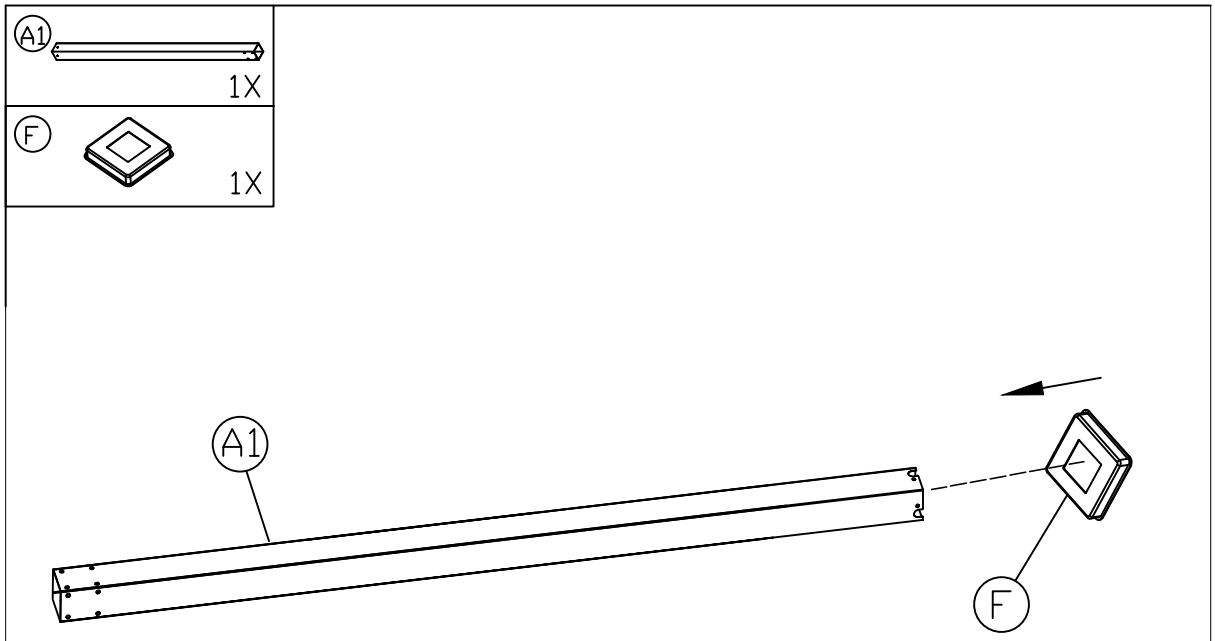


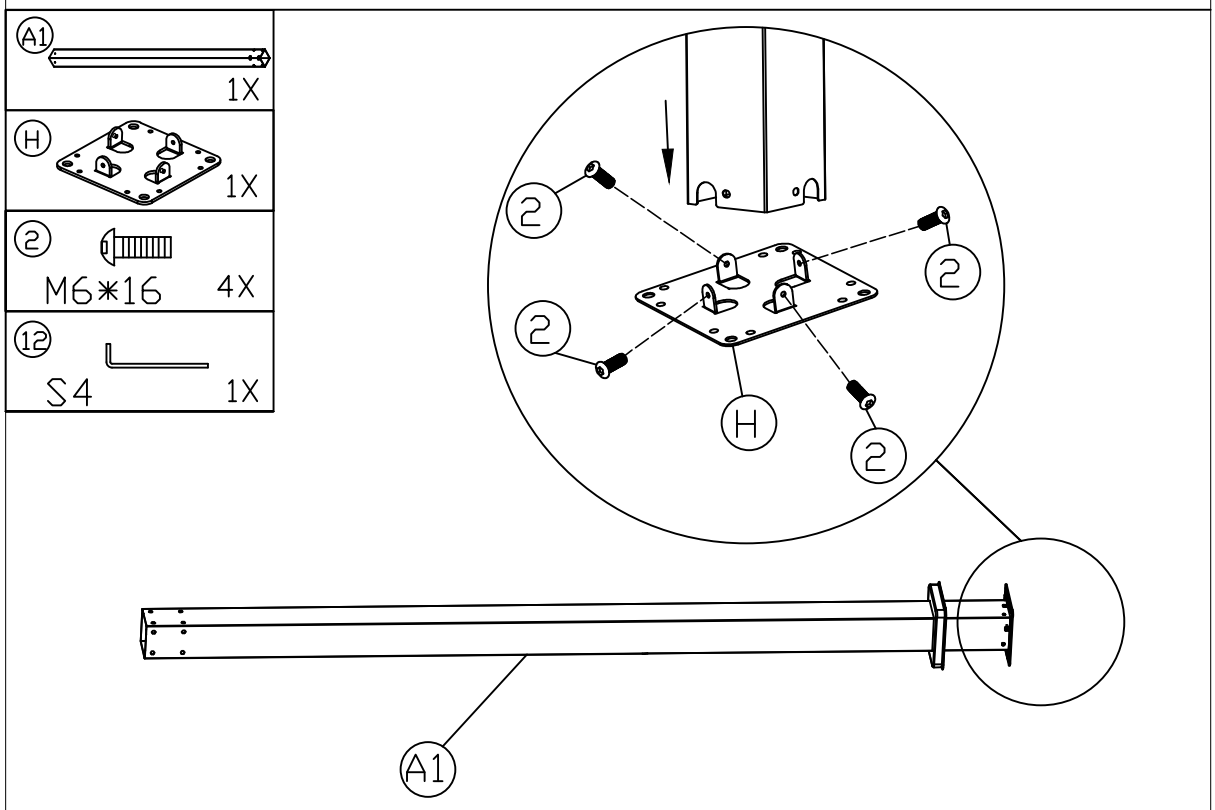
A2		1X
F		1X
I		1X
7	M6*40	1X
9		1X
12	S4	1X

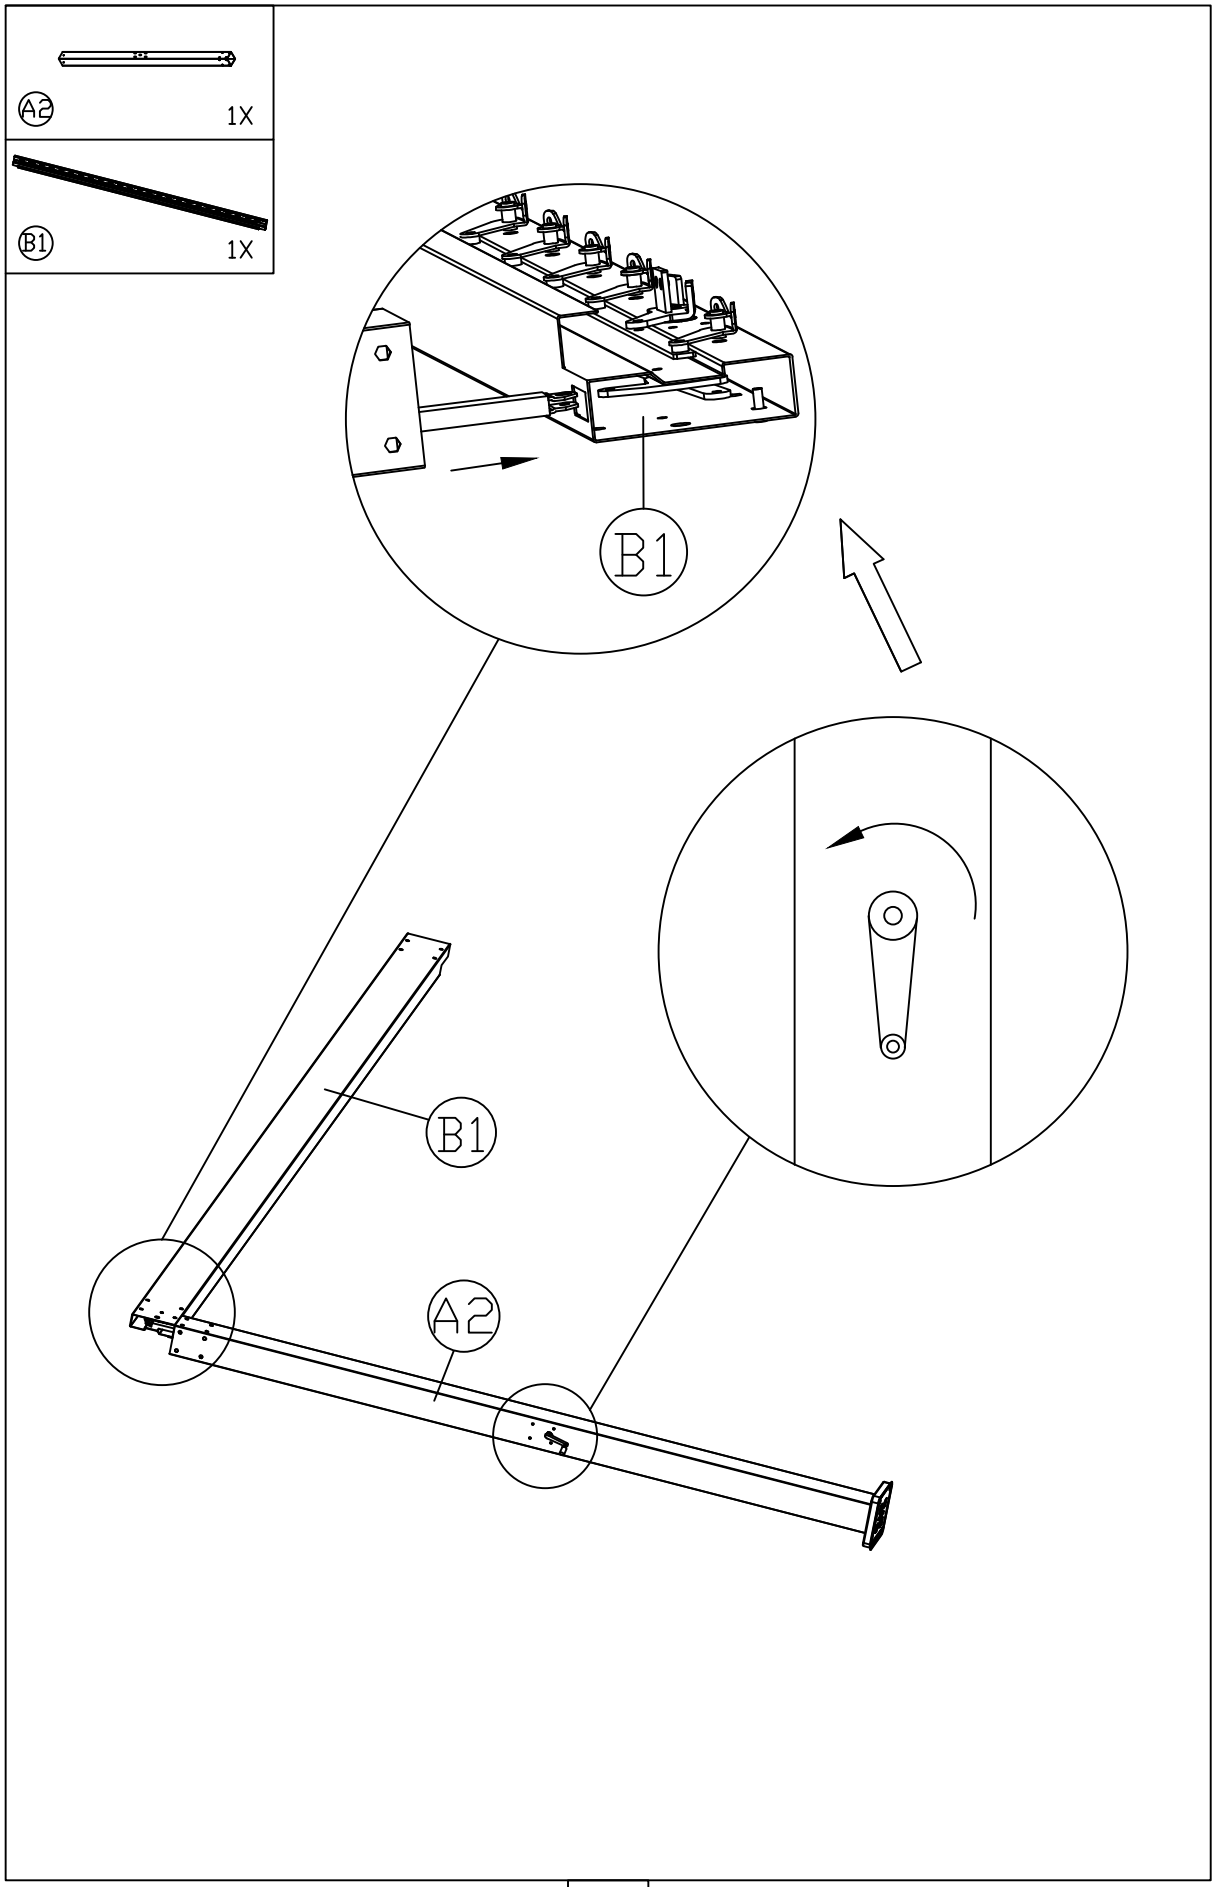


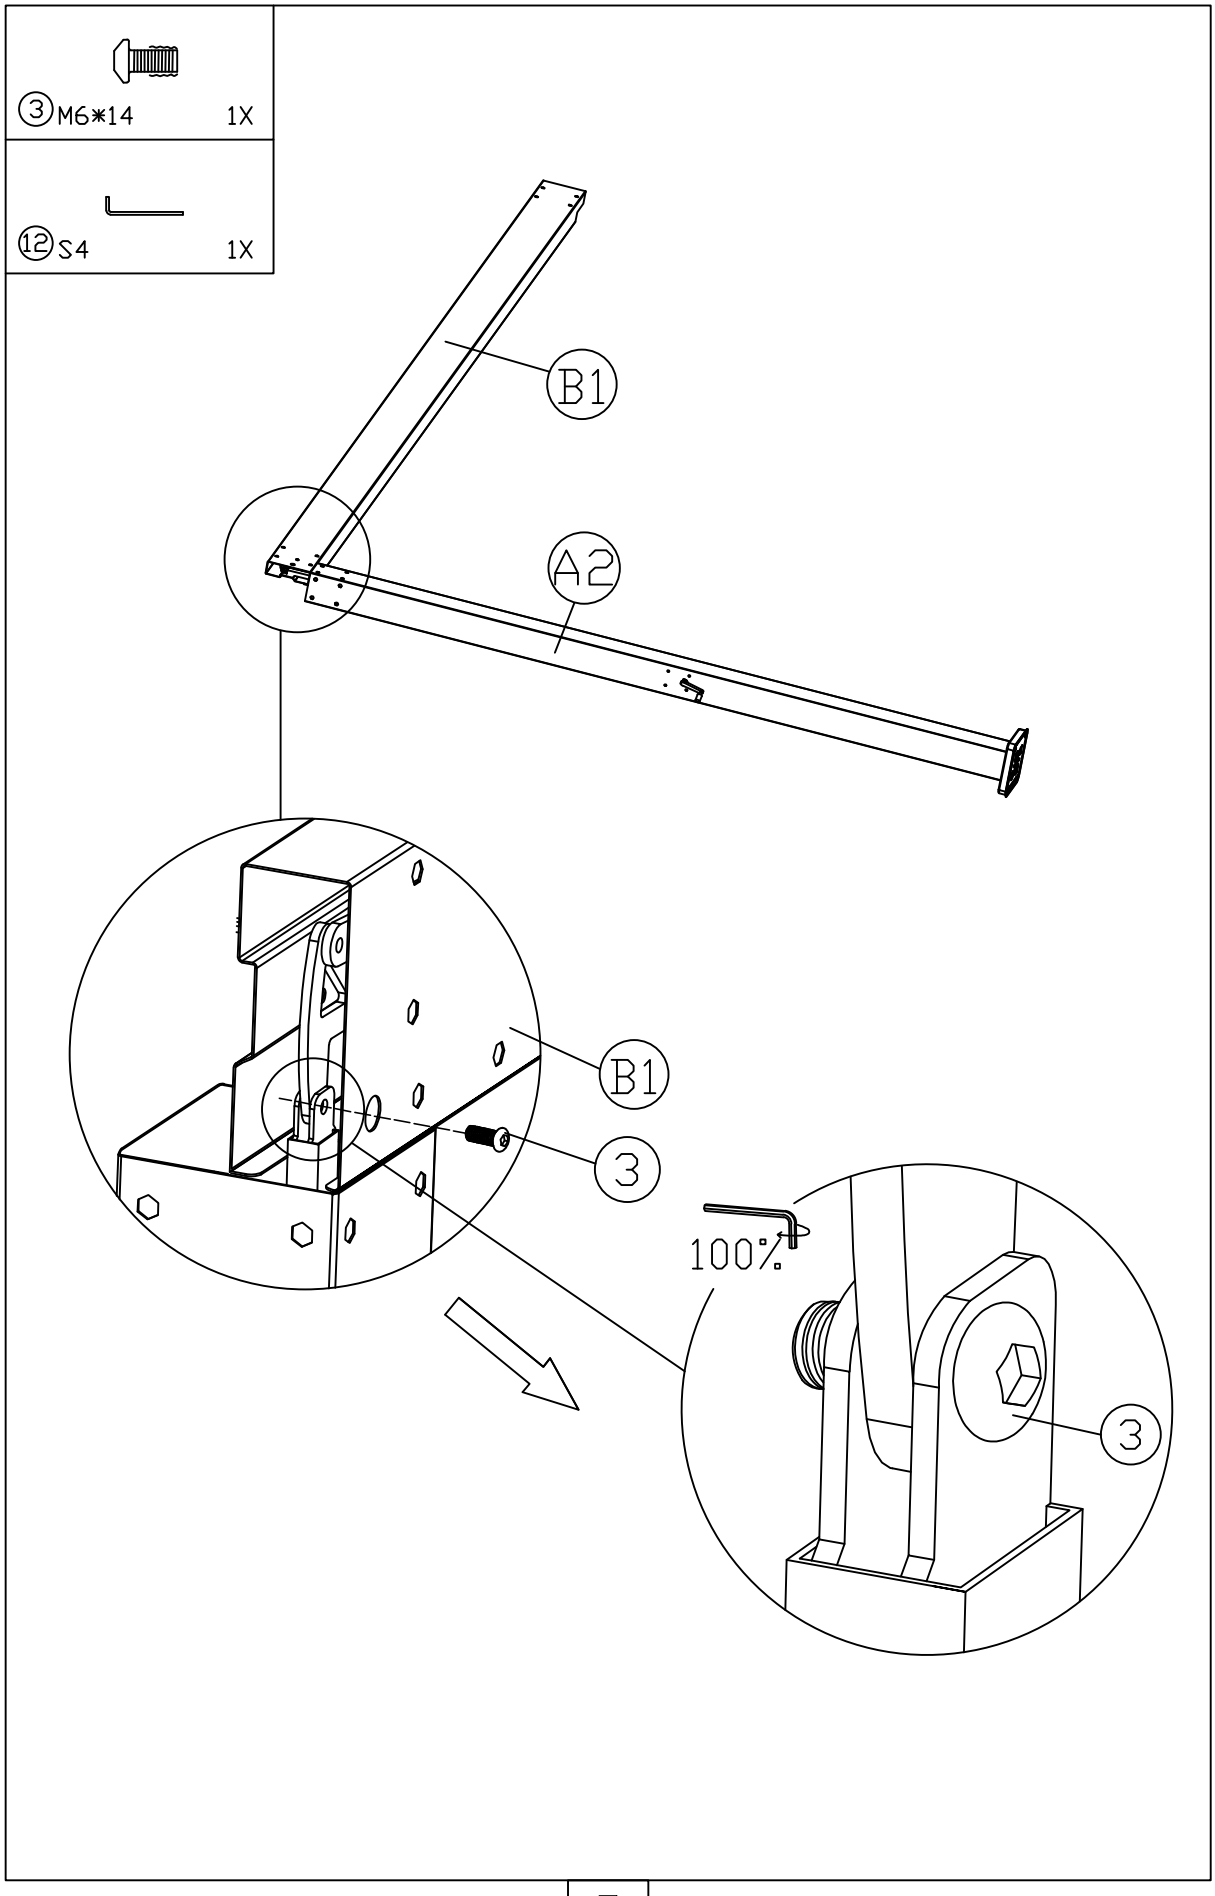
A2		1X
H		1X
2	M6*16	4X
12	S4	1X

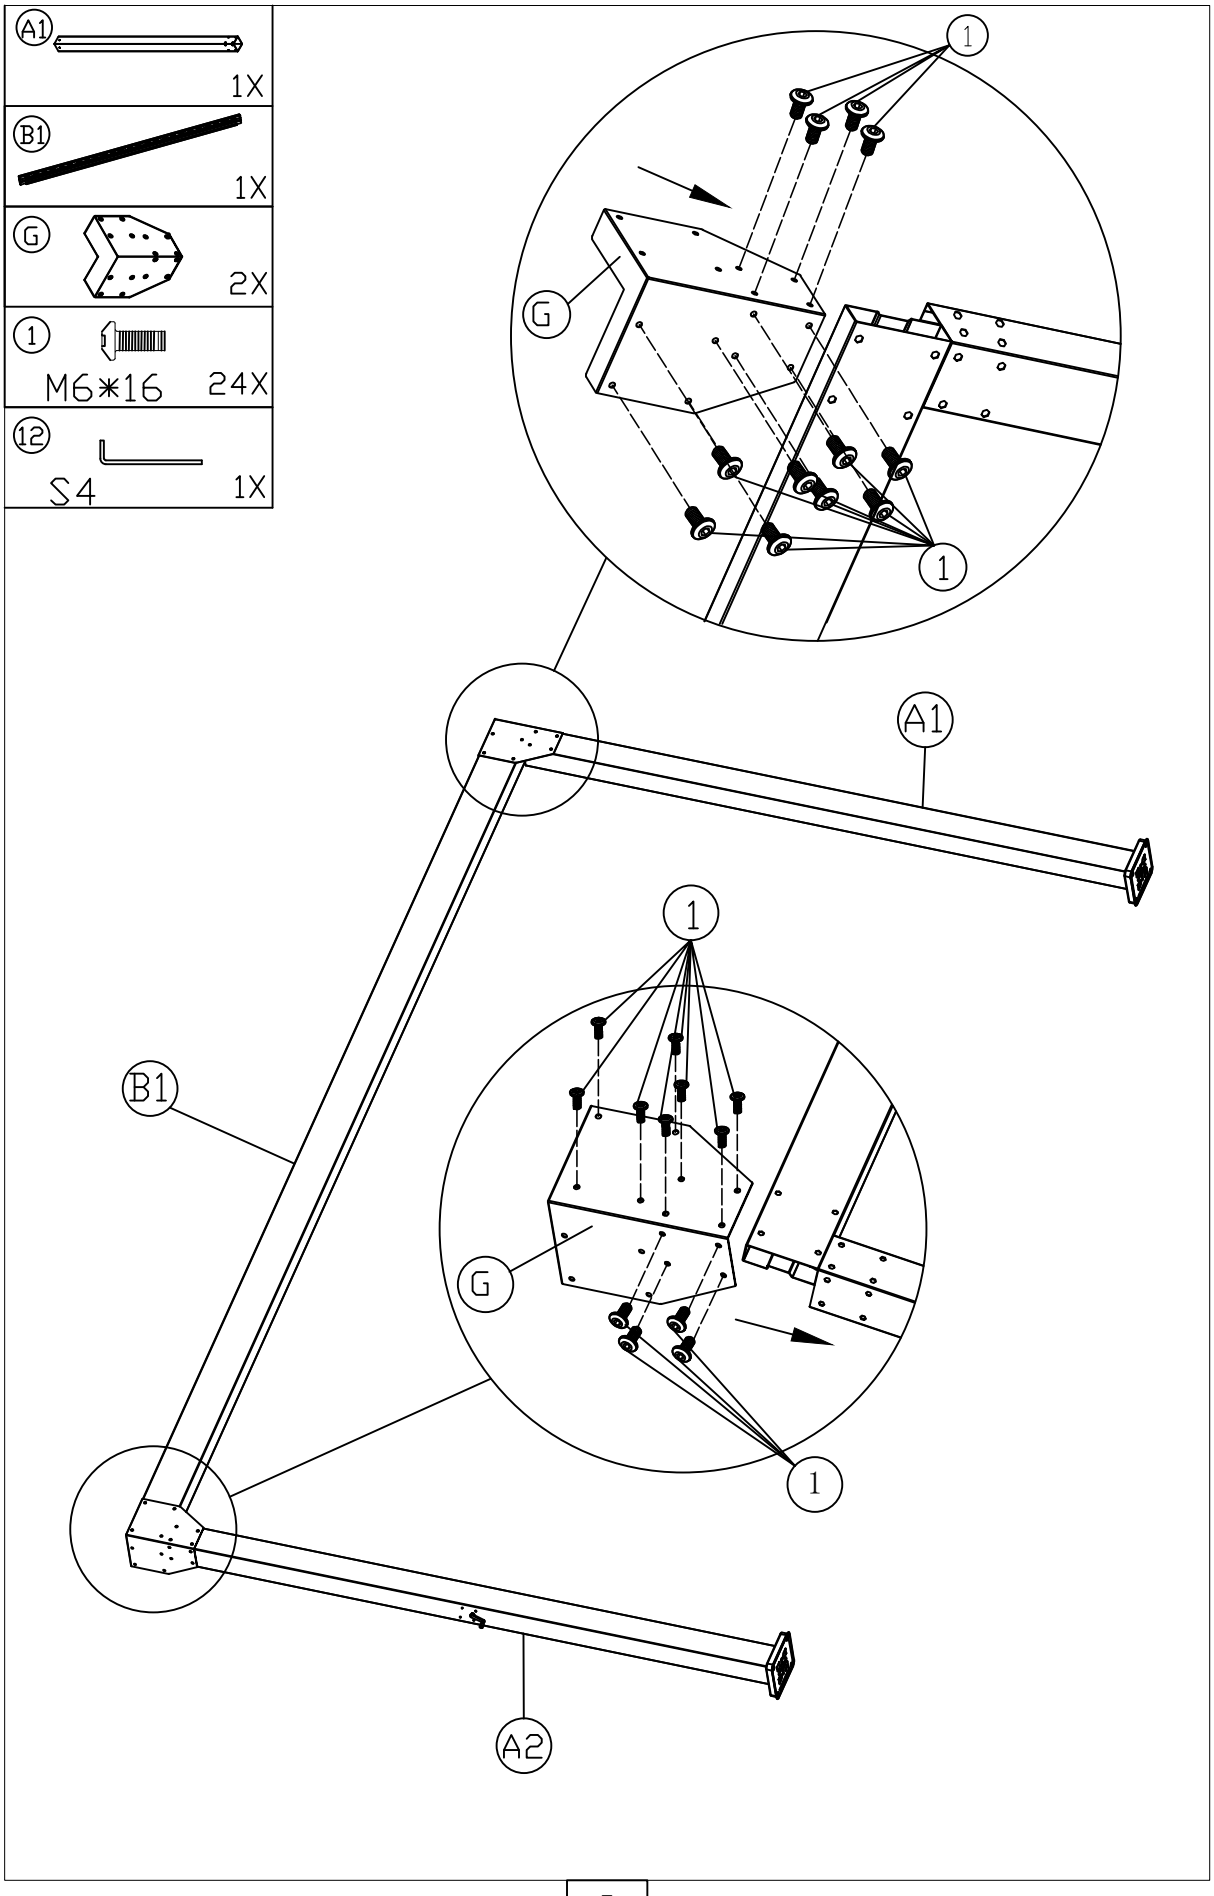


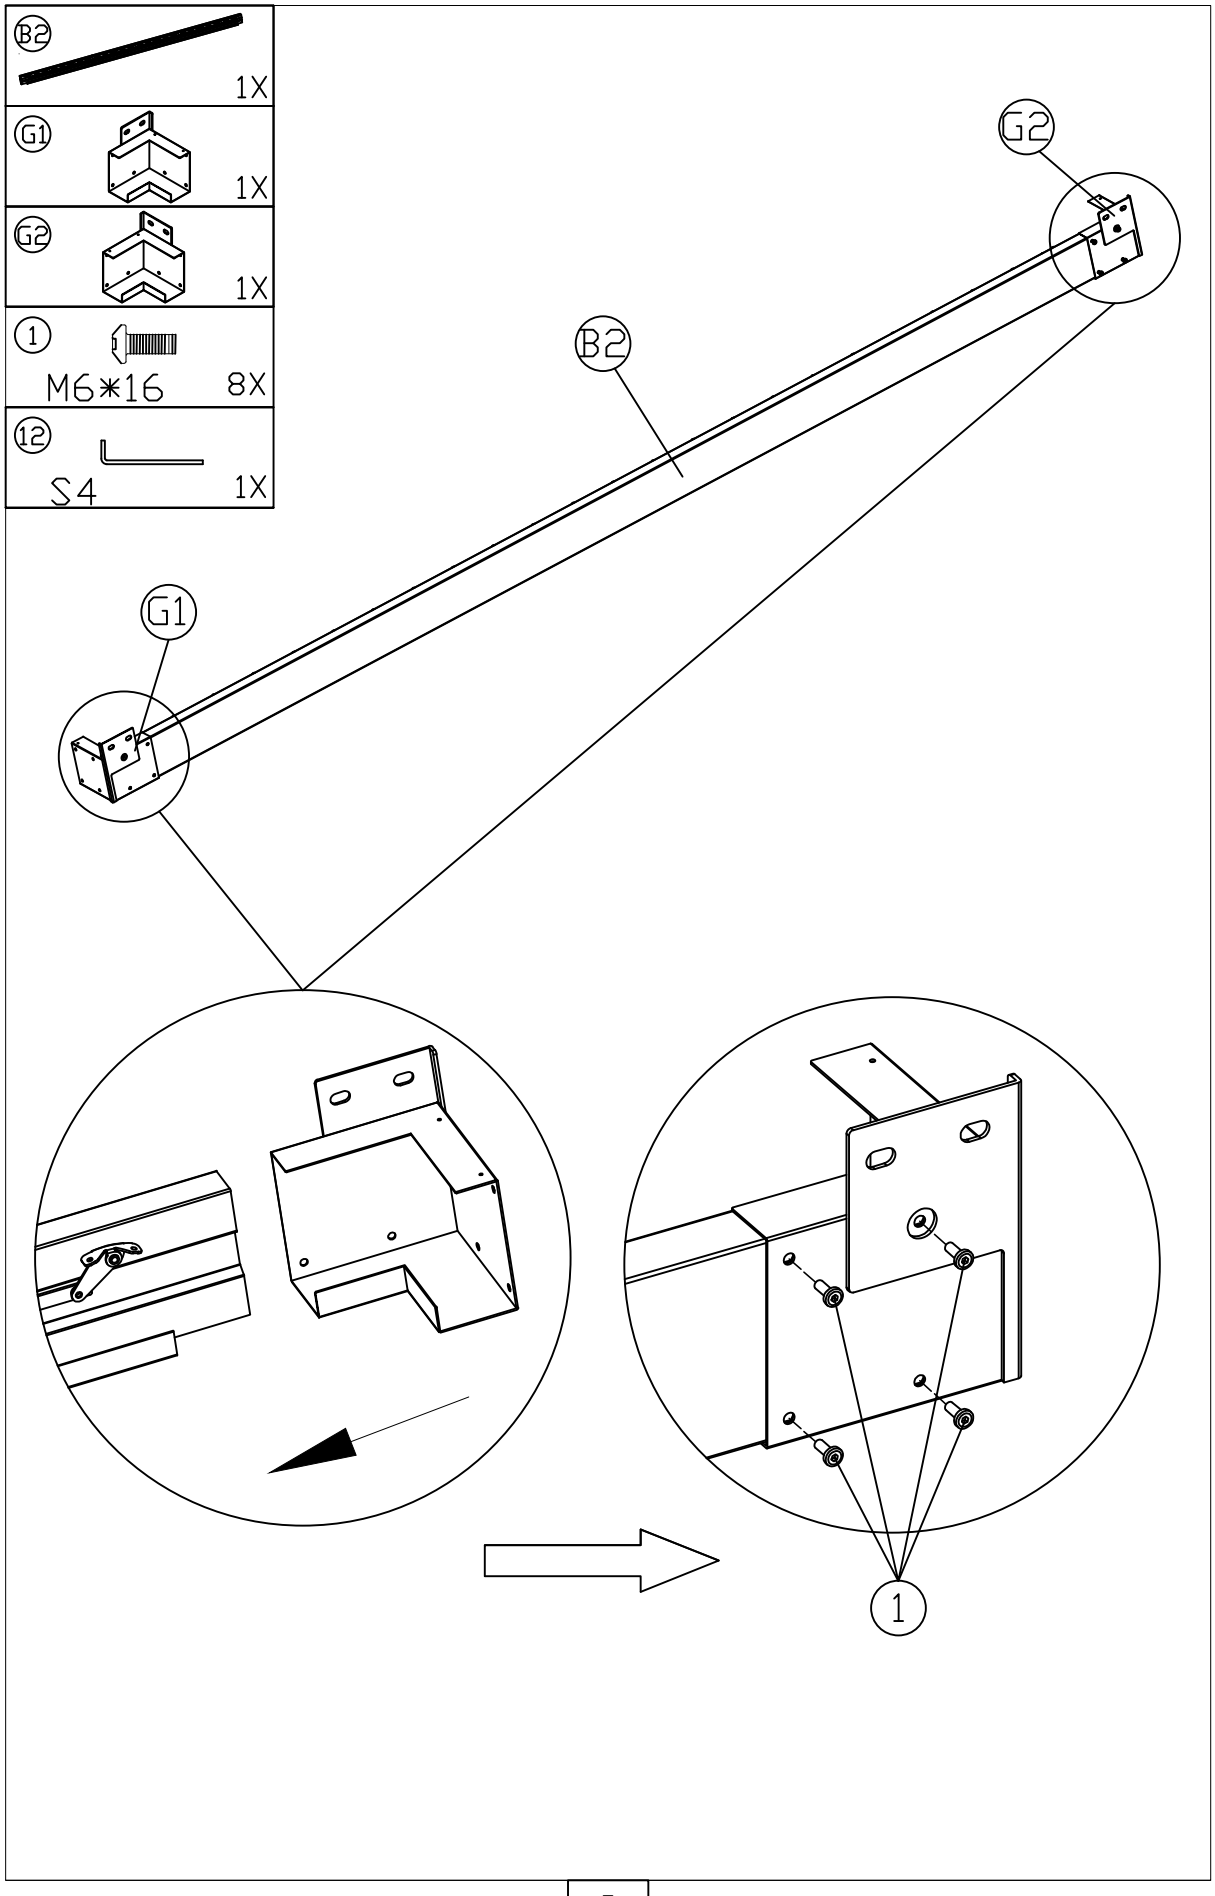

A1
1X
F
1X
A1
F


A1
1X
H
1X
2
M6*16
4X
12
S4
1X
2
2
2
H
2
A1


A2
1X
B1
1X
B1
B1
A2

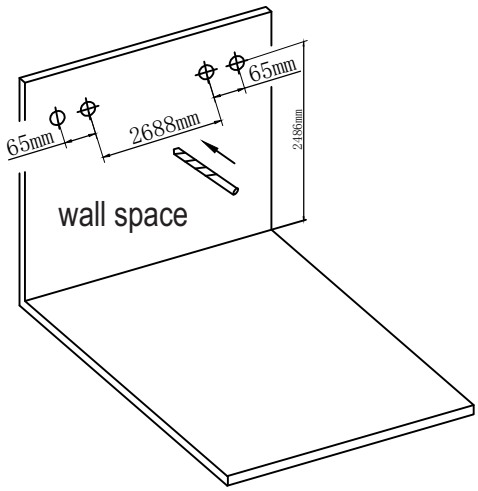

③M6*14 1X
⑫S4 1X
B1
A2
B1
3
100%
3

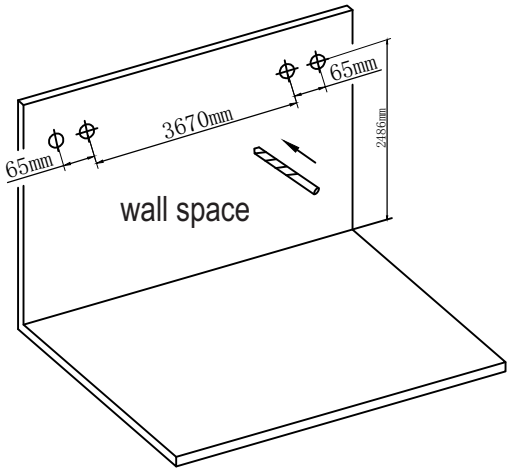

A1
1X
B1
1X
G
2X
1
M6*16
24X
12
S4
1X
1
G
1
A1
1
B1
G
1
A2

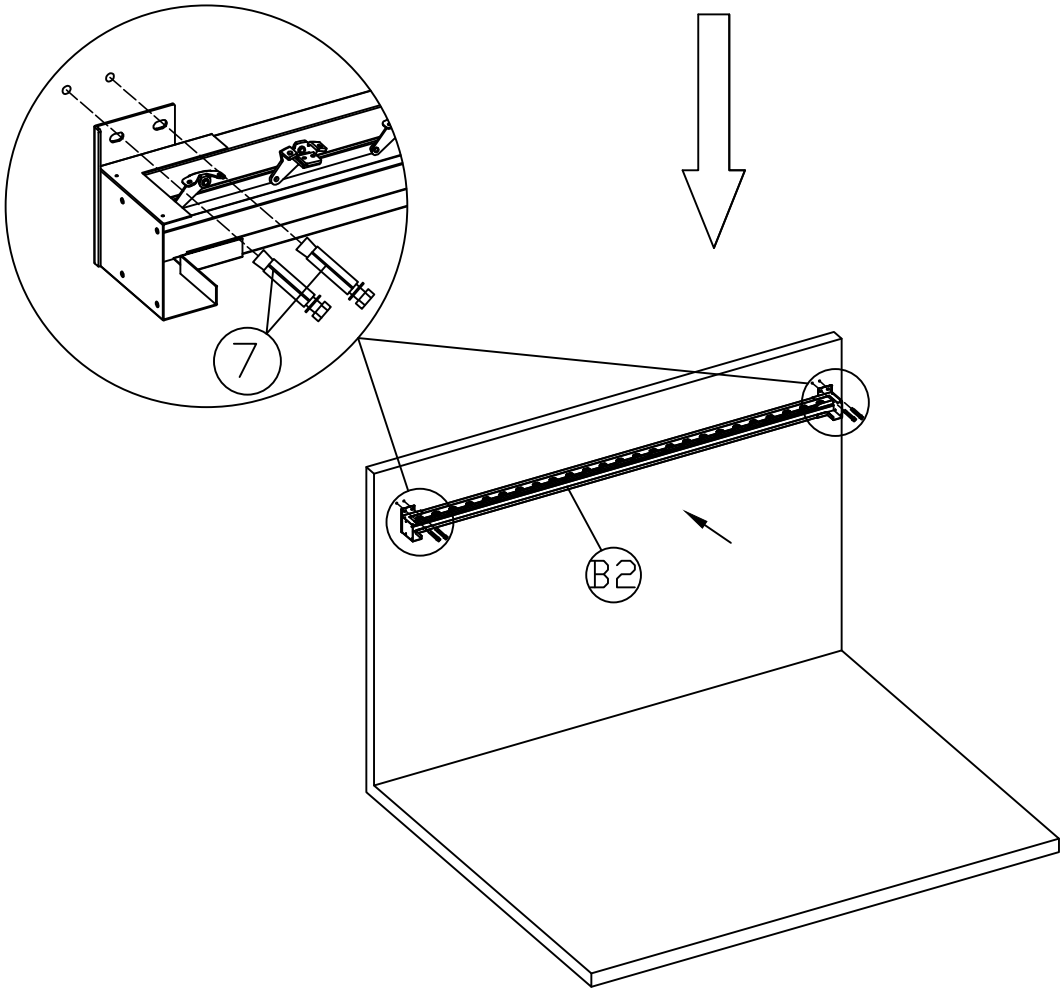

B2
1X
G1
1X
G2
1X
1
M6*16
8X
12
S4
1X
G2
B2
G1
1

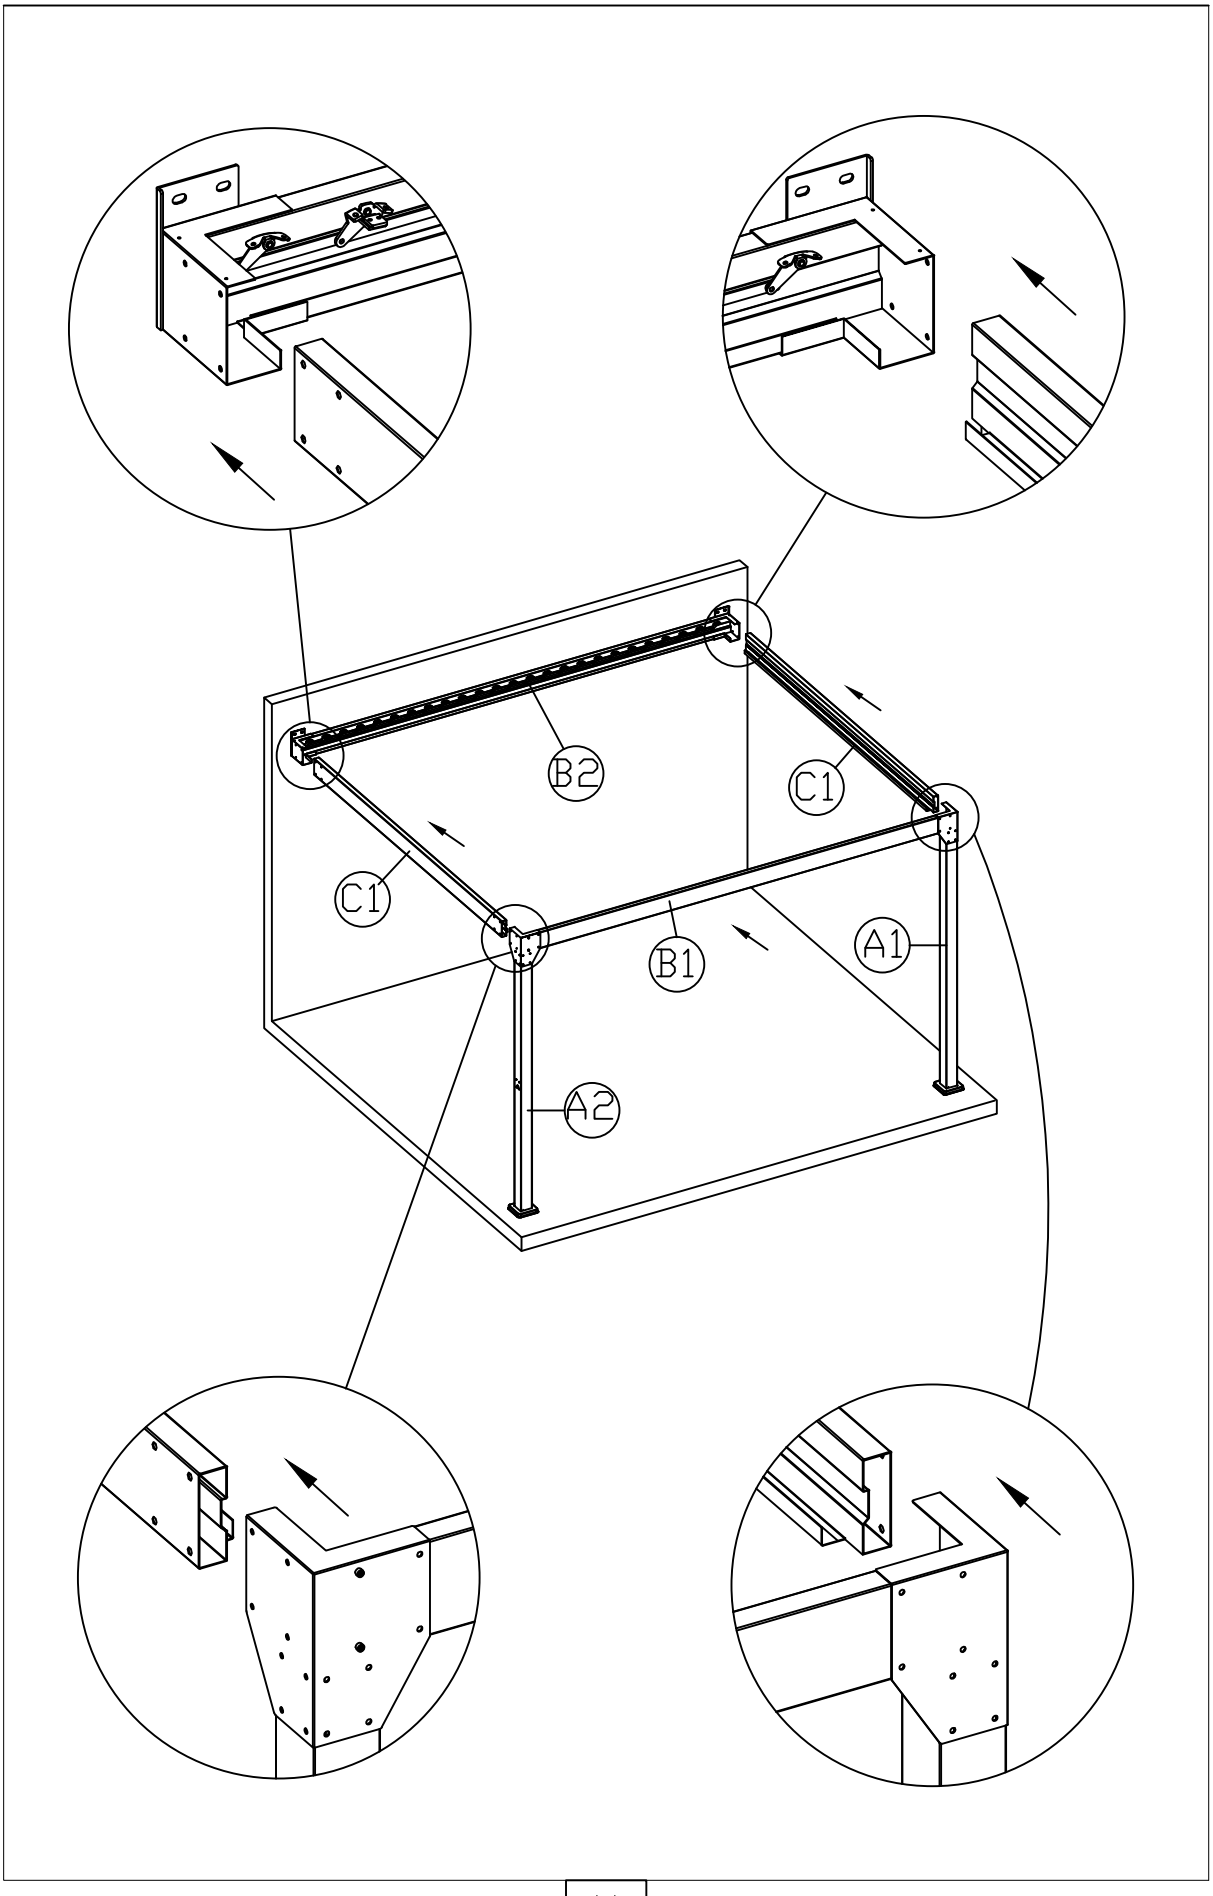


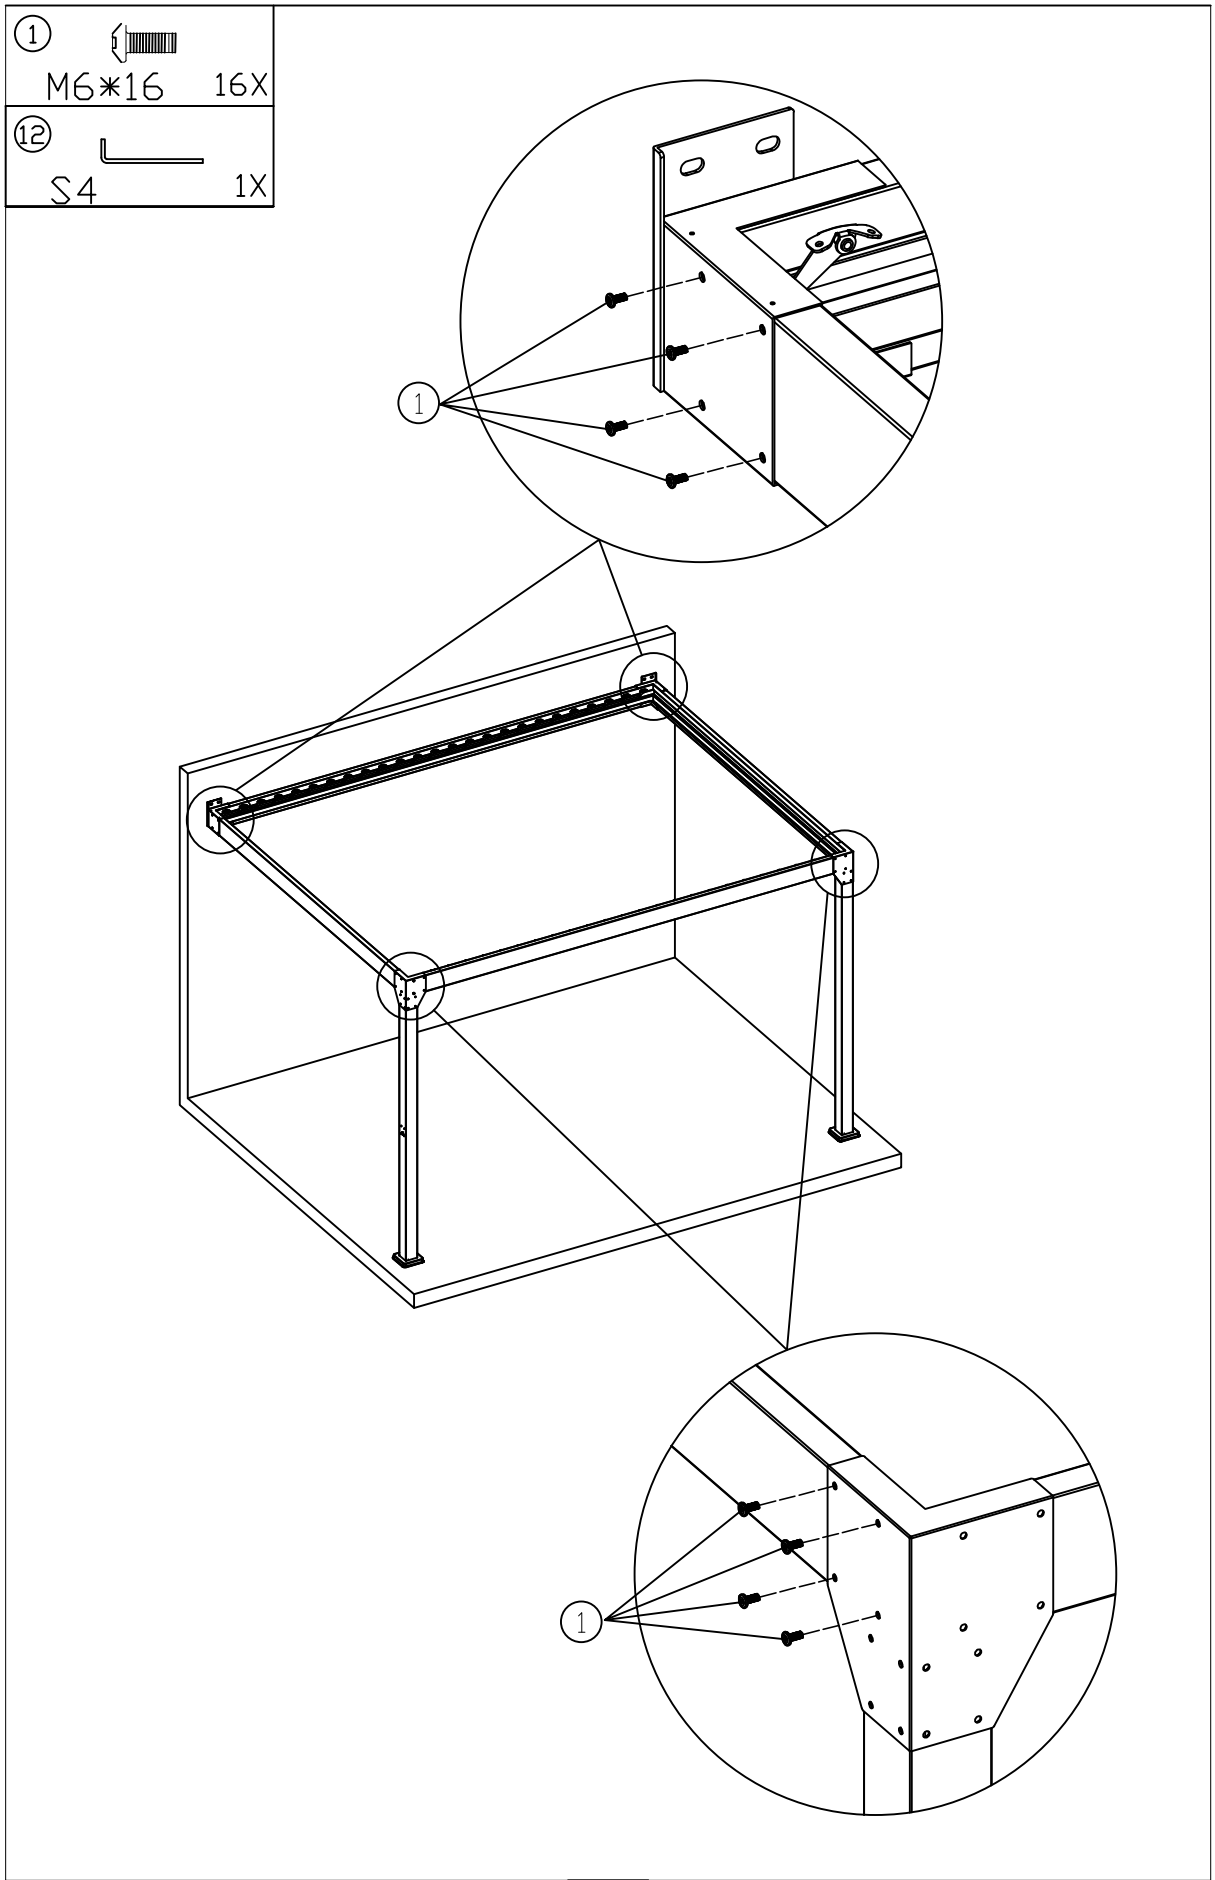
⑦ M8*60 4X


65mm
65mm
2688mm
2486mm
wall space


65mm
65mm
3670mm
2486mm
wall space


7
B2

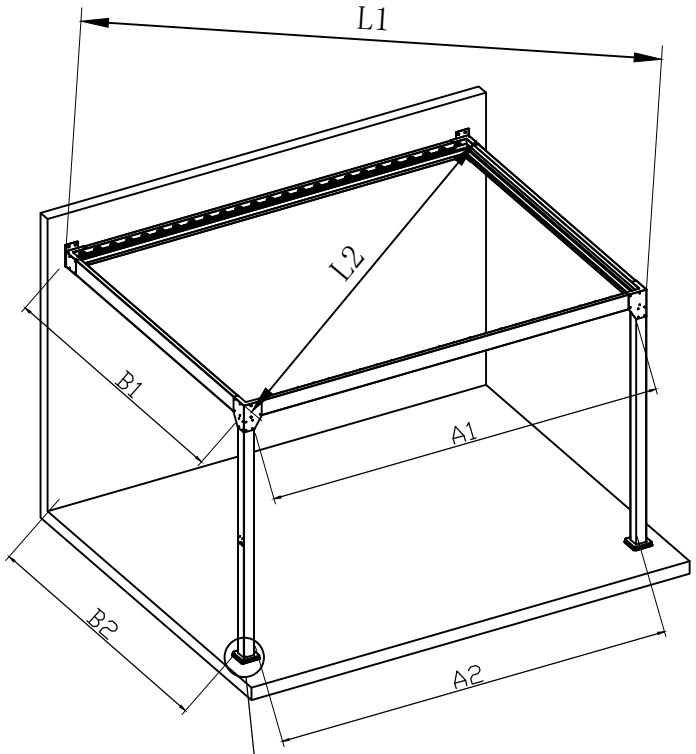

B2
C1
C1
B1
A1
A2


①
M6*16
16X
⑫
S4
1X
1
1

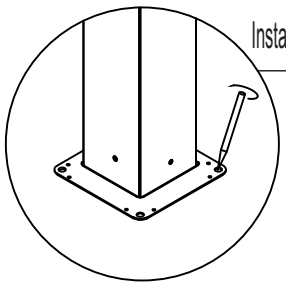
⑩ M8*60 8X

⑬ M5*40 16X

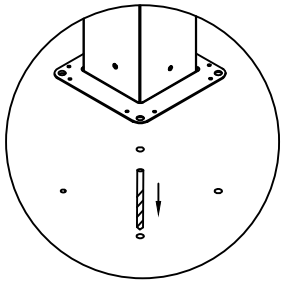
L1=L2
A1=A2
B1=B2



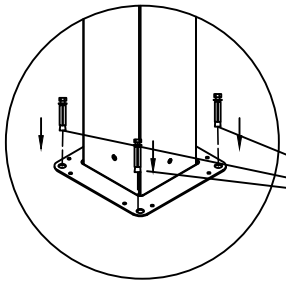
Installation method of concrete floor



1

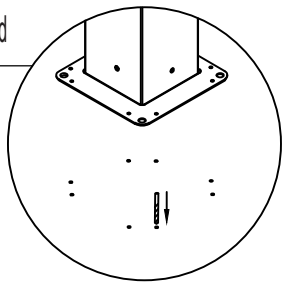


2



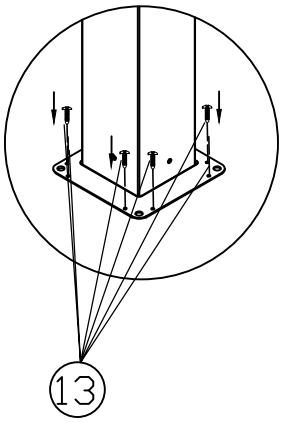
3 ⑩

Wooden board installation method

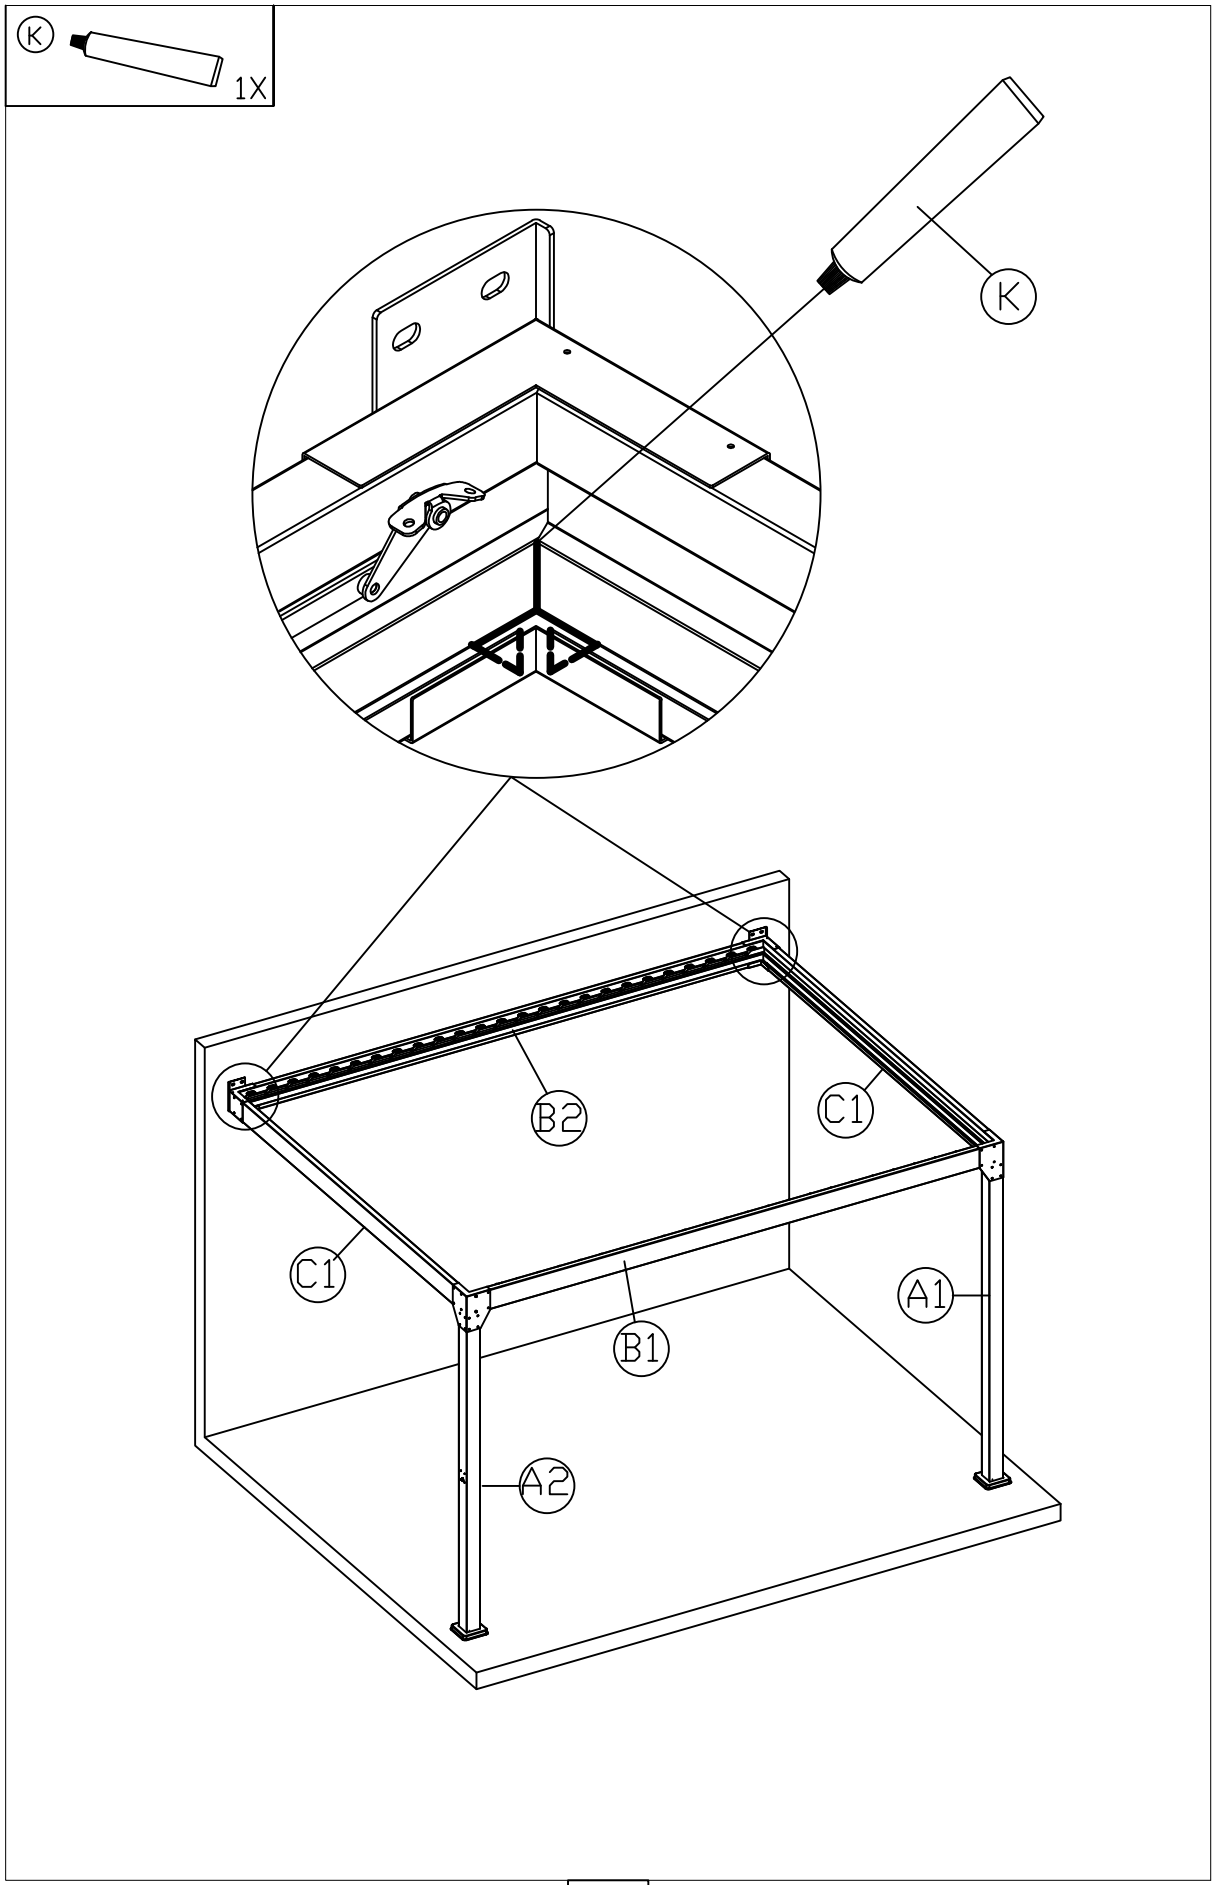


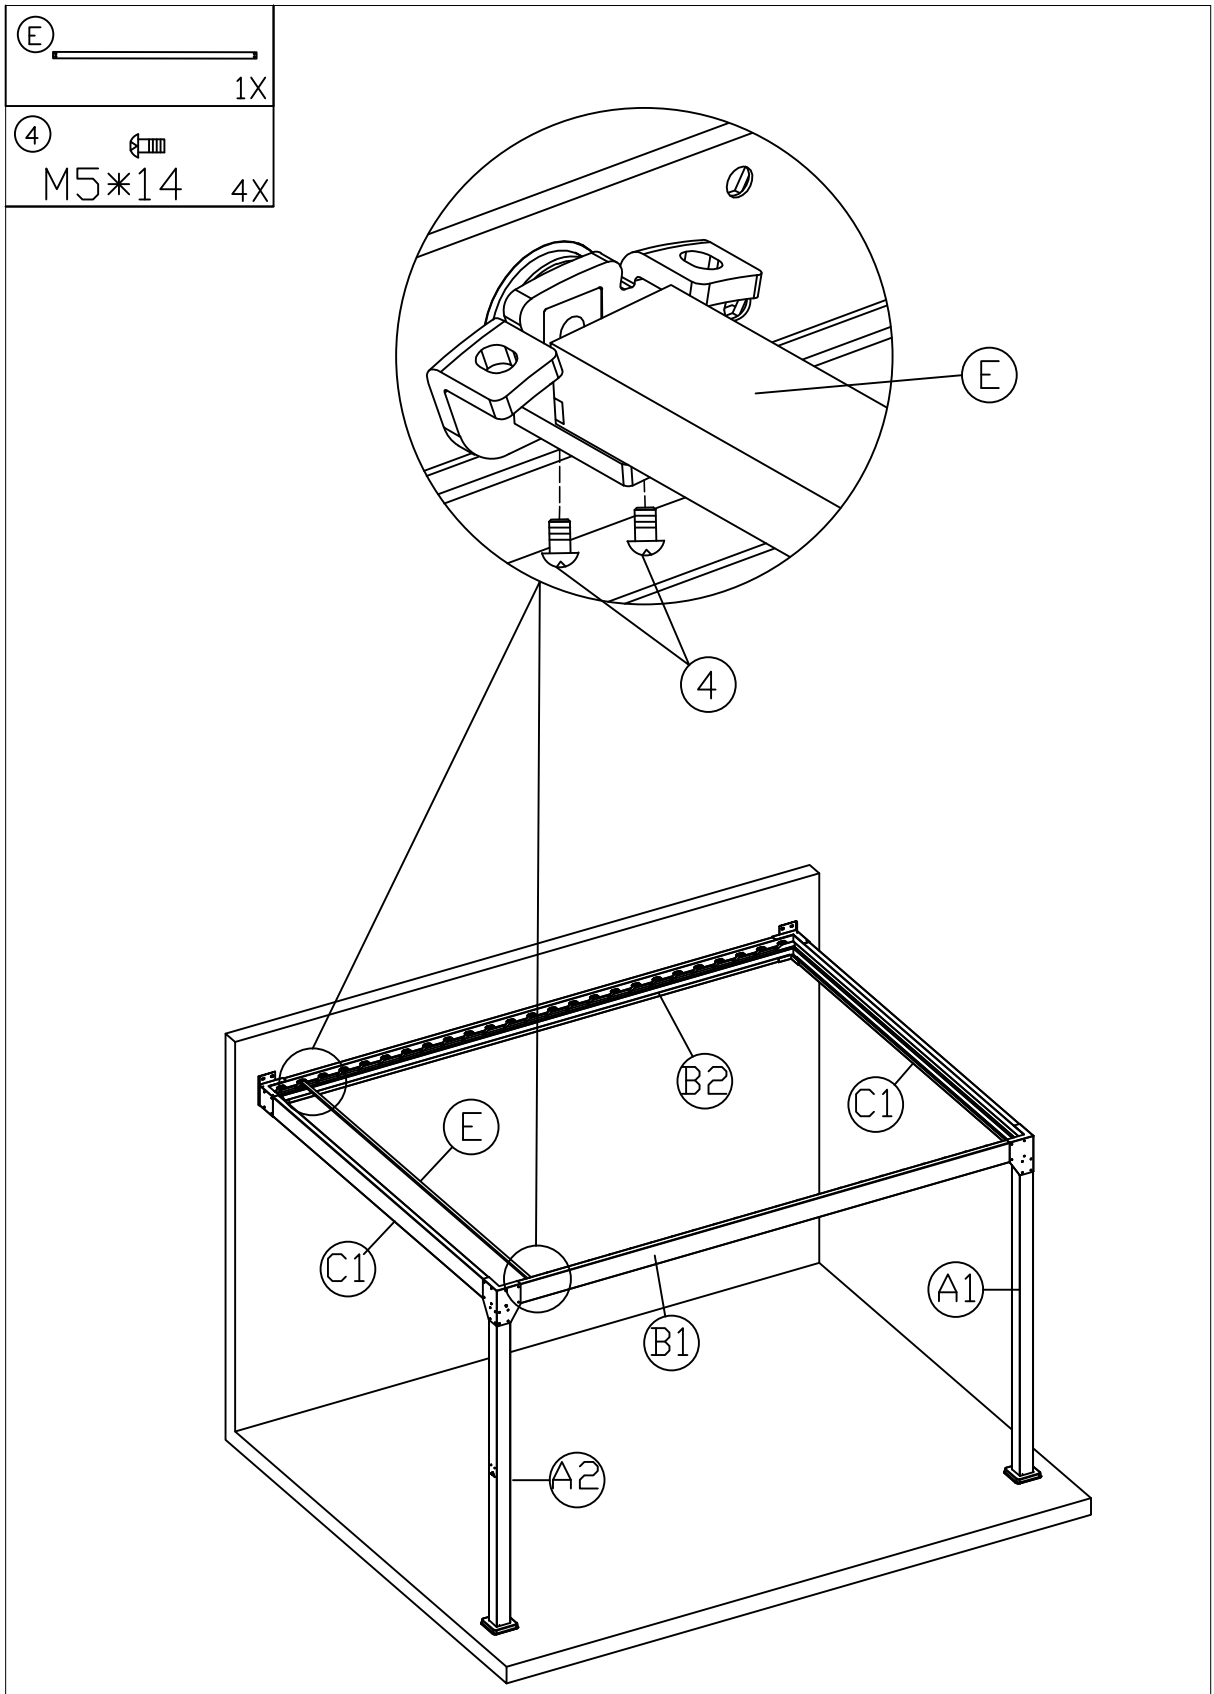
1

2

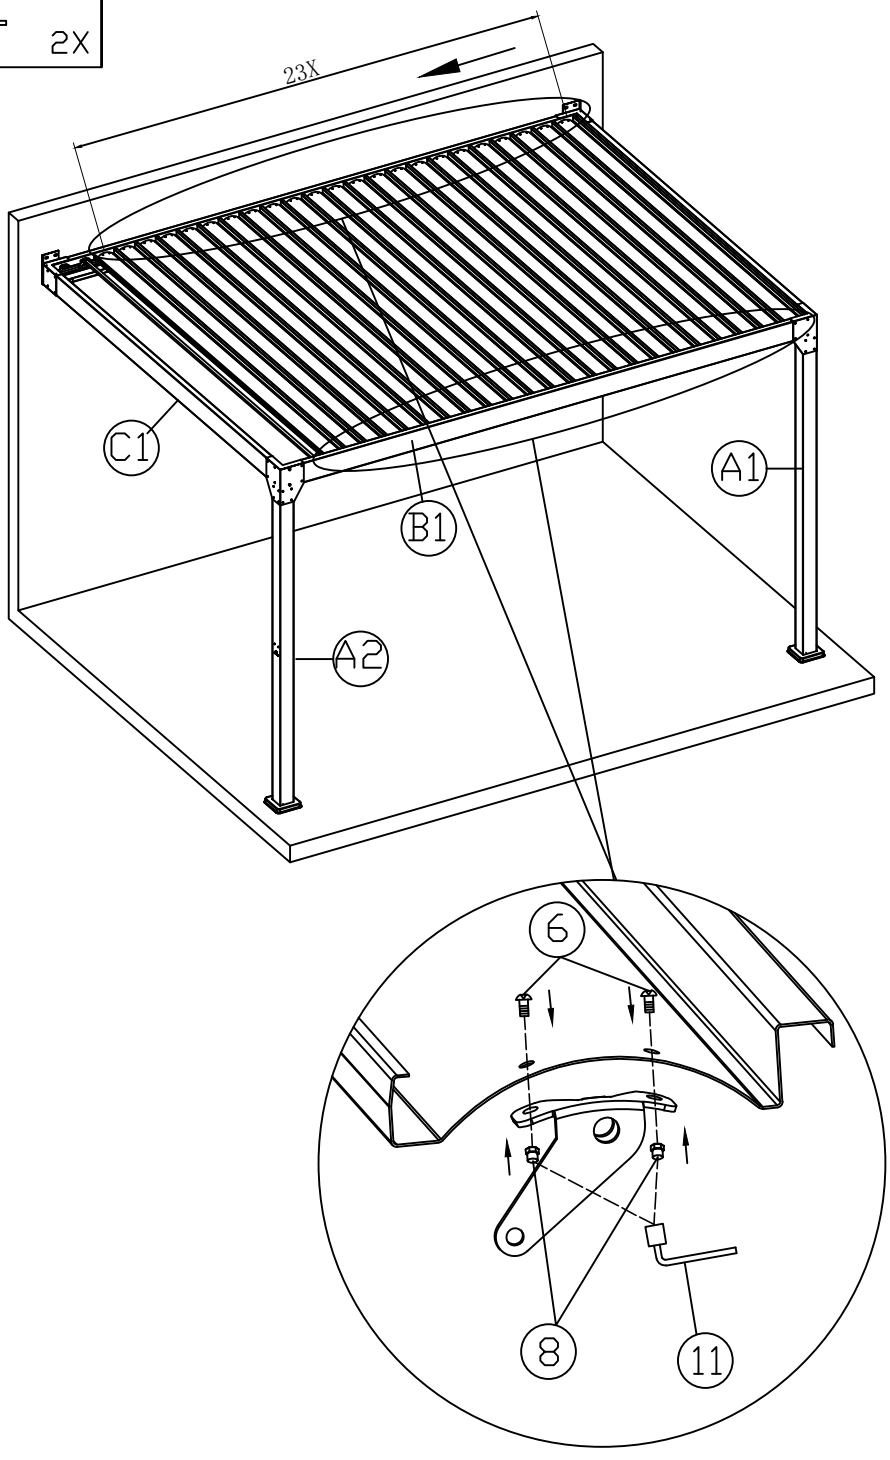


⑬

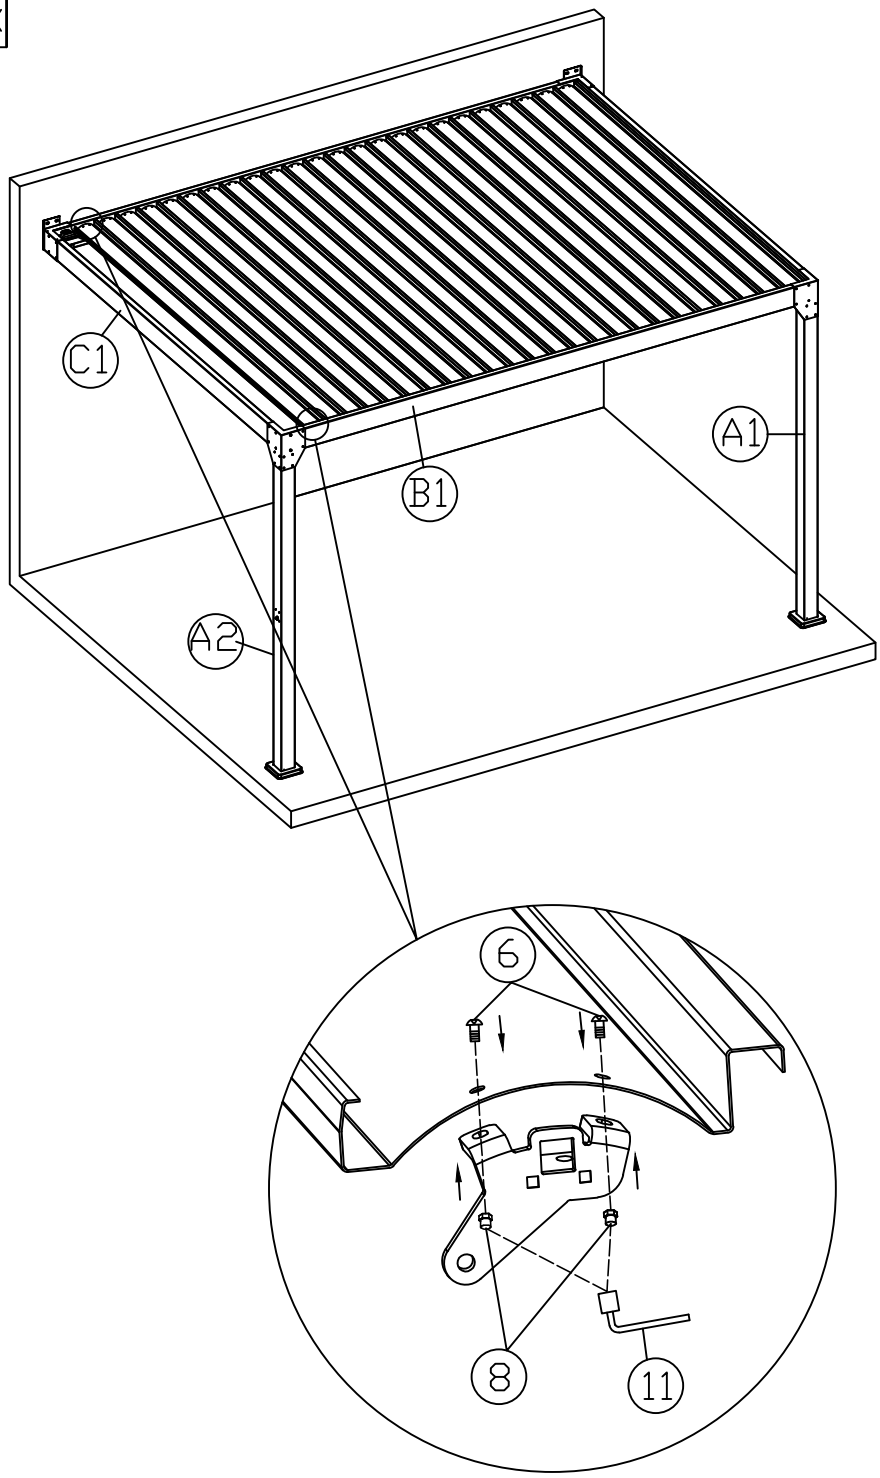

K
1X
K
B2
C1
C1
A1
B1
A2


E
1X
4
M5*14
4X
E
4
B2
C1
E
C1
A1
B1
A2

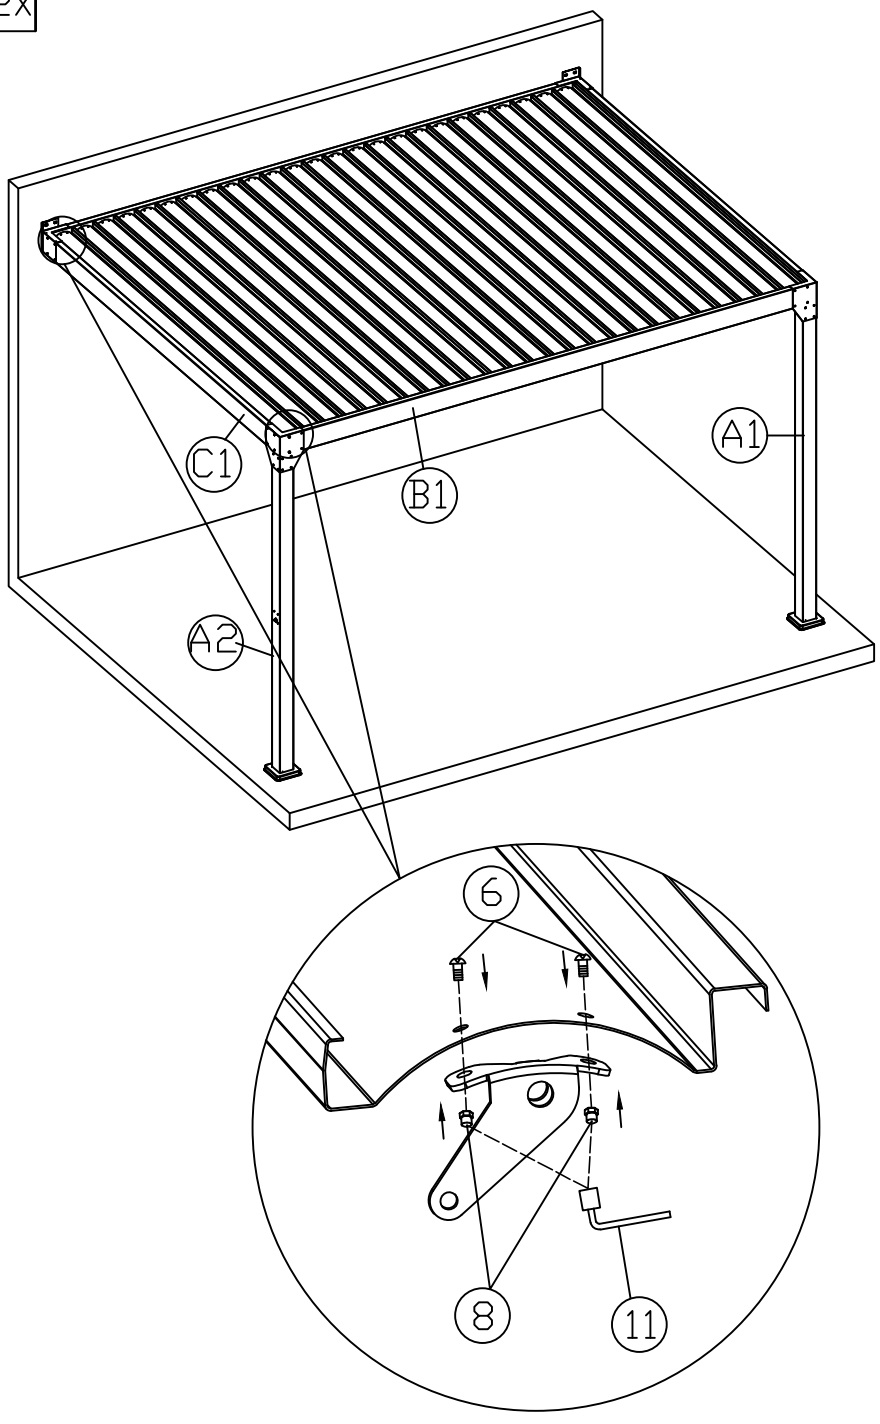
ⓓ	23X
⑥ M5*8	92X
⑧ M5	92X
⑪	2X

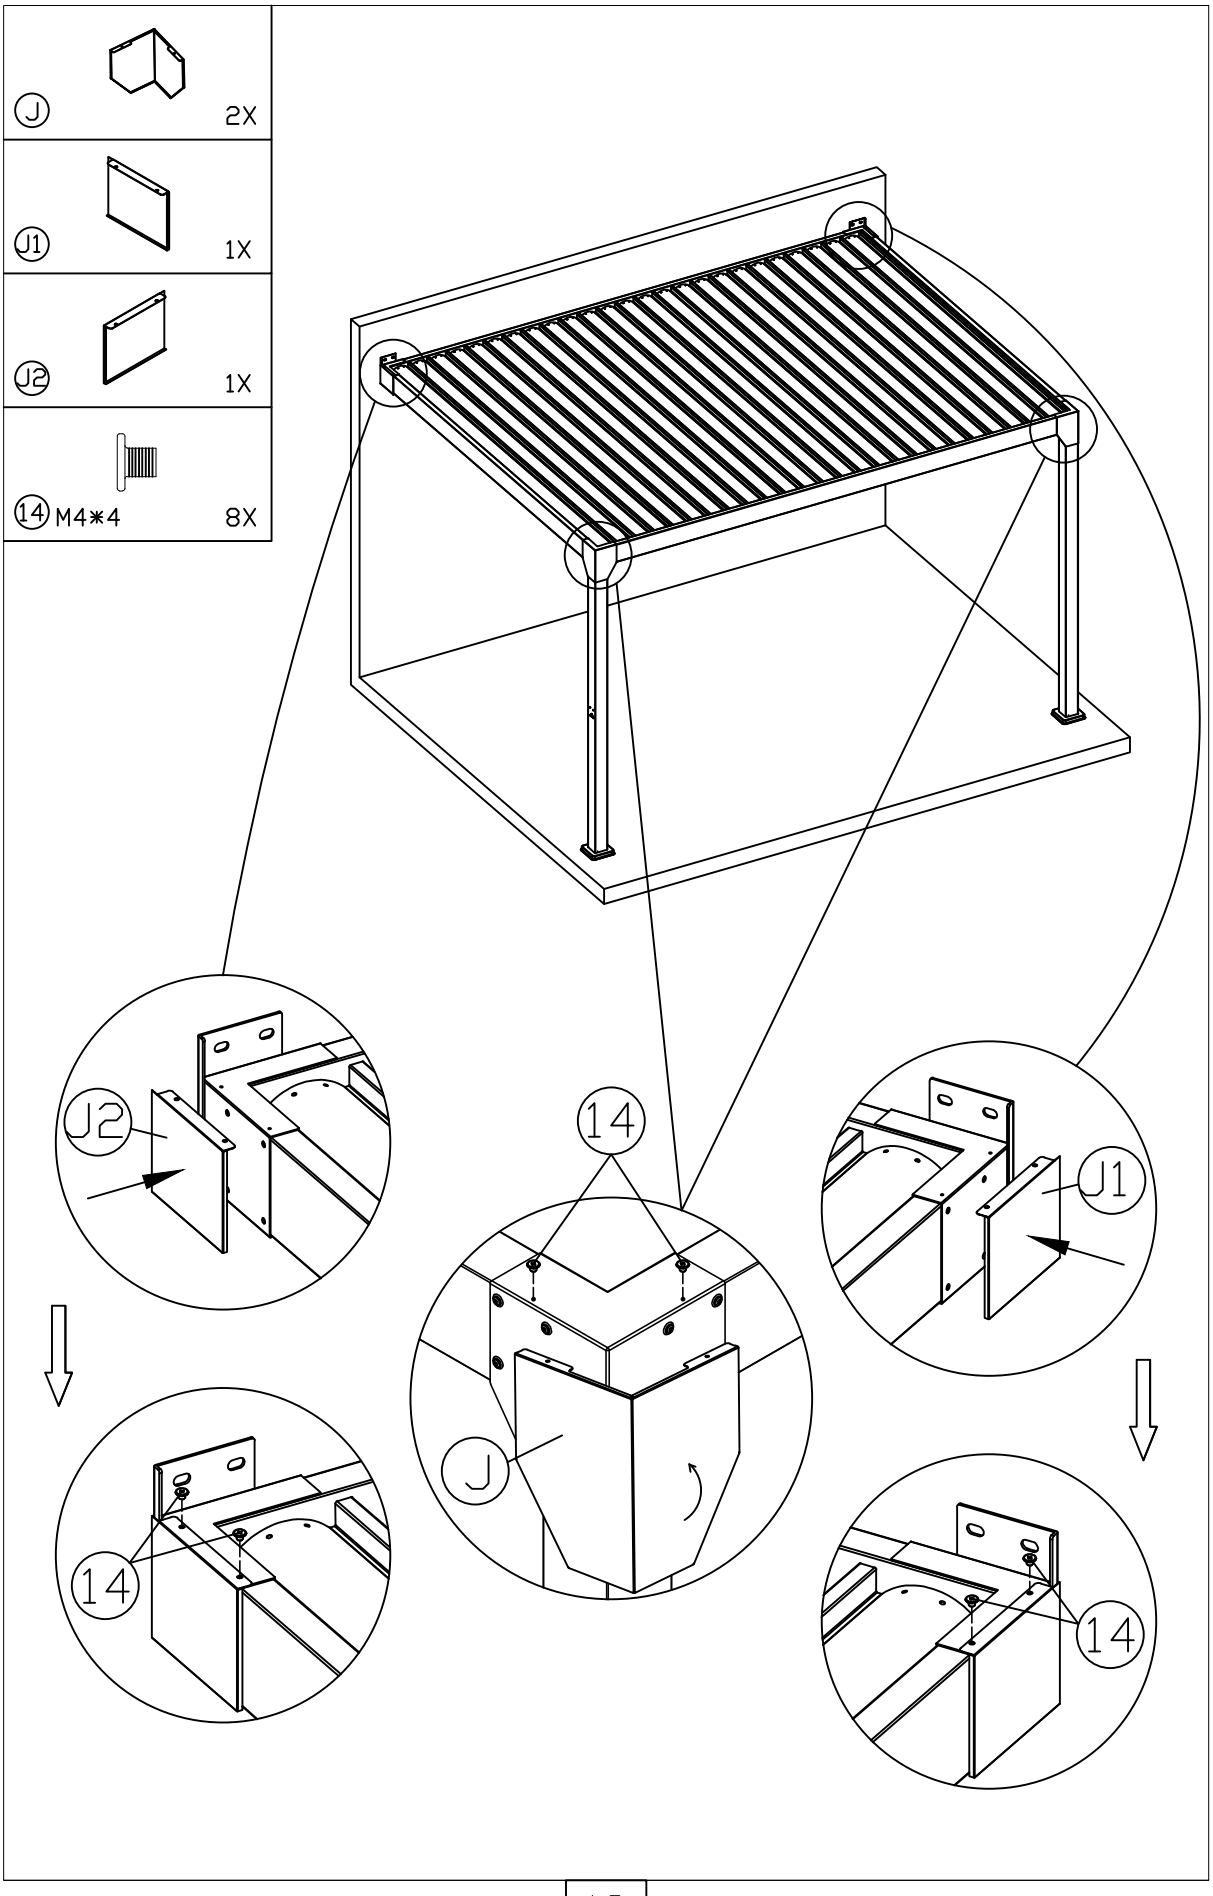


ⓓ	1X
⑤ M5*10	4X
⑧ M5	4X
⑪	2X



ⓓ	1X
⑥ M5*8	4X
⑧ M5	4X
⑪	2X




J
2X
J1
1X
J2
1X
14 M4*4
8X
J2
14
J1
J
14
14

USAGE INSTRUCTIONS

1. Facing the handle, rotate clockwise to close the top louvers ;
2. Facing the handle, rotate counterclockwise to open the top louvers.

